

BRS

Building Rectification Services

Window Replacement		Concrete Repair		Facade Refurbishment		Waterproofing Solutions		Balustrade Replacement		Podium Refurbishment
-----------------------	--	--------------------	--	-------------------------	--	----------------------------	--	---------------------------	--	-------------------------

“ Building Rectification Services (Est 1985), is a product of a firm commitment to exceeding our customers’ expectations. ”

Offering a complete turnkey solution to building Rectification/Refurbishment, BRS can organise everything from planning and specifying, engineering, project management, trades services

Survey – 13312

19th February 2021

Attn: Anne Mikita
BC Representative

Body Corporate for The Sands
40 Esplanade, Surfers Paradise

P – 0418 447 766
E – anne.makita@datacom.com.au

Building Survey The Sands – 40 Esplanade, Surfers Paradise

As requested, we hereby submit our Building Façade Observational Survey carried out via Abseil on 13th -21st July 2020, the above Building as requested.

Building Rectification Services has been established since September 1985. During this period, we have developed and acquired specialised skills and equipment setting the benchmark in the Remedial Building Industry

Our focus is to deliver High Quality Services and Standards of Workmanship, using the best suited materials with long term and economical solutions. To ensure our High Quality, we continue to develop our Staff with regular training and updating, attend product information seminars and trade days to maintain our knowledge in the ever changing and developing Industry, all guaranteeing BRS is at the forefront



Drop Plan



Repair Schedule Totals

Drop	Concrete Litre	Balcony Floor Litre	Render Litre	Rust Ea	Paint Defect M2	Crack LM	Window Caulking LM	Joint Caulking LM	Rusty Fixing Ea
A	75	0	104	9	0.01	0.00	0	0	0
B1 B2 B3 B4	1548	1141	0	67	24.34	0.60	0	0	5
C	1273.645	0	32	31	11.43	5	0	0	3
D	126.15	0	4.6	4	0.08	3	0	0	0
D-E	77.275	0	0	0	0	0	0	0	0
E	128.175	0	11.25	1	0.5314	1.2	0	2.2	0
F	156.885	0	28.9	0	1.008	0	0	0	0
G	358.965	0	6.6	5	46.78	0	0	0	0
G-H	13.5	0	0	0	0	0	0	0	0
H	60.925	0	4.7	4	0.135	0	0	0	0
I	33.6	0	0	18	0.00152	0	0	0	0
J	363.075	0	118.2	29	7.3075	7.6	0	0	0
K	51	0	16.1	0	0.34	0	0	0	0
L	5.7	0	282.4	0	0	0	0	0	0
M	90.975	0	347.45	0	1.8	11.2	0	0	0.156
N	0	0	48.2	0	0	2	0	0	0
O	8.25	0	9.775	2	0.1675	2.3	0	0	0
P	3	0	15.65	2	0.265	0.2	0	0	0
Q	36.3	0	45.4	1	0.235	0.2	0	0	0
R	18.6	0	1	1	0.02	0	0	0	0
S	48.9	0	49.15	0	0.1	0	0	0	0
T	7.2	0	21.45	0	0.12	0.2	0	0	0
U	5.7	0	45.6	4	0.07	0	0	0	0
V	6.45	0	16.2	0	0.1325	0	0	0	0
X	15.45	71.1	36.6	5	0.35	0	0	0	95
Y	0	0	18.6	0	0	0	0	0	0
C Stairs	640.78	0	102.9	31	72.5	4.9	4.9	0	0
Elevator	34.35	0	12.8	15	0.81	15	0	0	0
Front Wall	76.8	0	0	0	0	2	0	0	0
Ground	775	0	13	13	13	11.2	0	0	0
M Stair	105.075	0	196	2	9.89	0	0	0	0
Orchid Stair	7.2	0	22.2	0	0	0	0	0	0
Pool Area	171.5	0	82.6	6	15	5.4	0	0	0
Roof	0	0	14.8	5	0.13	0	0	0	0
Street Wall East	4.8	0	14	0	0.2	1.6	0	0	0
Under Pool	974.1	0	66	75	12.595	0	0	0	0
	7302.568	1212	1804.35	246	218.86852	73.6	4.9	2.2	103.156

Drop A – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D	L		L	W					
1	A	Lift Tower	Wall	Concrete Repair	6000	200	30															
2	A	Lift Tower	Wall	Paint Defect												100	100					
3	A	Lift Tower	Wall	Rust Spots											8							
4	A	Lift Tower	Wall	Concrete Repair	6000	110	30															
5	A	Lift Tower	Brick Wall	Missing Mortar	5000	2000																Brick Fretting
6	A	Roof	Slab Edge	Concrete Repair	1000	250	30															
7	A	8	Slab Edge	Rust Spots											1							
8	A	Roof	Slab Edge	Concrete Repair	800	280	30															
9	A	7	Brick Wall	Missing Mortar	5000	2400																Brick Fretting
10	A	10	Slab Edge	Drummy Render							1600	300	10									
11	A	6	Brick Wall	Missing Mortar	5000	2400																Brick Fretting
12	A	9	Slab Edge	Drummy Render							600	300	10									
13	A	6	Window	Rusty Lintel																		Window Lintel
14	A	8	Slab Edge	Drummy Render							6000	300	10									
15	A	6	Brick Wall	Missing Mortar	5000	2400																Brick Fretting
16	A	7	Slab Edge	Drummy Render							6000	300	10									Brick Fretting
17	A	5	Brick Wall	Missing Mortar	5000	2400																Brick Fretting
18	A	5	Slab Edge	Concrete Repair	900	100	30															
19	A	6	Slab Edge	Drummy Render							1400	300	10									
20	A	5	Slab Edge	Concrete Repair	600	100	30															
21	A	5	Slab Edge	Drummy Render							1000	300	10									
22	A	5	Window	Rusty Lintel																		
23	A	4	Slab Edge	Drummy Render							6000	300	10									
24	A	4	Window	Rusty Lintel																		
25	A	3	Slab Edge	Drummy Render							6000	300	10									
26	A	4	Brick Wall	Missing Mortar	5000	2400																Brick Fretting
27	A	3	Brick Wall	Missing Mortar	5000	2400																Brick Fretting
28	A	2	Slab Edge	Drummy Render							6000	300	10									
29	A	1	Brick Wall	Missing Mortar	5000	2400																
30	A	1	Window	Rusty Lintel																		

Drop A – Photo Schedule

Drop A Repair 1	Drop A Repair 2	Drop A Repair 3	Drop A Repair 4	Drop A Repair 5	Drop A Repair 6
Drop A Repair 7	Drop A Repair 8	Drop A Repair 9	Drop A Repair 10	Drop A Repair 11	Drop A Repair 12
Drop A Repair 13	Drop A Repair 14	Drop A Repair 15	Drop A Repair 16	Drop A Repair 17	Drop A Repair 18
Drop A Repair 19	Drop A Repair 20	Drop A Repair 21	Drop A Repair 22	Drop A Repair 23	Drop A Repair 24

Drop A – Photo Schedule

Drop A Repair 25 	Drop A Repair 26 	Drop A Repair 27 	Drop A Repair 28 	Drop A Repair 29 	Drop A Repair 30 
---	---	---	--	---	--

Drop B – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W		L	L			
1	B4	Roof	Slab Edge	Concrete Repair	2000	100	30																		
2	B4	Roof	Slab Edge	Concrete Repair	800	100	30																		
3	B4	9	Soffit	Rust Spot													3								
4	B4	9	Soffit	Concrete Repair x2	400	400	30																		x2
5	B4	Roof	Slab Edge	Concrete Repair	800	100	30																		
6	B4	Roof	Slab Edge	Concrete Repair	600	100	30																		
7	B4	9	Soffit	Concrete Repair	600	100	30																		
8	B4	9	Soffit	Concrete Repair	150	150	30																		
9	B4	Roof	Slab Edge	Concrete Repair	8000	100	30																		
10	B3	9	Soffit	Concrete Repair	200	100	30																		
11	B3	9	Soffit	Concrete Repair	100	100	30																		
12	B3	9	Soffit	Concrete Repair	100	100	30																		
13	B3	9	Soffit	Concrete Repair	200	200	30																		
14a	B2	9	Soffit	Concrete Repair	200	200	30																		
15a	B2	9	Soffit	Concrete Repair	160	160	30																		
16a	B2	9	Soffit	Rust Spot													4								
17	B2	9	Soffit	Concrete Repair	200	200	30																		
18	B2	9	Soffit	Paint Bubble														200	250						
19	B2	9	Soffit	Paint Bubble														1000	300						
20	B2	Roof	Slab Edge	Concrete Repair	6000	100	30																		
21	B1	9	Soffit	Paint Defect														2000	600						Window Linetx17
22	B1	9	Window/ Door	Rusted Linets x17																					
23	B1	9	Soffit	Rusty Fixings																				4	
24	B1	9	Brick Wall	Loose Bricks																					
25	B1	9	Soffit	Paint Defect														1000	1000						Brick Fretting
26	B1	9	Slab Edge	Concrete Repair	400	100	30																		
27	B1	9	Slab Edge	Concrete Repair	700	100	30																		
28	B1	9	Slab Edge	Paint Defect																					
29	B1	9	Slab Edge	Concrete Repair	2000	100	30											400	200						
30	B2	9	Slab Edge	Concrete Repair	300	120	30																		
31	B2	9	Slab Edge	Concrete Repair	600	100	30																		
32	B2	9	Slab Edge	Concrete Repair	1000	100	30																		
33	B2	9	Slab Edge	Concrete Repair	200	100	30																		
34	B2	9	Slab Edge	Concrete Repair	300	100	30																		
35	B3	9	Slab Edge	Concrete Repair	200	100	30																		
36	B3	9	Slab Edge	Concrete Repair	200	100	30																		
37	B3	9	Slab Edge	Concrete Repair	500	100	30																		
38	B3	9	Slab Edge	Concrete Repair	300	100	30																		
39a	B4	9	Slab Edge	Concrete Repair	800	100	30																		
40a	B4	9	Slab Edge	Concrete Repair	500	100	30																		
41b	B4	9	Slab Edge	Concrete Repair	600	100	30																		
42a	B4	9	Slab Edge	Concrete Repair	500	100	30																		
42b	B4	9	Column	Concrete Repair	200	200	30																		
43a	B4	9	Soffit	Concrete Repair	400	300	30																		
43b	B4	9	Column	Rust Spot													4								
44a	B4	9	Wall / Soffit	Rusty Coverings												2									

Drop B – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack		Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W	L					
46	B4	9	Soffit	Concrete Repair	400	120	30																		
47	B4	9	Soffit	Paint Repair														200	200						
48	B4	9	Soffit	Concrete Repair	100	100	30																		
49	B3	9	Soffit	Concrete Repair	300	300	30																		
50	B3	9	Soffit	Paint Repair														800	400						
51	B3	9	Soffit	Concrete Repair	200	120	30																		
52	B3	9	Soffit	Concrete Repair	200	400	30																		
53	B3	9	Soffit	Concrete Repair	400	200	30																		
54	B2	9	Soffit	Concrete Repair	350	350	30																		
55																									
56b	B2	9	Soffit	Paint Repair													4	600	600						
57	B2	9	Soffit	Concrete Repair	200	200	30																		
58	B2	9	Soffit	Concrete Repair	100	100	30																		
59	B2	9	Soffit	Paint Bubble														1000	1000						
59	B1	9	Soffit	Rust Spot													3								
60	B1	9	Soffit	Concrete Repair	300	300	30																		
61	B1	9	Soffit	Concrete Repair	200	100	30																		
62a	B1	9	Soffit	Paint Repair														2000	1000						
62b	B1	9	Soffit	Concrete Repair	300	100	30																		
63	B1	9	Soffit	Concrete Repair	300	100	30																		
64	B1	9	Soffit	Rust Spot													5								
65	B1	9	Soffit	Concrete Repair	280	200	30																		
66	B1	9	Soffit	Paint Repair														2000	1000						
67	B1	9	Soffit	Concrete Repair	450	250	30																		
68	B1	9	Soffit	Concrete Repair	400	300	30																		
69	B1	9	Soffit	Concrete Repair	200	200	30																		
70	B1	9	Slab Edge	Paint Repair														200	200						
71	B1	9	Slab Edge	Concrete Repair	400	100	30																		
72	B1	9	Slab Edge	Concrete Repair	1000	250	30																		
73	B1	9	Slab Edge	Concrete Repair	1400	250	30																		
74	B1	9	Slab Edge	Concrete Repair	300	250	30																		
75	B1	9	Slab Edge	Concrete Repair	2200	250	30																		
76	B1	9	Slab Edge	Concrete Repair	300	250	30																		
77	B1	9	Slab Edge	Concrete Repair	200	250	30																		
78	B1	9	Slab Edge	Concrete Repair	2200	250	30																		
79	B2	9	Slab Edge	Concrete Repair	2300	250	30																		
80	B2	9	Slab Edge	Concrete Repair	100	250	30																		
81	B3	9	Slab Edge	Concrete Repair	450	250	30																		
82	B3	9	Slab Edge	Concrete Repair	1800	250	30																		
83	B4	9	Slab Edge	Concrete Repair	3400	250	30																		
84	B4	8	Soffit	Rusty Fixings																				40M	
85	B4	8	Soffit	Paint Bubble														200	100						
86	B4	8	Soffit	Paint Bubble														150	120						
87	B4	8	Soffit	Rust Spot													2								
88	B4	8	Soffit	Paint Bubble														100	100						

Drop B – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack		Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D	L	W	D		L	W	L	L				
89	B4	8	Soffit	Concrete Repair	100	40	30																
90	B4	8	Soffit	Concrete Repair	200	200	30																
91	B3	8	Soffit	Paint Bubble													400	150					
92	B3	8	Soffit	Concrete Repair	500	100	30																
93	B3	8	Soffit	Paint Bubble													200	100					
94	B3	8	Soffit	Paint Bubble													400	400					
95	B3	8	Soffit	Concrete Repair	1000	400	30																
96	B3	8	Soffit	Rust Spot											4								
97	B3	8	Soffit	Concrete Repair	700	400	30																
98	B3	8	Soffit	Concrete Repair	400	300	30																
99	B3	8	Soffit	Concrete Repair	200	100	30																
100	B3	8	Soffit	Concrete Repair x 2	200	100	30																x2
101	B2	8	Soffit	Rust Spot											5								
102	B2	8	Soffit	Concrete Repair	300	300	30																
103	B1	8	Soffit	Paint Repair																			
104	B1	8	Soffit	Paint Repair													300	200					
105	B1	8	Soffit	Concrete Repair	1000	500	30										3000	1000					
106	B1	8	Soffit	Concrete Repair	600	400	30																
107	B1	8	Slab Edge	Concrete Repair	12000	200	30																
108	B2	8	Soffit	Concrete Repair	1200	200	30																
109	B2	8	Slab Edge	Concrete Repair	200	200	30																
110	B3	8	Slab Edge	Concrete Repair	3800	200	30																
111	B3	8	Slab Edge	Concrete Repair	3200	200	30																
112	B2	8	Slab Edge	Concrete Repair	2400	200	30																
113	B1	8	Slab Edge	Concrete Repair	2100	200	30																
114	B1	8	Slab Edge	Concrete Repair	1000	200	30																
115	B1	7	Soffit	Paint Repair													100	100					40m Rust Staining
116	B1	7	Soffit	Rust																			
117	B1	7	Soffit	Rust Spot											3								
118	B1	7	Soffit	Concrete Repair	50	50	30																
119	B1	7	Soffit	Concrete Repair	900	300	30																
120	B3	7	Soffit	Concrete Repair	800	700	30																
121	B3	7	Soffit	Concrete Repair	700	300	30																
122	B3	7	Soffit	Paint Bubble													100	100					
123	B2	8	Slab Edge	Concrete Repair	1100	700	30																
124	B2	7	Soffit	Concrete Repair	600	600	30																
124	B1	7	Soffit	Concrete Repair	10000	250	30																
125	B4	7	Soffit	Rust Spot											6								
126	B4	7	Soffit	Concrete Repair	200	200	30																
127	B4	7	Soffit	Concrete Repair	1200	1200	30																
128	B4	7	Soffit	Concrete Repair	1200	1200	30																
129																							
130	B2	7	Slab Edge	Concrete Repair	4000	250	30																
131	B2	7	Slab Edge	Concrete Repair	840	250	30																
132	B4	7	Soffit	Concrete Repair	1200	250	30																
133	B4	7	Slab Edge	Concrete Repair	200	250	30																

Drop B – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack		Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W	L	L				
134	B4	7	Slab Edge	Concrete Repair	300	250	30																		
135	B4	7	Slab Edge	Concrete Repair	1000	250	30																		
136	B4	6	Soffit	Rusty Fixings																				40M	
137	B3	6	Soffit	Paint Bubble														120	60						
138	B3	6	Soffit	Concrete Repair	400	150	30																		
139	B2	6	Soffit	Paint Bubble														150	40						
140	B2	6	Soffit	Rust Spot													3								
141	B2	6	Soffit	Concrete Repair	100	100	30																		
142	B1	6	Soffit	Paint Repair														70	70						
143	B1	6	Soffit	Rust Spots													8								
144	B1	6	Soffit	Concrete Repair	450	100	30																		
145	B1	6	Soffit	Paint Repair														200	200						
146	B1	6	Brick Wall	Corroded Bricks	800																				Brick fretting
147	B1	6	Soffit	Concrete Repair	3000	100	30																		
148	B1	6	Soffit	Concrete Repair	1000	600	30																		
149	B1	6	Soffit	Concrete Repair	600	500	30																		
150	B1	6	Slab Edge	Concrete Repair	100	100	30																		
151	B1	6	Slab Edge	Concrete Repair	900	150	30																		
152	B1	6	Slab Edge	Concrete Repair	1900	150	30																		
153	B1	6	Slab Edge	Paint Repair														200	100						
154	B1	6	Slab Edge	Concrete Repair	1400	200	30											1000	200						
155	B1	6	Slab Edge	Paint Repair																					
156	B1	6	Slab Edge	Concrete Repair	200	200	30																		
157	B2	6	Slab Edge	Concrete Repair	200	200	30																		
158	B2	6	Slab Edge	Concrete Repair	300	200	30																		
159	B2	6	Slab Edge	Concrete Repair	1400	200	30																		
160	B3	6	Slab Edge	Concrete Repair	600	200	30																		
161	B3	6	Slab Edge	Concrete Repair	300	200	30																		
162	B3	6	Slab Edge	Concrete Repair	300	200	30																		
163	B4	6	Slab Edge	Concrete Repair	300	200	30																		
164	B4	6	Slab Edge	Concrete Repair	1800	200	30																		
165	B4	6	Slab Edge	Concrete Repair	600	200	30																		
166	B4	5	Wall / Soffit	Rusty Coverings																				40M	
167	B4	5	Soffit	Concrete Repair	100	100	30																		
168	B4	5	Soffit	Concrete Repair	300	100	30																		
169	B4	5	Soffit	Concrete Repair	250	250	30																		
170	B4	5	Soffit	Concrete Repair	1300	300	30																		
171	B4	5	Soffit	Rust Spot													1								
172	B2	5	Soffit	Paint Repair														400	300						
173	B1	5	Soffit	Rust Spot													1								
174	B1	5	Soffit	Paint Repair														200	200						
175	B1	5	Soffit	Paint Repair														3000	1000						
176	B1	5	Soffit	Concrete Repair	600	300	30																		
177	B1	5	Soffit	Concrete Repair	1200	1000	30																		
178	B1	5	Slab Edge	Concrete Repair	1000	250	30																		
179	B1	5	Slab Edge	Concrete Repair	3000	250	30																		

Drop B – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack		Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L				
180	B1	5	Slab Edge	Concrete Repair	1000	250	30															
181	B1	5	Slab Edge	Concrete Repair	300	250	30															
182	B2	5	Slab Edge	Concrete Repair	3000	250	30															
183	B2	5	Slab Edge	Concrete Repair	400	250	30															
184	B2	5	Slab Edge	Paint Bubble																		
185	B2	5	Slab Edge	Concrete Repair	1200	250	30								600	250						
186	B3	5	Slab Edge	Concrete Repair	1400	250	30															
187	B3	5	Slab Edge	Concrete Repair	300	250	30															
188	B4	5	Slab Edge	Concrete Repair	400	250	30															
189	B4	5	Slab Edge	Concrete Repair	100	250	30															
190	B4	5	Slab Edge	Concrete Repair	1000	250	30															
191	B4	5	Slab Edge	Concrete Repair	100	250	30															
192	B4	4	Soffit	Concrete Repair																		
192	B4	4	Soffit	Rusty Fixings																	25M	
193	B4	4	Soffit	Rust Spot										1								
194	B4	4	Soffit	Paint Bubble											200	100						
195	B3	4	Soffit	Paint Bubble											2000	40						
196	B3	4	Soffit	Paint Bubble											60	60						
197	B3	4	Soffit	Paint Bubble											60	60						
198	B3	4	Soffit	Paint Bubble											500	400						
199	B3	4	Soffit	Concrete Repair	300	100	30															
200	B1	4	Soffit	Paint Repair											800	800						
201	B1	4	Soffit	Paint Repair											1500	1000						
202	B1	4	Soffit	Rust Spot										2								
203	B1	4	Soffit	Paint Repair											1100	600						
204	B1	4	Soffit	Concrete Repair	1000	500	30															
205	B1	4	Soffit	Concrete Repair	300	300	30															
206	B1	4	Slab Edge	Concrete Repair	300	300	30															
207	B1	4	Slab Edge	Concrete Repair	3400	200	30															
208	B1	4	Slab Edge	Concrete Repair	1300	100	30															
209	B2	4	Slab Edge	Concrete Repair	300	100	30															
210	B2	4	Slab Edge	Concrete Repair	300	100	30															
211	B2	4	Slab Edge	Concrete Repair	1100	200	30															
212	B2	4	Slab Edge	Concrete Repair	300	200	30															
213	B2	4	Slab Edge	Concrete Repair	400	200	30															
214	B3	4	Slab Edge	Concrete Repair	1400	200	30															
215	B3	4	Slab Edge	Concrete Repair	600	100	30															
216	B3	4	Slab Edge	Concrete Repair	300	100	30															
217	B4	4	Slab Edge	Concrete Repair	4400	200	30															
	B4	3	Soffit	Rusty Cover / Concrete Repair	200	200	30															
218	B4	3	Soffit	Paint Bubble											400	400						
219	B4	3	Soffit	Paint Bubble x2											40	20						
220	B3	3	Soffit	Rust Spot										3								
222	B3	3	Soffit	Paint Bubble											300	300						
223	B3	3	Soffit	Concrete Repair	300	200	30															
224	B3	3	Soffit	Concrete Repair	400	100	30															

Drop B – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack		Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W	L		L				
225	B2	3	Soffit	Concrete Repair	100	100	30																			
226	B2	3	Soffit	Concrete Repair	200	200	30																			
227	B2	3	Soffit	Concrete Repair	100	100	30																			
228	B2	3	Soffit	Paint Bubble														100	50							
229	B1	3	Soffit	Paint Repair														50	50							
230	B1	3	Soffit	Paint Repair														600	150							
231	B1	3	Soffit	Paint Repair														1800	1000							
232	B1	3	Soffit	Concrete Repair	1200	600	30																			
233	B1	3	Slab Edge	Concrete Repair	200	200	30																			
234	B1	3	Slab Edge	Concrete Repair	2100	200	30																			
235	B1	3	Slab Edge	Concrete Repair	2400	200	30																			
236	B1	3	Slab Edge	Concrete Repair	1500	200	30																			
237	B1	3	Slab Edge	Concrete Repair	400	200	30																			
238	B1	3	Slab Edge	Concrete Repair	200	200	30																			
239	B2	3	Slab Edge	Concrete Repair	500	200	30																			
240	B2	3	Slab Edge	Concrete Repair	200	200	30																			
241	B2	3	Slab Edge	Concrete Repair	400	200	30																			
242	B3	3	Slab Edge	Concrete Repair	3000	200	30																			
243	B4	3	Slab Edge	Concrete Repair	1800	200	30																			
244	B4	3	Slab Edge	Concrete Repair	2200	200	30																			
245	B4	3	Slab Edge	Concrete Repair	600	200	30																			
246	B4	2	Soffit	Paint Bubble														100	100							
247	B4	2	Soffit	Paint Bubble														50	50							
248	B4	2	Soffit	Paint Bubble														50	50							
249	B3	2	Soffit	Concrete Repair	250	100	30																			
250	B3	2	Soffit	Concrete Repair	150	150	30																			
251	B3	2	Soffit	Paint Bubble														250	200							
252	B3	2	Soffit	Concrete Repair	100	100	30																			
253	B3	2	Soffit	Concrete Repair	400	100	30																			
254	B1	2	Soffit	Concrete Repair	1300	300	30																			
255	B1	2	Soffit	Concrete Repair	200	200	30																			
256	B1	2	Soffit	Concrete Repair	300	100	30																			
257	B1	2	Soffit	Concrete Repair	250	250	30																			
258	B1	2	Soffit	Paint Repair														1400	1000							
259	B1	2	Soffit	Concrete Repair	300	300	30																			
260	B1	2	Soffit	Concrete Repair	800	400	30																			
261	B1	2	Soffit	Concrete Repair	200	200	30																			
262	B1	2	Soffit	Concrete Repair	300	200	30																			
263	B1	2	Soffit	Concrete Repair / Rust Spot	300	150	30										2									
264	B1	2	Soffit	Concrete Repair	300	300	30																		1	
265	B1	2	Slab Edge	Concrete Repair	200	100	30																			
266	B1	2	Slab Edge	Concrete Repair	1900	200	30																			
267	B1	2	Slab Edge	Concrete Repair	4200	200	30																			
268	B2	3	Slab Edge	Concrete Repair	8400	200	30																			
269	B3	2	Slab Edge	Concrete Repair	2400	200	30																			

Drop B – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack		Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L				
270	B2	2	Slab Edge	Concrete Repair	200	200	30															
271	B2	2	Slab Edge	Concrete Repair	600	200	30															
272	B4	2	Slab Edge	Concrete Repair	3000	200	30															
273	B4	2	Slab Edge	Concrete Repair	2300	200	30															
274	B4	1	Soffit	Rusty Fixings																	7M	
275	B4	1	Soffit	Concrete Repair	400	70	30															
276	B2	1	Soffit	Paint Bubble											300	120						
277	B2	1	Soffit	Concrete Repair	900	300	30															
278	B2	1	Soffit	Concrete Repair	200	200	30															
279	B2	1	Soffit	Paint Repair											400	100						
280	B2	1	Soffit	Concrete Repair	400	250	30															
281	B1	1	Soffit	Concrete Repair	1000	300	30															
282	B1	1	Soffit	Rust Spot										1								
283	B1	1	Soffit	Concrete Repair	800	400	30															
284	B1	1	Soffit	Concrete Repair	300	200	30															
285	B1	1	Soffit	Concrete Repair	400	400	30															
286	B1	1	Soffit	Paint Repair											2000	1000						
287	B1	1	Slab Edge	Paint Repair											1000	200						
288	B1	1	Slab Edge	Crack													300					
289	B1	1	Slab Edge	Crack													300					
290	B1	1	Slab Edge	Concrete Repair	5000	250	30															
291	B2	1	Slab Edge	Concrete Repair	1200	250	30															
292	B2 / 3	1	Slab Edge	Concrete Repair	5000	250	30															
293	B3	1	Slab Edge	Concrete Repair	1200	250	30															
294	B4	1	Slab Edge	Concrete Repair	1400	250	30															
295	B4	10	Balcony Floor	Drummy Render				300	300	10												
296	B4	10	Balcony Floor	Drummy Render				600	300	10												
297	B4	10	Balcony Floor	Drummy Render				1000	200	10												
298	B3	10	Balcony Floor	Drummy Render				1000	40	10												
299	B1	10	Balcony Floor	Drummy Render				800	500	10												
300	B1	9	Balcony Floor	Drummy Render				300	300	10												
301	B1	9	Balcony Floor	Drummy Render				600	300	10												
302	B1	9	Balcony Floor	Drummy Render				2000	300	10												
303	B4	9	Balcony Floor	Drummy Render				200	200	10												
304	B4	9	Balcony Floor	Drummy Render				200	200	10												
305	B2	8	Balcony Floor	Drummy Render				600	600	10												
306	B2	8	Balcony Floor	Drummy Render				1000	600	10												
307	B1	8	Balcony Floor	Drummy Render				100	100	10												
308	B2	8	Balcony Floor	Drummy Render				400	400	10												
309	B4	8	Balcony Floor	Drummy Render				100	100	10												
310	B4	6	Balcony Floor	Drummy Render				100	100	10												
311	B4	6	Balcony Floor	Drummy Render				1000	1000	10												
312	B3	6	Balcony Floor	Drummy Render				2000	1000	10												
313	B2	6	Balcony Floor	Drummy Render				1200	600	10												
314	B1	6	Balcony Floor	Drummy Render				1200	600	10												
315	B1	5	Balcony Floor	Drummy Render				500	500	10												

Drop B – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack		Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L				
316	B1	5	Balcony Floor	Drummy Render				900	600	10												
317	B1	5	Balcony Floor	Drummy Render				300	200	10												
318	B1	5	Balcony Floor	Drummy Render				1000	600	10												
319	B2	5	Balcony Floor	Drummy Render				3000	1000	10												
320	B2	5	Balcony Floor	Drummy Render				1400	400	10												
321	B2	5	Balcony Floor	Drummy Render				800	400	10												
322	B3	5	Balcony Floor	Drummy Render				900	600	10												
323	B3	5	Balcony Floor	Drummy Render				600	300	10												
324	B3	5	Balcony Floor	Drummy Render				1000	600	10												
325	B3	5	Balcony Floor	Drummy Render				1400	1000	10												
326	B4	5	Balcony Floor	Drummy Render				1000	600	10												
327	B4	5	Balcony Floor	Drummy Render				600	300	10												
328	B4	5	Balcony Floor	Drummy Render				300	300	10												
329	B4	4	Balcony Floor	Drummy Render				500	300	10												
330	B4	4	Balcony Floor	Drummy Render				2000	200	10												
331	B4	4	Balcony Floor	Concrete Repair				2000	1000	30												
332	B3	4	Balcony Floor	Concrete Repair				800	400	30												
333	B3	4	Balcony Floor	Concrete Repair				1000	500	30												
334	B3	4	Balcony Floor	Concrete Repair				600	400	30												
335	B3	4	Balcony Floor	Concrete Repair				1000	400	30												
336	B3	4	Balcony Floor	Concrete Repair				600	400	30												
337	B2	4	Balcony Floor	Concrete Repair				500	400	30												
338	B2	4	Balcony Floor	Concrete Repair				1000	800	30												
339	B2	4	Balcony Floor	Concrete Repair				400	400	30												
340	B2	4	Balcony Floor	Concrete Repair				2000	800	30												
341	B2	4	Balcony Floor	Concrete Repair				2000	1000	30												
342	B1	4	Balcony Floor	Concrete Repair				600	400	30												
343	B1	4	Balcony Floor	Concrete Repair				1000	800	30												
344	B1	3	Balcony Floor	Concrete Repair				400	400	30												
345	B2	3	Balcony Floor	Concrete Repair				1000	400	30												
346	B3	3	Balcony Floor	Concrete Repair				600	400	30												
347	B4	3	Balcony Floor	Concrete Repair				500	200	30												
348	B4	3	Balcony Floor	Concrete Repair				700	300	30												
349	B4	2	Balcony Floor	Drummy Render				700	500	30												
350	B3	2	Balcony Floor	Concrete Repair				1000	500	30												
351	B2	2	Balcony Floor	Concrete Repair				1800	1000	30												
352	B1	2	Balcony Floor	Concrete Repair				800	400	30												
353	B1	1	Balcony Floor	Concrete Repair				1000	1000	30												
354	B1	1	Balcony Floor	Concrete Repair				7200	1000	30												
355	B2	1	Balcony Floor	Concrete Repair				7200	1000	30												
356	B3	1	Balcony Floor	Concrete Repair				3000	1000	30												
357	B4	1	Balcony Floor	Drummy Render				1000	1000	10												
358	B4	1	Balcony Floor	Drummy Render				1000	500	10												

Drop B – Photo Schedule

Drop B1 Repair 21		Drop B1 Repair 22		Drop B1 Repair 23		Drop B1 Repair 24		Drop B1 Repair 25		Drop B1 Repair 26	
Drop B1 Repair 27		Drop B1 Repair 28		Drop B1 Repair 29		Drop B1 Repair 59		Drop B1 Repair 60		Drop B1 Repair 61	
Drop B1 Repair 62A		Drop B1 Repair 62B		Drop B1 Repair 63		Drop B1 Repair 64		Drop B1 Repair 65		Drop B1 Repair 66	
Drop B1 Repair 67		Drop B1 Repair – 68		Drop B1 Repair 69		Drop B1 Repair 70		Drop B1 Repair 71		Drop B1 Repair 72	
Drop B1 Repair 73		Drop B1 Repair 74		Drop B1 Repair 75		Drop B1 Repair 76		Drop B1 Repair 77		Drop B1 Repair 78	

Drop B – Photo Schedule

Drop B1 Repair 103		Drop B1 Repair 104		Drop B1 Repair 105		Drop B1 Repair 106		Drop B1 Repair 107		Drop B1 Repair 113	
Drop B1 Repair 114		Drop B1 Repair 115		Drop B1 Repair 116		Drop B1 Repair 117		Drop B1 Repair 118		Drop B1 Repair 119	
Drop B1 Repair 124		Drop B1 Repair 142		Drop B1 Repair 143		Drop B1 Repair 144		Drop B1 Repair 145		Drop B1 Repair 146	
Drop B1 Repair 147		Drop B1 Repair 148		Drop B1 Repair 149		Drop B1 Repair 150		Drop B1 Repair 151		Drop B1 Repair 152	
Drop B1 Repair 153		Drop B1 Repair 154		Drop B1 Repair 155		Drop B1 Repair 156		Drop B1 Repair 173		Drop B1 Repair 174	

Drop B – Photo Schedule

Drop B1 Repair 175		Drop B1 Repair 176		Drop B1 Repair 177		Drop B1 Repair 178		Drop B1 Repair 179		Drop B1 Repair 180	
Drop B1 Repair 181		Drop B1 Repair 200		Drop B1 Repair 201		Drop B1 Repair 202		Drop B1 Repair 203		Drop B1 Repair 204	
Drop B1 Repair 205		Drop B1 Repair 206		Drop B1 Repair 207		Drop B1 Repair 208		Drop B1 Repair 229		Drop B1 Repair 330	
Drop B1 Repair 231		Drop B1 Repair 232		Drop B1 Repair 233		Drop B1 Repair 234		Drop B1 Repair 235		Drop B1 Repair 236	
Drop B1 Repair 237		Drop B1 Repair 238		Drop B1 Repair 254		Drop B1 Repair 255		Drop B1 Repair 256		Drop B1 Repair 257	

Drop B – Photo Schedule

Drop B1 Repair 258		Drop B1 Repair 259		Drop B1 Repair 260		Drop B1 Repair 261		Drop B1 Repair 262		Drop B1 Repair 263	
Drop B1 Repair 264		Drop B1 Repair 265		Drop B1 Repair 266		Drop B1 Repair 267		Drop B1 Repair 281		Drop B1 Repair 282	
Drop B1 Repair 283		Drop B1 Repair 284		Drop B1 Repair 285		Drop B1 Repair 286		Drop B1 Repair 287		Drop B1 Repair 288	
Drop B1 Repair 289		Drop B1 Repair 290		Drop B1 Repair 299		Drop B1 Repair 300		Drop B1 Repair 301		Drop B1 Repair 302	
Drop B1 Repair 307		Drop B1 Repair 314		Drop B1 Repair 315		Drop B1 Repair 316		Drop B1 Repair 317		Drop B1 Repair 318	

Drop B – Photo Schedule

Drop B1 Repair 342		Drop B1 Repair 343		Drop B1 Repair 344		Drop B1 Repair 352		Drop B1 Repair 353		Drop B1 Repair 354	
Drop B2 Repair 292		Drop B2 Repair 14a		Drop B2 Repair 15a		Drop B2 Repair 16a		Drop B2 Repair 17		Drop B2 Repair 18	
Drop B2 Repair 19		Drop B2 Repair 20		Drop B2 Repair 21		Drop B2 Repair 30		Drop B2 Repair 31		Drop B2 Repair 32a	
Drop B2 Repair 32b		Drop B2 Repair 33		Drop B2 Repair 34		Drop B2 Repair 54		Drop B2 Repair 56a		Drop B2 Repair 56b	
Drop B2 Repair 57		Drop B2 Repair 58		Drop B2 Repair 59		Drop B2 Repair 79		Drop B2 Repair 80		Drop B2 Repair 101	

Drop B – Photo Schedule

Drop B2 Repair 102		Drop B2 Repair 108		Drop B2 Repair 109		Drop B2 Repair 112		Drop B2 Repair 123		Drop B2 Repair 124	
Drop B2 Repair 130		Drop B2 Repair 131		Drop B2 Repair 139		Drop B2 Repair 140		Drop B2 Repair 141		Drop B2 Repair 157	
Drop B2 Repair 158		Drop B2 Repair 159		Drop B2 Repair 172		Drop B2 Repair 182		Drop B2 Repair 183		Drop B2 Repair 184	
Drop B2 Repair 185		Drop B2 Repair 209		Drop B2 Repair 210		Drop B2 Repair 211		Drop B2 Repair 212		Drop B2 Repair 213	
Drop B2 Repair 225		Drop B2 Repair 226		Drop B2 Repair 227		Drop B2 Repair 228		Drop B2 Repair 239		Drop B2 Repair 240	

Drop B – Photo Schedule

Drop B2 Repair 241	Drop B2 Repair 268	Drop B2 Repair 270	Drop B2 Repair 271	Drop B2 Repair 276	Drop B2 Repair 277
Drop B2 Repair 278	Drop B2 Repair 279	Drop B2 Repair 280	Drop B2 Repair 291	Drop B2 Repair 305	Drop B2 Repair 306
Drop B2 Repair 308	Drop B2 Repair 313	Drop B2 Repair 319	Drop B2 Repair 320	Drop B2 Repair 321	Drop B2 Repair 337
Drop B2 Repair 338	Drop B2 Repair 339	Drop B2 Repair 340	Drop B2 Repair 341	Drop B2 Repair 345	Drop B2 Repair 351
Drop B2 Repair 355	Drop B2 – 3 Repair 292	Drop B3 Repair 10	Drop B3 Repair 11	Drop B3 Repair 12	Drop B3 Repair 13

Drop B – Photo Schedule

Drop B3 Repair 35		Drop B3 Repair 36		Drop B3 Repair 37		Drop B3 Repair 38		Drop B3 Repair 49		Drop B3 Repair 50	
Drop B3 Repair 51		Drop B3 Repair 52		Drop B3 Repair 53		Drop B3 Repair 81		Drop B3 Repair 82		Drop B3 Repair 91	
Drop B3 Repair 92		Drop B3 Repair 93		Drop B3 Repair 94		Drop B3 Repair 95		Drop B3 Repair 96		Drop B3 Repair 97	
Drop B3 Repair 98		Drop B3 Repair 99		Drop B3 Repair 100		Drop B3 Repair 110		Drop B3 Repair 111		Drop B3 Repair 120	
Drop B3 Repair 121		Drop B3 Repair 122		Drop B3 Repair 137		Drop B3 Repair 138		Drop B3 Repair 160		Drop B3 Repair 161	

Drop B – Photo Schedule

Drop B3 Repair 162		Drop B3 Repair 185		Drop B3 Repair 187		Drop B3 Repair 194		Drop B3 Repair 195		Drop B3 Repair 196	
Drop B3 Repair 197		Drop B3 Repair 198		Drop B3 Repair 199		Drop B3 Repair 214		Drop B3 Repair 215		Drop B3 Repair 216	
Drop B3 Repair 221		Drop B3 Repair 222		Drop B3 Repair 223		Drop B3 Repair 224		Drop B3 Repair 242		Drop B3 Repair 249	
Drop B3 Repair 250		Drop B3 Repair 251		Drop B3 Repair 252		Drop B3 Repair 253		Drop B3 Repair 269		Drop B3 Repair 293	
Drop B3 Repair 298		Drop B3 Repair 312		Drop B3 Repair 322		Drop B3 Repair 323		Drop B3 Repair 324		Drop B3 Repair 325	

Drop B – Photo Schedule

Drop B3 Repair 332		Drop B3 Repair 333		Drop B3 Repair 334		Drop B3 Repair 335		Drop B3 Repair 336		Drop B3 Repair 346	
Drop B3 Repair 350		Drop B3 Repair 356		Drop B4 Repair 1		Drop B4 Repair 2		Drop B4 Repair 3		Drop B4 Repair 4	
Drop B4 Repair 5		Drop B4 Repair 6		Drop B4 Repair 7		Drop B4 Repair 8		Drop B4 Repair 9a		Drop B4 Repair 9b	
Drop B4 Repair 39		Drop B4 Repair 39a		Drop B4 Repair 40		Drop B4 Repair 40a		Drop B4 Repair 41a		Drop B4 Repair 41b	
Drop B4 Repair 42a		Drop B4 Repair 42b		Drop B4 Repair 43a		Drop B4 Repair 43b		Drop B4 Repair 44		Drop B4 Repair 44a	

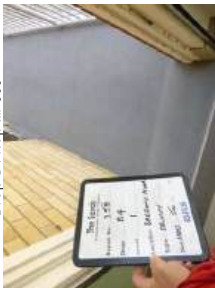
Drop B – Photo Schedule

Drop B4 Repair 46	Drop B4 Repair 47	Drop B4 Repair 48	Drop B4 Repair 83	Drop B4 Repair 84	Drop B4 Repair 85
Drop B4 Repair 86	Drop B4 Repair 87	Drop B4 Repair 88	Drop B4 Repair 89	Drop B4 Repair 90	Drop B4 Repair 125
Drop B4 Repair 125a	Drop B4 Repair 126	Drop B4 Repair 127	Drop B4 Repair 128	Drop B4 Repair 132	Drop B4 Repair 133
Drop B4 Repair 134	Drop B4 Repair 135	Drop B4 Repair 136	Drop B4 Repair 163	Drop B4 Repair 164	Drop B4 Repair 165
Drop B4 Repair 166	Drop B4 Repair 167	Drop B4 Repair 168	Drop B4 Repair 169	Drop B4 Repair 170	Drop B4 Repair 171

Drop B – Photo Schedule

Drop B4 Repair 188		Drop B4 Repair 189		Drop B4 Repair 190		Drop B4 Repair 191		Drop B4 Repair 192		Drop B4 Repair 193	
Drop B4 Repair 194		Drop B4 Repair 217		Drop B4 Repair 218		Drop B4 Repair 219		Drop B4 Repair 220		Drop B4 Repair 243	
Drop B4 Repair 244		Drop B4 Repair 245		Drop B4 Repair 246		Drop B4 Repair 247		Drop B4 Repair 248		Drop B4 Repair 272	
Drop B4 Repair 273		Drop B4 Repair 274		Drop B4 Repair 275		Drop B4 Repair 294		Drop B4 Repair 295		Drop B4 Repair 296	
Drop B4 Repair 297		Drop B4 Repair 303		Drop B4 Repair 304		Drop B4 Repair 309		Drop B4 Repair 310		Drop B4 Repair 311	

Drop B – Photo Schedule

Drop B4 Repair 326		Drop B4 Repair 327		Drop B4 Repair 328		Drop B4 Repair 329		Drop B4 Repair 330		Drop B4 Repair 331	
Drop B4 Repair 347		Drop B4 Repair 348		Drop B4 Repair 349		Drop B4 Repair 357		Drop B4 Repair 358			

Drop C – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W		L	L			
C	1	Roof	Slab Edge	Concrete Repair	6000	400	50																		
C	2	10	Soffit	Concrete Repair	400	30	50																		
C	3	10	Soffit	Concrete Repair	300	300	50																		
C	4	10	Soffit	Concrete Repair	600	300	50																		
C	5	10	Soffit	Concrete Repair	400	50	50																		
C	6	10	Soffit	Concrete Repair	300	300	30																		
C	7	Roof	Slab Edge	Concrete Repair	2600	400	30																		
C	8	Roof	Slab Edge	Concrete Repair	1400	400	30																		
C	9	Roof	Slab Edge	Drummy Render					8000	400	10														
C	10	10	Soffit	Concrete Repair	600	300	30																		
C	11	10	Soffit	Paint Bubble														4000	100						
C	12	10	Soffit	Paint Bubble														400	400						
C	13	10	Balustrade Wall	Paint Bubble														1000	1000						
C	14a	10	Balustrade Wall	Concrete Repair	800	250	30																		
C	14b	10	Balustrade Wall	Paint Bubble														600	200						
C	15	10	Balustrade Wall	Paint Bubble														600	200						
C	16	10	Slab Edge	Concrete Repair	1000	200	30																		
C	17	10	Slab Edge	Concrete Repair	800	200	30																		
C	18	9	Soffit	Concrete Repair	150	150	30																		
C	19	9	Soffit	Concrete Repair	200	200	30																		
C	20	9	Soffit	Concrete Repair	1000	1000	30																		
C	21	9	Soffit	Concrete Repair	300	300	30																		
C	22	9	Soffit	Concrete Repair	300	300	30																		
C	23	9	Soffit	Concrete Repair	200	200	30																		
C	24	9	Soffit	Concrete Repair	700	400	30																		
C	25	9	Soffit	Concrete Repair	100	100	30																		
C	26	9	Soffit	Rust Spot													6								
C	27	9	Soffit	Paint Bubble														300	100						
C	28	9	Slab Edge	Concrete Repair	900	200	30																		
C	29	9	Slab Edge	Concrete Repair	200	200	30																		
C	30	9	Slab Edge	Concrete Repair	400	200	30																		
C	31	8	Soffit	Concrete Repair	600	300	30																		
C	32	8	Soffit	Concrete Repair	1200	800	30																		
C	33	8	Soffit	Concrete Repair	500	400	30																		
C	34	8	Soffit	Concrete Repair	300	200	30																		
C	35	8	Soffit	Concrete Repair	200	200	30																		
C	36	8	Soffit	Concrete Repair	400	200	30																		
C	37	8	Soffit	Concrete Repair	400	200	30																		
C	38	8	Column	Concrete Repair	2000	500	30																		
C	39	8	Soffit	Rust Spot													4								
C	40	8	Slab Edge	Concrete Repair	1100	200	30																		
C	41	8	Slab Edge	Concrete Repair	100	100	30																		
C	42	8	Window Hob	Crack / Repair																5000					Crack In Door Hobb
C	43	7	Soffit	Concrete Repair	120	120	30																		
C	44	7	Soffit	Concrete Repair	100	150	30																		
C	45	7	Soffit	Concrete Repair	300	300	30																		

Drop C – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D		L	W					
C	46	7	Soffit	Concrete Repair	450	300	30												L	L			
C	47	7	Soffit	Concrete Repair	700	300	30																
C	48	7	Soffit	Concrete Repair	400	300	30																
C	49	7	Soffit	Concrete Repair	1000	300	30																
C	50	7	Soffit	Concrete Repair	400	300	30																
C	51	7	Soffit	Concrete Repair	300	300	30																
C	52	7	Soffit	Concrete Repair	1300	1000	30																
C	53	7	Soffit	Concrete Repair	300	300	30																
C	54a	7	Soffit	Concrete Repair	600	300	30																
C	55a	7	Soffit	Concrete Repair	300	300	30																
C	56a	7	Soffit	Rust Spot												3							
C	57a	7	Slab Edge	Concrete Repair	600	100	30																
C	58a	7	Slab Edge	Concrete Repair	400	400	30																
C	59a	7	Slab Edge	Concrete Repair	300	100	30										1000	1000					
C	60a	7	Balustrade Wall	Paint Bubble																			
C	61a	6	Soffit	Concrete Repair	100	100	30																
C	62a	6	Soffit	Concrete Repair	100	100	30																
C	62b	6	Soffit	Concrete Repair	300	300	30																
C	63a	6	Soffit	Concrete Repair	300	300	30																
C	64	6	Soffit	Concrete Repair	2000	1200	30																
C	65	6	Soffit	Rust Spot												5							
C	66	6	Balustrade Wall	Concrete Repair	1600	500	30																
C	67	6	Balustrade Wall	Concrete Repair	400	400	30																
C	68	6	Slab Edge	Concrete Repair	1700	100	30																
C	69	6	Balustrade Wall	Concrete Repair	100	100	30																
C	70	5	Soffit	Concrete Repair	100	100	30																
C	71	5	Soffit	Concrete Repair	300	300	30																
C	72	5	Soffit	Concrete Repair	400	300	30																
C	73	5	Soffit	Concrete Repair	300	300	30																
C	74	5	Soffit	Concrete Repair		900	30																
C	75	5	Soffit	Concrete Repair	1300	1100	30																
C	76	5	Soffit	Concrete Repair																			
C	77	5	Soffit	Concrete Repair	400	100	30																
C	78	5	Soffit	Concrete Repair	400	100	30																
C	79	5	Soffit	Rust Spot												5							
C	80	5	Soffit	Paint Bubble													1000	1000					
C	81	5	Brick Wall	Corrosion	500	500																	Brick Fretting
C	82	5	Brick Wall	Concrete Repair	600	100	30																
C	83	5	Slab Edge	Concrete Repair	100	100	30																
C	84	5	Balustrade Wall	Paint Bubble													1000	1000					
C	85	5	Slab Edge	Concrete Repair	600	100	30																
C	86	4	Soffit	Concrete Repair	400	300	30																
C	87	4	Soffit	Concrete Repair	900	600	30																
C	88	4	Soffit	Concrete Repair	500	500	30																
C	89	4	Soffit	Concrete Repair	600	300	30																
C	90	4	Soffit	Concrete Repair	600	300	30																

Drop C – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D		L	W		L	L			
C	91	4	Soffit	Concrete Repair	300	100	30																	
C	92	4	Soffit	Concrete Repair	600	200	30																	
C	93	4	Soffit	Concrete Repair	300	200	30																	
C	94	4	Soffit	Rust Spot												6								
C	95	4	Column	Concrete Repair	1300	500	30																	
C	96a	4	Balustrade Wall	Paint Bubble													1000	1000						
C	96b	4	Balustrade Wall	Rust Fixings																		3		
C	97	4	Slab Edge	Concrete Repair	300	200	30																	
C	98a	4	Slab Edge	Concrete Repair	400	200	30																	
C	98b	4	Balustrade Wall	Concrete Repair	300	100	30																	
C	98c	4	Window Hob	Concrete Repair	2000	100	30																	
C	99	3	Soffit	Concrete Repair	500	400	30																	
C	100	3	Soffit	Concrete Repair	100	100	30																	
C	101	3	Soffit	Concrete Repair	400	100	30																	
C	102	3	Soffit	Concrete Repair	600	200	30																	
C	103	3	Soffit	Concrete Repair	1400	1000	30																	
C	104	3	Soffit	Concrete Repair	300	300	30																	
C	105	3	Soffit	Concrete Repair	500	400	30																	
C	106	3	Soffit	Concrete Repair	400	150	30																	
C	107	3	Soffit	Concrete Repair	500	250	30																	
C	108	3	Soffit	Concrete Repair	300	100	30																	
C	109	3	Soffit	Concrete Repair	1200	100	30																	
C	110	3	Soffit	Rust Spot												2								
C	111	3	Soffit	Paint Bubble													3000	1200						
C	112	3	Column	Concrete Repair	1800	500	30																	
C	113	3	Slab Edge	Concrete Repair	300	100	30																	
C	114	3	Slab Edge	Concrete Repair	300	100	30																	
C	115	3	Balustrade Wall	Paint Bubble																				
C	116	3	Balustrade Wall	Paint Bubble													1000	1000						
C	117	3	Balustrade Wall	Concrete Repair	1000	100	30																	
C	118	3	Window Hob	Concrete Repair	2000	100	30																	
C	119	2	Soffit	Concrete Repair	600	100	30																	
C	120	2	Soffit	Concrete Repair	400	200	30																	
C	121	2	Soffit	Concrete Repair	300	200	30																	
C	122	2	Soffit	Concrete Repair	1000	900	30																	
C	123	2	Soffit	Concrete Repair	500	300	30																	
C	124	2	Soffit	Concrete Repair	200	200	30																	
C	125	2	Soffit	Concrete Repair	1000	1000	30																	
C	126	2	Soffit	Concrete Repair	400	100	30																	
C	127	2	Soffit	Concrete Repair	1000	200	30																	
C	128	2	Balustrade Wall	Concrete Repair	700	400	30																	
C	129	2	Balustrade Wall	Concrete Repair	1000	1000	30																	
C	130	2	Balustrade Wall	Concrete Repair	500	400	30																	
C	131	2	Balustrade Wall	Concrete Repair	1000	500	30																	
C	132	2	Balustrade Wall	Concrete Repair	100	100	30																	
C	133a	2	Balustrade Wall	Paint Bubble													1000	300						

Drop C – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
C 133b		5	Column	Concrete Repair	1800	600	30															
C 134		1	Soffit	Concrete Repair	400	300	30															
C 135		1	Soffit	Concrete Repair	400	300	30															
C 136		1	Soffit	Concrete Repair	200	200	30															
C 137		1	Soffit	Concrete Repair	200	200	30															
C 138		1	Soffit	Concrete Repair	600	600	30															
C 139		1	Soffit	Concrete Repair	600	400	30															
C 140		1	Soffit	Concrete Repair	900	400	30															
C 141		1	Soffit	Concrete Repair	1000	1000	30															
C 142		1	Soffit	Concrete Repair	300	300	30															
C 143		1	Soffit	Concrete Repair	1000	300	30															
C 144		1	Soffit	Concrete Repair	200	200	30															
C 145a		1	Soffit	Concrete Repair	200	200	30															
C 145b		1	Soffit	Concrete Repair	500	300	30															
C 146		1	Soffit	Concrete Repair	500	200	30															
C 147		1	Soffit	Concrete Repair	400	300	30															
C 148		1	Soffit	Rust Spot										1								
C 149		1	Balustrade Wall	Concrete Repair	300	200	30															
C 150		1	Balustrade Wall	Concrete Repair	700	300	30															
C 151		1	Balustrade Wall	Concrete Repair	300	300	30															
C 152a		1	Balustrade Wall	Concrete Repair	1400	500	30															
C 152b		1	Balustrade Wall	Concrete Repair	700	200	30															
C 153		1	Balustrade Wall	Concrete Repair	1000	500	30															
C 154		1	Balustrade Wall	Concrete Repair	2200	500	30															
C 155		1	Balustrade Wall	Concrete Repair	2200	700	30															
C 156		1	Column	Concrete Repair	1000	400	30															

Drop C – Photo Schedule

Drop C Repair 1	Drop C Repair 2	Drop C Repair 3	Drop C Repair 4	Drop C Repair 5	Drop C Repair 6
Drop C Repair 7	Drop C Repair 8	Drop C Repair 9	Drop C Repair 10	Drop C Repair 11	Drop C Repair 12
Drop C Repair 13	Drop C Repair 14a	Drop C Repair 14b	Drop C Repair 15	Drop C Repair 16	Drop C Repair 17
Drop C Repair 18	Drop C Repair 19	Drop C Repair 20	Drop C Repair 21	Drop C Repair 22	Drop C Repair 23
Drop C Repair 24	Drop C Repair 25	Drop C Repair 26	Drop C Repair 27	Drop C Repair 28	Drop C Repair 29

Drop C – Photo Schedule

Drop C Repair 30		Drop C Repair 31		Drop C Repair 32		Drop C Repair 33		Drop C Repair 34		Drop C Repair 35	
Drop C Repair 36		Drop C Repair 37		Drop C Repair 38		Drop C Repair 39		Drop C Repair 40		Drop C Repair 41	
Drop C Repair 42		Drop C Repair 43		Drop C Repair 44		Drop C Repair 45		Drop C Repair 46		Drop C Repair 47	
Drop C Repair 48		Drop C Repair 49		Drop C Repair 50		Drop C Repair 51		Drop C Repair 52		Drop C Repair 53	
Drop C Repair 54a		Drop C Repair 54b		Drop C Repair 55a		Drop C Repair 56		Drop C Repair 57		Drop C Repair 58	

Drop C – Photo Schedule

Drop C Repair 59	Drop C Repair 60	Drop C Repair 61	Drop C Repair 62a	Drop C Repair 62b	Drop C Repair 63
Drop C Repair 64	Drop C Repair 65	Drop C Repair 66	Drop C Repair 67	Drop C Repair 68	Drop C Repair 69
Drop C Repair 70	Drop C Repair 71	Drop C Repair 72	Drop C Repair 73	Drop C Repair 74	Drop C Repair 75
Drop C Repair 76	Drop C Repair 77	Drop C Repair 78	Drop C Repair 79	Drop C Repair 80	Drop C Repair 81
Drop C Repair 82	Drop C Repair 83	Drop C Repair 84	Drop C Repair 85	Drop C Repair 86	Drop C Repair 87

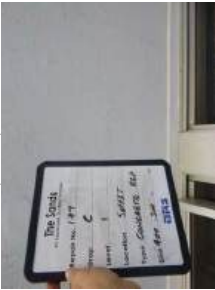
Drop C – Photo Schedule

Drop C Repair 88	Drop C Repair 89	Drop C Repair 90	Drop C Repair 91	Drop C Repair 92	Drop C Repair 93
Drop C Repair 94	Drop C Repair 95	Drop C Repair 96a	Drop C Repair 96b	Drop C Repair 97	Drop C Repair 98a
Drop C Repair 98b	Drop C Repair 98c	Drop C Repair 99	Drop C Repair 100	Drop C Repair 101	Drop C Repair 102
Drop C Repair 103	Drop C Repair 104	Drop C Repair 105	Drop C Repair 106	Drop C Repair 107	Drop C Repair 108
Drop C Repair 109	Drop C Repair 110	Drop C Repair 111	Drop C Repair 112	Drop C Repair 113	Drop C Repair 114

Drop C – Photo Schedule

Drop C Repair 115		Drop C Repair 116		Drop C Repair 117		Drop C Repair 118		Drop C Repair 119		Drop C Repair 120	
Drop C Repair 121		Drop C Repair 122		Drop C Repair 123		Drop C Repair 124		Drop C Repair 125		Drop C Repair 126	
Drop C Repair 127		Drop C Repair 128		Drop C Repair 129		Drop C Repair 130		Drop C Repair 131		Drop C Repair 132	
Drop C Repair 133a		Drop C Repair 133b		Drop C Repair 134		Drop C Repair 135		Drop C Repair 136		Drop C Repair 137	
Drop C Repair 138		Drop C Repair 139		Drop C Repair 140		Drop C Repair 141		Drop C Repair 142		Drop C Repair 143	

Drop C – Photo Schedule

Drop C Repair 144		Drop C Repair 145a		Drop C Repair 145b		Drop C Repair 146		Drop C Repair 147		Drop C Repair 148			
Drop C Repair 149		Drop C Repair 150		Drop C Repair 151		Drop C Repair 152a		Drop C Repair 152b		Drop C Repair 153			
Drop C Repair Drop 154		Drop C Repair 155		Drop C Repair 156									

Drop D – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D		L	W		L	L			
1	D	10	Balustrade	Concrete Repair	1200	400	30																	
2	D	10	Balustrade	Concrete Repair	1200	400	30																	
3	D	10	Soffit	Rust Spot												2								
4	D	9	Wall	Brick Fretling	500	500																		Brick Fretling
5	D																							
6	D																							
7	D	9	Soffit	Concrete Repair	600	200	30																	
8	D	9	Wall	Poor Mortar	600	300																		Brick Fretling
9	D																							
10	D																							
11	D	7	Soffit	Paint Bubble													200	200						
12	D	7	Soffit	Poor Mortar	400																			Brick Fretling
13	D	7	Soffit	Concrete Repair	600	300	30																	
14	D	7	Soffit	Poor Mortar	400	300																		Brick Fretling
15	D	7	Balustrade	Drummy									400	400	10									
16	D	7	Balustrade	Drummy									300	200	10									
17	D																							
18	D																							
19	D																							
20	D																							
21	D																							
22	D																							
23	D																							
24	D																							
25	D																							
26	D																							
27	D																							
28	D																							
29	D																							
30	D																							
31	D																							
32	D																							
33	D																							
34	D	7	Balustrade	Drummy	300	150	30																	
35	D	6	Balustrade	Concrete Repair	500	200	30																	
36	D	6	Balustrade	Drummy Render					200	200	10													
37	D	6	Balustrade	Concrete Repair	200	300	30																	
38	D	5	Wall	Missing Bricks																				Bricks Missing
39	D	5	Soffit	Concrete Repair	300	200	30																	
40	D	5	Soffit	Concrete Repair	100	100	30																	
41	D	5	Soffit	Concrete Repair	500	500	30																	
42	D	5	Wall	Poor Mortar/ Bricks	500	500																		Brick Fretling
43	D	5	Balustrade	Paint Bubble													400	100						
44	D	5	Balustrade	Drummy					200	200	10													
45	D	5	Balustrade	Drummy					200	200	10													
46	D	5	Soffit	Concrete Repair	300	300	30																	

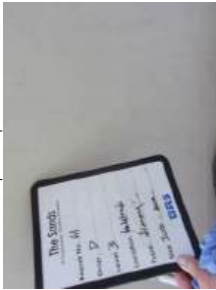
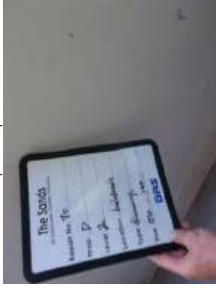
Drop D – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
47	D	5	Floor	Crack													3000				Door Hob Cracked	
48	D	4	Soffit	Concrete Repair	300	100	30															
49	D	4	Soffit	Concrete Repair	300	200	30															
50	D	4	Soffit	Concrete Repair	1100	250	30															
51a	D	4	Soffit	Rust Spot										2								
52a	D	4	Wall	Poor Mortar	100	100															Brick Fretting	
52	D	4	Balustrade	Drummy								300	100	10								
53	D																					
54	D																					
55	D																					
56	D																					
57	D																					
58	D																					
59	D																					
60	D	3	Wall	Poor Mortar	400	300															Brick Fretting	
61	D	3	Balustrade	Drummy								300	200	10								
62	D	3	Balustrade	Concrete Repair	200	300	30															
69a	D	2	Balustrade	Drummy	200	200						200	200									
70a	D	2	Balustrade	Drummy								150	100	10								
71a	D	2	Balustrade	Drummy								150	100	10								
72a	D	2	Soffit	Concrete Repair	1000	300	30															
73a	D	2	Soffit	Concrete Repair	2000	200	30															
74a	D	1	Soffit	Concrete Repair	2000	100	30															
75a	D	1	Soffit	Concrete Repair	1000	100	30															
76a	D	1	Wall	Poor Mortar	1200	50																Brick Fretting
77a	D	1	Balustrade	Concrete Repair	300	150	30															
78a	D	1	Balustrade	Concrete Repair	250	200	30															

Drop D – Photo Schedule

Drop D Repair 1	Drop D Repair 2	Drop D Repair 3	Drop D Repair 4	Drop D Repair 7	Drop D Repair 8
Drop D Repair 11	Drop D Repair 12	Drop D Repair 13	Drop D Repair 14	Drop D Repair 15	Drop D Repair 16
Drop D Repair 34	Drop D Repair 35	Drop D Repair 36	Drop D Repair 37	Drop D Repair 38	Drop D Repair 39
Drop D Repair 40	Drop D Repair 41	Drop D Repair 42	Drop D Repair 43	Drop D Repair 44	Drop D Repair 47
Drop D Repair 48	Drop D Repair 49	Drop D Repair 50	Drop D Repair 51a	Drop D Repair 51b	Drop D Repair 52

Drop D – Photo Schedule

Drop D Repair 60		Drop D Repair 61		Drop D Repair 62		Drop D Repair 63		Drop D Repair 70		Drop D Repair 71	
Drop D Repair 72		Drop D Repair 73		Drop D Repair 74		Drop D Repair 75		Drop D Repair 76		Drop D Repair 77	
Drop D Repair 78											

Drop D-E – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot		Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D			L	W	L	L				
6	D/E	9	Balustrade	Concrete Repair	1300	600	30																
10	D/E	8	Balustrade	Concrete Repair	600	300	30																
56	D/E	4	Balustrade	Concrete Repair	1300	35	30																
73	D/E	2	Balustrade	Concrete Repair	1800	300	30																

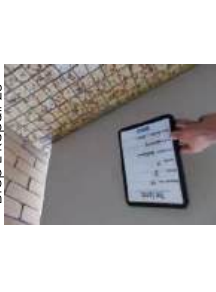
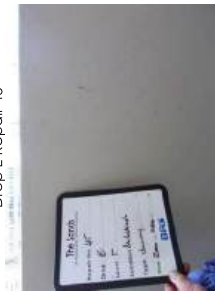
Drop D-E – Photo Schedule

 Drop D-E Repair 6	 Drop D-E Repair 10	 Drop D-E Repair 56	 Drop D-E Repair 73	
--	---	---	--	--

Drop E – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D	L	W	D		L	W		L	L			
1	E	Roof	Slab Edge	Drummy										2000	200	10									
2	E	Roof	Slab Edge	Paint Bubble														2500	150						
4	E	9	Soffit	Rust Spot													1								
5	E	9	Balustrade	Paint Bubble														700	200						
8	E	9	Soffit	Concrete Repair	400	150	30																		
9	E	9	Soffit	Paint Bubble														80	80						
17	E	7	Soffit	Concrete Repair	600	100	30																		
18	E	7	Soffit	Paint Bubble														100	100						
19	E	7	Wall	Poor Mortar/ Bricks	250																				Brick Fretting
20	E	7	Soffit	Concrete Repair	250	100	30																		
21	E	7	Wall	Poor Mortar	300	100																			Brick Fretting
22	E	7	Floor	Crack																1200					
23	E	7	Balustrade	Drummy										600	600	10									
24	E	7	Balustrade	Drummy										300	300	10									
25	E	7	Balustrade	Concrete Repair	400	300	30																		
26	E	6	Soffit	Concrete Repair	400	150	30																		
27	E	6	Soffit	Concrete Repair	1600	100	30																		
28	E	6	Wall	Poor Mortar	400	200																			Brick Fretting
29	E	6	Wall	Poor Mortar	100	100																			Brick Fretting
30	E	6	Wall	Missing Sealant																					
31	E	6	Wall	Missing Sealant																		1000			
32	E	6	Wall	Missing Sealant																		200			
33	E	6	Wall	Missing Sealant																		200			
45	E	5	Balustrade	Drummy										200	200	10									
46	E	5	Soffit	Concrete Repair	300	300	30																		
48	E	5	Balustrade	Concrete Repair	1200	400	30																		
53	E	4	Soffit	Concrete Repair	1200	200	30																		
54a	E	4	Soffit	Concrete Repair	600	350	30																		
54b	E	3	Soffit	Concrete Repair	350	150	30																		
54c	E	3	Soffit	Concrete Repair	300	300	30																		
55	E	4	Balustrade	Drummy										200	100	10									
58	E	3	Soffit	Concrete Repair	200	250	30																		
59	E	3	Soffit	Concrete Repair	600	300	30																		
63	E	2	Soffit	Concrete Repair	200	150	30																		
64	E	2	Soffit	Concrete Repair	300	100	30																		
65	E	2	Soffit	Concrete Repair	1000	300	30																		
66	E	2	Balustrade	Drummy										200	100	10									
67	E	2	Balustrade	Concrete Repair	600	600	30																		
68	E	2	Balustrade	Drummy										200	300	10									
69	E	2	Balustrade	Drummy										250	100	10									
78	E	1	Soffit	Concrete Repair	800	200	30																		
79a	E	1	Soffit	Concrete Repair	400	400	30																		
80a	E	1	Soffit	Drummy										1000	100	10									
81a	E	1	Balustrade	Drummy										100	100	10									
82a	E	1	Floor	Broken Tiles																					Broken X6
83a	E	1	Balustrade	Concrete Repair	2000	100	30																		

Drop E – Photo Schedule

Drop E Repair 1		Drop E Repair 2		Drop E Repair 4		Drop E Repair 5		Drop E Repair 8		Drop E Repair 9	
Drop E Repair 17		Drop E Repair 18		Drop E Repair 19		Drop E Repair 20		Drop E Repair 21		Drop E Repair 28	
Drop E Repair 23		Drop E Repair 24		Drop E Repair 25		Drop E Repair 26		Drop E Repair 27		Drop E Repair 32	
Drop E Repair 29		Drop E Repair 30		Drop E Repair 31		Drop E Repair 32		Drop E Repair 33		Drop E Repair 45	
Drop E Repair 46		Drop E Repair 48		Drop E Repair 53		Drop E Repair 54a		Drop E Repair 54b		Drop E Repair 54c	

Drop E – Photo Schedule

Drop E Repair 55		Drop E Repair 58		Drop E Repair 59		Drop E Repair 63		Drop E Repair 64		Drop E Repair 65	
Drop E Repair 66		Drop E Repair 67		Drop E Repair 68		Drop E Repair 69		Drop E Repair 78		Drop E Repair 79	
Drop E Repair 80		Drop E Repair 81		Drop E Repair 82		Drop E Repair 83					

Drop F – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W		L	L			
1	F	10	Soffit	Concrete Repair	200	200	30																		
2	F	10	Soffit	Paint Bubble														400	300						
3	F	10	Soffit	Concrete Repair	1200	300	30																		
4	F	10	Soffit	Concrete Repair	400	200	30																		
5	F	10	Wall	Poor Mortar	400	200																			
6	F	10	Wall	Poor Mortar	1200	30																			
7	F	10	Balustrade	Drummy									600	50	10										
8	F	10	Balustrade	Paint Bubble														600	100						
9	F	9	Soffit	Concrete Repair	300	50	30																		
10	F	9	Wall	Poor Mortar	350	250																			
11	F	9	Balustrade	Drummy									1000	500	10										
12	F	9	Balustrade	Drummy									200	200	10										
13	F	9	Balustrade	Drummy									400	100	10										
14	F	9		Concrete Repair	6000	100	30																		
15	F	9	Balustrade	Concrete Repair	2100	400	30																		
16	F	8	Soffit	Concrete Repair	200	200	30																		
17	F	8	Soffit	Concrete Repair	100	100	30																		
18a	F	8	Soffit	Concrete Repair	100	100	30																		
18b	F	8	Soffit	Concrete Repair	100	100	30																		
19	F	8	Soffit	Concrete Repair	300	300	30																		
20	F	8	Balustrade	Drummy									200	100	10										
21	F	8	Balustrade	Drummy									800	100	10										
22	F	8	Balustrade	Drummy									100	100	10										
23	F	8	Balustrade	Paint Bubble														1200	120						
24	F	8	Balustrade	Concrete Repair	1300	350	30																		
25	F	7	Soffit	Concrete Repair	400	400	30																		
26	F	7	Balustrade	Drummy									500	300	10										
27	F	7	Balustrade	Drummy									400	300	10										
28	F	7	Balustrade	Drummy									300	100	10										
29	F	7	Wall	Poor Mortar	400	200																			
30	F	7	Floor	Concrete Repair	5000	120	30																		
31	F	7	Balustrade	Concrete Repair	100	100	30																		
32a	F	6	Soffit	Concrete Repair	300	150	30																		
32b	F	6	Soffit	Concrete Repair	300	150	30																		
33	F	6	Soffit	Concrete Repair	400	200	30																		
34	F	6	Floor	Drummy									4000	150	10										
35	F	6	Balustrade	Drummy									100	100	10										
36	F	6	Balustrade	Paint Bubble														2000	120						
37	F	6	Balustrade	Paint Bubble														1000	200						
38	F	6	Balustrade	Concrete Repair	600	300	30																		
39	F	5	Soffit	Concrete Repair	200	200	30																		
40	F	5	Soffit	Concrete Repair	300	150	30																		
41	F	5	Soffit	Concrete Repair	200	100	30																		
42	F	5	Floor	Concrete Repair	2000	150	30																		
43	F	5	Balustrade	Paint Bubble														1200	120						
44	F	5	Balustrade	Concrete Repair	2000	300	30																		

Drop F – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
45	F	5	Balustrade	Concrete Repair	300	100	30															
46	F	4	Soffit	Concrete Repair	200	200	30															
47	F	4	Soffit	Concrete Repair	300	100	30															
48	F	4	Balustrade	Drummy							200	200	10									
49	F	4	Wall	Poor Mortar	500	300																
50	F	4	Balustrade	Drummy							500	200	10									
51	F	4	Balustrade	Concrete Repair	200	200	30															
52	F	3	Soffit	Concrete Repair	350	120	30															
53	F	3	Soffit	Concrete Repair	300	200	30															
54	F	3	Balustrade	Drummy							3000	200	10									
55	F	3	Balustrade	Paint Bubble											2000	50						
56	F	3	Balustrade		1200	300																
57	F	2	Soffit	Concrete Repair	200	200	30															
58	F	2	Balustrade	Concrete Repair	200	150	30															
59	F	2	Balustrade	Concrete Repair	300	300	30															
60	F	1	Soffit	Concrete Repair	250	250	30															
61	F	1	Soffit	Concrete Repair	450	200	30															
62	F	1	Floor & Wall	Broken Tile																		x10
63	F	1	Balustrade	Drummy							1100	500	10									

Drop F – Photo Schedule

Drop F Repair 1	Drop F Repair 2	Drop F Repair 3	Drop F Repair 4	Drop F Repair 5	Drop F Repair 6
Drop F Repair 7	Drop F Repair 8	Drop F Repair 9	Drop F Repair 10	Drop F Repair 11	Drop F Repair 12
Drop F Repair 13	Drop F Repair 14	Drop F Repair 15	Drop F Repair 16	Drop F Repair 17	Drop F Repair 18a
Drop F Repair 18b	Drop F Repair 19	Drop F Repair 20	Drop F Repair 21	Drop F Repair 22	Drop F Repair 23
Drop F Repair 24	Drop F Repair 25	Drop F Repair 26	Drop F Repair 27	Drop F Repair 28	Drop F Repair 29

Drop F – Photo Schedule

Drop F Repair 30	Drop F Repair 31	Drop F Repair 32a	Drop F Repair 32b	Drop F Repair 33	Drop F Repair 34
Drop F Repair 35	Drop F Repair 36	Drop F Repair 37	Drop F Repair 38	Drop F Repair 39	Drop F Repair 40
Drop F Repair 41	Drop F Repair 42	Drop F Repair 43	Drop F Repair 44	Drop F Repair 45	Drop F Repair 46
Drop F Repair 47	Drop F Repair 48	Drop F Repair 49	Drop F Repair 50	Drop F Repair 51	Drop F Repair 52
Drop F Repair 53	Drop F Repair 54	Drop F Repair 55	Drop F Repair 56	Drop F Repair 57	Drop F Repair 58

Drop F – Photo Schedule

Drop F Repair 59 	Drop F Repair 60 	Drop F Repair 61 	Drop F Repair 62 	Drop F Repair 63 	
---	---	---	--	---	--

Drop G – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W		L	L			
1	G	Roof	Slab Edge	Concrete Repair	4000	200	30																		
2	G	Roof	Slab Edge	Concrete Repair	400	100	30																		
3	G	Roof	Slab Edge	Concrete Repair	1000	100	30																		
4	G	9	Soffit	Concrete Repair	100	80	30																		
5	G	9	Soffit	Concrete Repair	100	100	30																		
6	G	9	Soffit	Concrete Repair	300	100	30																		
7	G	9	Soffit	Concrete Repair	300	100	30																		
8	G	9	Soffit	Rust Spot			30										5								
9	G	9	Window Hob	Concrete Repair	5000	100	30																		
10	G	9	Balustrade Wall	Concrete Repair	350	100	30																		
11	G	9	Balustrade Wall	Paint Bubble			30																		
12	G	8	Balustrade Wall	Paint Bubble			30																		
13	G	8	Balustrade Wall	Concrete Repair	200	200	30																		
14	G	8	Soffit	Concrete Repair	300	100	30																		
15	G	8	Soffit	Concrete Repair	300	300	30																		
16	G	7	Soffit	Concrete Repair	50	50	30																		
17	G	7	Soffit	Concrete Repair	50	50	30																		x2
18	G	7	Soffit	Concrete Repair	50	50	30																		
19	G	7	Slab Edge	Concrete Repair	200	100	30																		
20	G	7	Balustrade Wall	Paint Bubble			30																		
21	G	6	Balustrade Wall	Paint Bubble			30																		
22	G	6	Balustrade Wall	Paint Bubble			30																		
23	G	5	Soffit	Concrete Repair	400	300	30																		
24	G	5	Soffit	Concrete Repair	100	100	30																		
25b	G	5	Soffit	Paint Bubble			30																		
25b	G	5	Balustrade Wall	Paint Bubble			30																		
26	G	5	Balustrade Wall	Drummy			30																		
27	G	4	Balustrade Wall	Drummy			30																		
28	G	4	Balustrade Wall	Drummy			30																		
29	G	4	Window Hob	Concrete Repair	100	100	30																		
30	G	4	Soffit	Concrete Repair	300	100	30																		
31	G	4	Soffit	Paint Bubble			30																		
32	G	3	Soffit	Concrete Repair	300	100	30																		
33	G	3	Soffit	Concrete Repair	100	100	30																		
34	G	3	Balustrade Wall	Concrete Repair	600	600	30																		
35	G	2	Balustrade Wall	Concrete Repair	300	300	30																		
36	G	2	Balustrade Wall	Concrete Repair	300	100	30																		
37	G	2	Slab Edge	Concrete Repair	400	200	30																		
38	G	2	Slab Edge	Concrete Repair	200	200	30																		
39	G	2	Soffit	Concrete Repair	300	150	30																		
40	G	2	Soffit	Paint Bubble			30																		
42	G	2	Entrance Roof & Slab Edge	Concrete Repair & Drummy	1800	200	30																		
43	G	2	Entrance Roof & Slab Edge	Concrete Repair & Drummy	500	200	30																		
44	G	2	Entrance Roof & Slab Edge	Concrete Repair & Drummy	400	200	30																		

Drop G – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D		L	W		L	L			
45	G	2	Entrance Roof & Slab Edge	Concrete Repair & Drummy	300	200	30																	
46	G	2	Entrance Roof & Slab Edge	Concrete Repair & Drummy	400	200	30																	
47	G	2	Entrance Roof & Slab Edge	Concrete Repair & Drummy	300	200	30																	
48	G	2	Entrance Roof & Slab Edge	Concrete Repair & Drummy	300	200	30																	
49	G	2	Entrance Roof & Slab Edge	Concrete Repair & Drummy	400	200	30																	
50	G	2	Entrance Roof	Concrete Repair & Drummy	400	400	30																	
51	G	2	Entrance Roof	Concrete Repair & Drummy	600	300	30																	
52	G	2	Entrance Roof	Concrete Repair & Drummy	1000	700	30																	
53	G	2	Entrance Roof	Concrete Repair & Drummy	900	600	30																	
54	G	2	Entrance Roof	Concrete Repair & Drummy	300	300	30																	
56	G	2	Entrance Roof	Paint Bubble			30										4000	4000						
57	G	1	Entrance Soffit	Paint Bubble			30										4000	4000						
58	G	1	Entrance Soffit	Concrete Repair	600	100	30																	
59	G	1	Entrance Soffit	Concrete Repair	100	100	30																	
60	G	1	Entrance Soffit	Concrete Repair	100	100	30																	
61	G	1	Entrance Soffit	Concrete Repair	600	400	30																	
62	G	1	Entrance Soffit	Concrete Repair	100	100	30																	
63	G	1	Entrance Soffit	Concrete Repair	5000	300	30																	
64	G	1	Entrance Soffit	Concrete Repair	100	100	30																	
65	G	1	Entrance Column	Crack			30																	x12
66	G	1	Entrance Balustrade	Concrete Repair	800	800	30																	
67	G	1	Entrance Balustrade	Concrete Repair	200	100	30																	
68	G	1	Entrance Balustrade	Concrete Repair & Drummy	600	600	30																	
69	G	1	Entrance Balustrade	Concrete Repair & Drummy	500	400	30																	
70	G	1	Entrance Balustrade	Concrete Repair & Drummy	300	300	30																	
71	G	1	Entrance Balustrade	Concrete Repair & Drummy	1200	400	30																	
72	G	1	Entrance Balustrade	Concrete Repair & Drummy	1200	400	30																	
73	G	1	Entrance Balustrade	Concrete Repair & Drummy	600	500	30																	
74	G	1	Entrance Balustrade	Concrete Repair & Drummy	400	400	30																	
75	G	1	Entrance Balustrade	Concrete Repair & Drummy	500	100	30																	
76	G	1	Entrance Balustrade	Concrete Repair & Drummy	500	500	30																	
77	G	1	Entrance Balustrade	Concrete Repair & Drummy	300	300	30																	
78	G	1	Entrance Balustrade	Concrete Repair & Drummy	600	300	30																	
79	G	1	Entrance Balustrade	Concrete Repair & Drummy	600	500	30																	

Drop G – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
80	G	1	Entrance Balustrade	Concrete Repair & Drummy	1700	300	30															
81	G	1	Entrance Wall	Concrete Repair & Drummy	2300	300	30															
82	G	1	Entrance Wall	Paint Bubble			30								2300	2000						
83	G	1	Entrance Wall	Paint Bubble			30								2000	2000						
84	G	1	Entrance Wall	Paint Bubble			30								3000	1000						
85	G	1	Entrance Wall	Concrete Repair & Drummy	900	200	30															

Drop G – Photo Schedule

Drop G Repair 1	Drop G Repair 2	Drop G Repair 3	Drop G Repair 4	Drop G Repair 5	Drop G Repair 6
Drop G Repair 7	Drop G Repair 8	Drop G Repair 9	Drop G Repair 10	Drop G Repair 11	Drop G Repair 12
Drop G Repair 13	Drop G Repair 14	Drop G Repair 15	Drop G Repair 16	Drop G Repair 17	Drop G Repair 18
Drop G Repair 19	Drop G Repair 20	Drop G Repair 21	Drop G Repair 22	Drop G Repair 23	Drop G Repair 24
Drop G Repair 25b	Drop G Repair 26	Drop G Repair 27	Drop G Repair 28	Drop G Repair 29	Drop G Repair 30

Drop G – Photo Schedule

Drop G Repair 31		Drop G Repair 32		Drop G Repair 33		Drop G Repair 34		Drop G Repair 35		Drop G Repair 36			
Drop G Repair 37		Drop G Repair 38		Drop G Repair 39		Drop G Repair 40		Drop G Repair 42		Drop G Repair 43		Drop G Repair 44	
Drop G Repair 45		Drop G Repair 46		Drop G Repair 47		Drop G Repair 48		Drop G Repair 49		Drop G Repair 56			
Drop G Repair 50		Drop G Repair 51		Drop G Repair 52		Drop G Repair 53		Drop G Repair 61		Drop G Repair 62			
Drop G Repair 57		Drop G Repair 58		Drop G Repair 59		Drop G Repair 60							

Drop G – Photo Schedule

Drop G Repair 63		Drop G Repair 64		Drop G Repair 65		Drop G Repair 66		Drop G Repair 67		Drop G Repair 68	
Drop G Repair 69		Drop G Repair 70		Drop G Repair 71		Drop G Repair 72		Drop G Repair 73		Drop G Repair 74	
Drop G Repair 75		Drop G Repair 76		Drop G Repair 77		Drop G Repair 78		Drop G Repair 79		Drop G Repair 80	
Drop G Repair 81		Drop G Repair 82		Drop G Repair 83		Drop G Repair 84		Drop G Repair 85		Drop G Repair 123	

Drop G-H – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
3	G/H	Roof	Slab Edge	Concrete Repair	3000	150	30															

Drop G-H – Photo Schedule

Drop G-H Repair 3 				
--	--	--	--	--

Drop H – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L			
1a	H	8	Soffit	Rust Spot			30							1							
1b	H	8	Soffit	Rust Spot			30							1							
2	H	8	Soffit	Paint Bubble			30								300	150					
3	H	8	Soffit	Concrete Repair	250	150	30														
4	H	8	Soffit	Concrete Repair	150	150	30														
5	H	8	Balustrade	Drummy			30				200	200	10								
6	H	8	Balustrade	Drummy			30				400	400	10								
9	H	8	Balustrade	Concrete Repair	800	250	30														
10	H	7	Soffit	Concrete Repair	300	100	30														
11	H	7	Balustrade	Drummy			30				100	100	10								
12	H	7	Balustrade	Drummy			30				200	200	10								
13	H	6	Soffit	Concrete Repair	300	100	30														
14	H	6	Soffit	Rust Spot			30							2							
15	H	6	Soffit	Concrete Repair	300	100	30														
16	H	6	Floor	Concrete Repair	3000	100	30														
17	H	6	Balustrade	Drummy			30				800	200	10								
18a	H	6	Balustrade	Concrete Repair	200	200	30														
18b	H	5	Soffit	Concrete Repair	300	300	30														
19	H	5	Soffit	Concrete Repair	100	100	30														
20	H	5	Balustrade	Drummy			30				200	100	10								
21	H	5	Floor	Concrete Repair	2200	100	30														
22	H	5	Balustrade	Concrete Repair	300	200	30														
23a	H	5	Balustrade	Concrete Repair	400	100	30														
23b	H	4			200	200	30														
23c	H	4	Soffit	Concrete Repair	200	200	30														
24	H	4	Soffit	Concrete Repair	200	100	30														
25	H	4	Balustrade	Drummy			30				400	100	10								
26a	H	4	Balustrade	Paint Bubble			30								300	300					
26b	H	3	Soffit	Concrete Repair	300	300	30														
27a	H	3	Soffit	Concrete Repair	350	300	30														
27b	H	3	Balustrade	Concrete Repair	200	200	30														
28	H	3	Balustrade	Concrete Repair	200	100	30														
29	H						30														
30	H	2	Soffit	Concrete Repair	300	300	30														
31	H	2	Soffit	Concrete Repair	200	150	30														
32	H	2	Balustrade	Drummy			30														
300	H	8	Soffit	Concrete Repair	350	150	30														

Drop H – Photo Schedule

Drop H Repair 1		Drop H Repair 2		Drop H Repair 3		Drop H Repair 4		Drop H Repair 5		Drop H Repair 6	
Drop H Repair 9		Drop H Repair 10		Drop H Repair 11		Drop H Repair 12		Drop H Repair 13		Drop H Repair 14	
Drop H Repair 15		Drop H Repair 16		Drop H Repair 17		Drop H Repair 18a		Drop H Repair 18b		Drop H Repair 19	
Drop H Repair 20		Drop H Repair 21		Drop H Repair 22		Drop H Repair 23a		Drop H Repair 23b		Drop H Repair 24	
Drop H Repair 25		Drop H Repair 26a		Drop H Repair 26b		Drop H Repair 27a		Drop H Repair 27b		Drop H Repair 28	

Drop H – Photo Schedule

Drop H Repair 30						
Drop H Repair 31						
Drop H Repair 32						
Drop H Repair 123						
Drop H Repair 300						

Drop 1 – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D		L	W					
1	I	10	Soffit	Concrete Repair	400	300	30												L	L			
2	I	10	Soffit	Concrete Repair	200	100	30																
3	I	10	Soffit	Concrete Repair	200	100	30																
4	I	10	Soffit	Concrete Repair	400	200	30																
8	I	10	Soffit	Rust Spot			30									2							
12	I	10	Slab Edge	Concrete Repair	400	100	30																
14	I	10	Soffit	Concrete Repair	100	100	30																
15	I	10	Soffit	Concrete Repair	400	200	30																
16	I	10	Soffit	Rust Spot			30									2							
17	I	8	Soffit	Rust Spot			30									2							
18	I	8	Soffit	Concrete Repair	200	100	30																
19	I	8	Soffit	Concrete Repair	700	100	30																
20	I	8	Soffit	Concrete Repair	500	100	30																
21	I	8	Soffit	Paint Bubble			30										800	600					
22	I	8	Balustrade	Paint Bubble			30										200	200					
23	I	7	Soffit	Concrete Repair	300	100	30																
				Concrete Repair & Drummy	100	100	30																
24	I	6	Balustrade	Concrete Repair & Drummy	400	400	30																
25	I	6	Balustrade																				
26	I	6	Soffit	Concrete Repair	400	100	30																
27	I	6	Soffit	Concrete Repair	100	100	30																
28	I	6	Soffit	Rust Spot			30									1							
29	I	6	Window Hob	Concrete Repair	500	100	30																
30	I	5	Soffit	Rust Spot			30									2							
31	I	5	Soffit	Concrete Repair	100	100	30																
32	I	5	Window Hob	Concrete Repair	100	100	30																
33	I	4	Window Hob	Concrete Repair	600	100	30																
34	I	4	Soffit	Concrete Repair	200	100	30																
35	I	4	Soffit	Rust Spot			30									2							
				Concrete Repair & Drummy	200	200	30																
36	I	4	Balustrade	Concrete Repair	200	100	30																
37	I	3	Soffit	Concrete Repair	200	100	30																
38	I	3	Soffit	Rust Spot			30									1							
39	I	2	Soffit	Rust Spot			30									6							
40	I	2	Window Hob	Concrete Repair	400	100	30																
41	I	2	Balustrade	Concrete Repair & Drummy	300	300	30																
42	I	2	Balustrade	Concrete Repair & Drummy	200	100	30																
43	I	2	Balustrade	Paint Bubble			30										1000	1000					

Drop I – Photo Schedule

Drop I Repair 1	Drop I Repair 2	Drop I Repair 3	Drop I Repair 4	Drop I Repair 8	Drop I Repair 12
Drop I Repair 14	Drop I Repair 15	Drop I Repair 16	Drop I Repair 17	Drop I Repair 18	Drop I Repair 19
Drop I Repair 20	Drop I Repair 21	Drop I Repair 22	Drop I Repair 23	Drop I Repair 24	Drop I Repair 25
Drop I Repair 26	Drop I Repair 27	Drop I Repair 28	Drop I Repair 29	Drop I Repair 30	Drop I Repair 31
Drop I Repair 32	Drop I Repair 33	Drop I Repair 34	Drop I Repair 35	Drop I Repair 36	Drop I Repair 37

Drop I – Photo Schedule

Drop I Repair 38 	Drop I Repair 39 	Drop I Repair 40 	Drop I Repair 41 	Drop I Repair 42 	Drop I Repair 43 
---	---	---	--	---	--

Drop J – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D	L	W	D		L	W		L	L			
1	J	9	Soffit	Concrete Repair	500	300	30																		
2	J	9	Soffit	Concrete Repair	100	100	30																		
3	J	9	Soffit	Concrete Repair	100	100	30																		
4a	J	9	Soffit	Concrete Repair	500	300	30													800					
4b	J	Roof	Slab Edge	Crack			30																		
5a	J	10	Soffit	Concrete Repair	1000	100	30																		
5b	J	9	Soffit	Concrete Repair	500	200	30																		
5c	J	Roof	Slab Edge	Crack			30													3000					
6a	J	9	Soffit	Concrete Repair	300	200	30																		
6b	J	Roof	Slab Edge	Paint Bubble			30											300	100						
7a	J	9	Soffit	Concrete Repair	300	300	30																		
7b	J	Roof	Slab Edge	Paint Bubble			30											300	200						
8a	J	9	Soffit	Concrete Repair	100	100	30																		
8b	J	Roof	Slab Edge	Paint Bubble			30											300	200						
9a	J	10	Balustrade Wall	Drummy			30							400	200	10									
9b	J	9	Soffit	Concrete Repair	100	100	30																		
9c	J	roof	Slab Edge	Concrete Repair	600	300	30																		
10a	J	10	Balustrade Wall	Paint Bubble			30											800	800						
10b	J	9	Soffit	Rust Spot			30																		
11a	J	10	Slab Edge	Concrete Repair	50	50	30																		
11b	J	9	Balustrade Wall	Drummy			30							300	100	10									
12	J						30																		
13a	J	10	Column	Concrete Repair	400	100	30																		
13b	J	9	Balustrade Wall	Drummy			30							200	200	10									
14	J	9	Balustrade Wall	Drummy			30							100	100	10									
15	J	9	Balustrade Wall	Drummy			30							200	200	10									
16	J	9	Balustrade Wall	Drummy			30							600	100	10									
17	J	9	Balustrade Wall	Drummy			30							200	100	10									
18	J	8	Soffit	Concrete Repair	200	100	30																		
19	J	8	Soffit	Concrete Repair	100	100	30																		
20	J	8	Soffit	Concrete Repair	300	300	30																		
21	J	8	Soffit	Paint Bubble			30											200	100						
22	J	8	Soffit	Concrete Repair	1000	500	30																		
23	J	8	Soffit	Paint Bubble			30											300	100						
24	J	8	Soffit	Concrete Repair	150	150	30																		
25	J	8	Soffit	Rust Spot			30																		
26	J	8	Balustrade Wall	Drummy			30							200	200	10									
27	J	8	Balustrade Wall	Drummy			30							400	100	10									
28a	J	8	Balustrade Wall	Drummy			30							500	300	10									
28b	J	8	Column	Paint Bubble			30											250	150						
29	J	8	Floor	Drummy			30							200	200	10									
30	J	8	Floor	Drummy			30							1000	300	10									
31	J	8	Floor	Drummy			30							200	300	10									
32	J	8	Floor	Drummy			30							300	200	10									
33	J	8	Floor	Drummy			30							1000	500	10									
34	J	8	Floor	Drummy			30							200	100	10									

Drop J – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W		L	L			
35	J	8	Balustrade Wall	Rust Spot			30										1								Size 1000
36	J	7	Soffit	Paint Bubble			30											100	100						
37	J	7	Soffit	Concrete Repair	200	200	30																		
38	J	7	Soffit	Concrete Repair	1000	300	30																		
39	J	7	Soffit	Paint Bubble			30											100	100						
40	J	7	Soffit	Drumny			30						200	100	10										
41	J	7	Soffit	Concrete Repair	100	100	30																		
42	J	7	Soffit	Concrete Repair	100	100	30										1								
43	J	7	Soffit	Rust Spot			30																		
44a	J	7	Soffit	Concrete Repair	300	100	30																		
44b	J	7	Balustrade Wall	Drumny			30						100	100	10										
45a	J	7	Balustrade Wall	Rust Spot			30										4								
45b	J	6	Soffit	Concrete Repair			30																		
45c	J	6	Soffit	Concrete Repair	200	100	30																		
46	J	6	Soffit	Rust Spot			30										1								
47	J	6	Soffit	Concrete Repair	1000	400	30										3								
48	J	6	Soffit	Rust Spot			30																		
49	J	6	Soffit	Paint Bubble			30											1400	200						
50	J	6	Soffit	Paint Bubble			30											100	100						
51a	J	6	Soffit	Paint Bubble			30											200	100						
51b	J	6	Balustrade Wall	Concrete Repair	100	100	30																		
52	J	6	Balustrade Wall	Crack			30													1000					
53	J	6	Balustrade Wall	Drumny			30						200	100	10										
54	J	6	Balustrade Wall	Drumny			30						200	100	10										
55	J	6	Balustrade Wall	Drumny			30						200	100	10										
56	J	6	Balustrade Wall	Drumny			30						200	100	10										
57	J	6	Column	Concrete Repair	300	100	30																		
58a	J	6	Column	Concrete Repair	1000	300	30																		
58b	J	5	Soffit	Concrete Repair	300	100	30																		
59	J	5	Soffit	Concrete Repair	200	100	30																		
60	J	5	Soffit	Rust Spot			30										3								
61	J	5	Soffit	Concrete Repair	1000	300	30																		
62	J	5	Soffit	Concrete Repair	1400	400	30																		
63	J	5	Soffit	Rust Spot			30										5								
64	J	5	Soffit	Concrete Repair	300	300	30																		
65	J	5	Balustrade Wall	Drumny			30						400	200	20										
66a	J	5	Balustrade Wall	Concrete Repair	300	200	30																		
66b	J	5	Balustrade Wall	Drumny			30						300	100	10										
67a	J	5	Balustrade Wall	Drumny			30						400	400	10										
67b	J	5	Balustrade Wall	Paint Bubble			30											500	100						
68	J	5	Balustrade Wall	Rust Spot			30										1								
69	J	5	Balustrade Wall	Drumny			30						200	100	10										
70	J	5	Balustrade Wall	Drumny			30						100	100	10										
71	J	5	Floor	Drumny			30						1000	1000	10										
72	J	5	Column	Paint Bubble			30											600	300						
73	J	4	Soffit	Concrete Repair	200	200	30																		

Drop J – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W		L	L			
74	J	4	Soffit	Concrete Repair	300	200	30																		
75	J	4	Soffit	Concrete Repair	500	500	30																		
76	J	4	Soffit	Concrete Repair	300	200	30																		
77	J	4	Soffit	Concrete Repair	2000	400	30																		
78	J	4	Soffit	Concrete Repair	400	400	30																		
79	J	4	Soffit	Concrete Repair	300	100	30																		
80	J	4	Soffit	Concrete Repair	200	100	30																		
81	J	4	Balustrade Wall	Drummy			30		300	200	10														
82	J	4	Column	Concrete Repair	200	100	30																		
83	J	4	Column	Paint Bubble			30											200	200						
84a	J	4	Column	Paint Bubble			30											200	200						
84b	J	3	Soffit	Concrete Repair	400	400	30																		
85	J	3	Soffit	Concrete Repair	100	100	30																		
86	J	3	Soffit	Concrete Repair	300	200	30																		
87	J	3	Soffit	Concrete Repair	100	100	30																		
88	J	3	Soffit	Concrete Repair	100	100	30																		
89	J	3	Soffit	Concrete Repair	400	100	30																		
90	J	3	Soffit	Paint Bubble			30											1000	300						
91	J	3	Soffit	Concrete Repair	500	300	30																		
92	J	3	Balustrade Wall	Drummy			30		300	300	10														
93	J	3	Balustrade Wall	Drummy			30		300	300	10														
94	J	3	Balustrade Wall	Drummy			30		100	100	10														
95	J	3	Balustrade Wall	Drummy			30		500	200	10														
96	J	3	Balustrade Wall	Drummy			30			100	100	10													
97	J	3	Balustrade Wall	Drummy			30			100	100	10													
98	J	3	Balustrade Wall	Drummy			30			600	100	10													
99	J	3	Balustrade Wall	Drummy			30			1000	400	10													
100	J	3	Wall	Poor Mortar	200	100	30																		Brick Fretting
101	J	3	Floor	Drummy			30			3400	1000	10													
102	J	3	Floor	Drummy			30			3000	1400	10													
103	J	3	Floor	Drummy			30			200	300	10													
104	J	3	Column	Paint Bubble			30											300	300						
105	J	2	Soffit	Concrete Repair	400	100	30																		
106	J	2	Soffit	Concrete Repair	100	100	30																		
107	J	2	Soffit	Concrete Repair	1000	1000	30																		
108	J	2	Soffit	Concrete Repair	1000	1000	30																		
109	J	2	Soffit	Concrete Repair	500	200	30																		
110	J	2	Soffit	Concrete Repair	400	200	30																		
111	J	2	Balustrade Wall	Paint Bubble			30											500	400						
112	J	2	Balustrade Wall	Concrete Repair	300	100	30																		
113	J	2	Balustrade Wall	Rust Spot			30																		
114	J	2	Balustrade Wall	Paint Bubble			30											1000	200						
115	J	2	Balustrade Wall	Drummy			30																		
116	J	2	Balustrade Wall	Drummy			30																		
117	J	2	Column	Drummy			30																		
118	J	2	Balustrade Wall	Concrete Repair	1000	300	30																		

Drop J – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D		L	W					
119	J	1	Soffit	Concrete Repair	4000	400	30												L	L			
120	J	1	Soffit	Concrete Repair	200	200	30																
121	J	1	Soffit	Concrete Repair	200	200	30																
122	J	1	Soffit	Concrete Repair	100	100	30																
123	J	1	Soffit	Concrete Repair	200	200	30																
124	J	1	Soffit	Concrete Repair	200	200	30																
125	J	1	Soffit	Concrete Repair	1500	200	30																
126	J	1	Soffit	Concrete Repair	100	100	30																
127	J	1	Soffit	Concrete Repair	500	300	30																
128	J	1	Balustrade Wall	Concrete Repair	250	250	30																
129	J	1	Balustrade Wall	Concrete Repair	300	150	30																
130	J	1	Balustrade Wall	Drummy			30						150	200	10								
131a	J	1	Balustrade Wall	Paint Bubble			30										600	500					
131b	J	1	Balustrade Wall	Paint Bubble			30										3000	500					
131c	J	1	Balustrade Wall	Rust Spot			30									5							
131d	J	1	Balustrade Wall	Paint Bubble			30										4000	800					
132	J	1	Balustrade Wall	Concrete Repair	1000	300	30																
133	J	1	Balustrade Wall	Crack			30												1400				
134	J	1	Balustrade Wall	Crack			30												1400				
135	J	1	Balustrade Wall	Concrete Repair	1200	500	30																
136	J	1	Balustrade Wall	Concrete Repair	600	400	30																
137	J	1	Balustrade Wall	Concrete Repair	200	100	30																
138	J	1	Column	Concrete Repair	1000	400	30																
139	J	1	Floor	Concrete Repair	4000		30		400														

Drop J – Photo Schedule

Drop J Repair 1	Drop J Repair 2	Drop J Repair 3	Drop J Repair 4a	Drop J Repair 4b	Drop J Repair 5a
Drop J Repair 5b	Drop J Repair 5c	Drop J Repair 6a	Drop J Repair 6b	Drop J Repair 7a	Drop J Repair 7b
Drop J Repair 8a	Drop J Repair 8b	Drop J Repair 9a	Drop J Repair 9b	Drop J Repair 9c	Drop J Repair 10a
Drop J Repair 10b	Drop J Repair 11a	Drop J Repair 11b	Drop J Repair 13a	Drop J Repair 13b	Drop J Repair 14
Drop J Repair 15	Drop J Repair 16	Drop J Repair 17	Drop J Repair 18	Drop J Repair 19	Drop J Repair 20

Drop J – Photo Schedule

Drop J Repair 21		Drop J Repair 22		Drop J Repair 23		Drop J Repair 24		Drop J Repair 25		Drop J Repair 26	
Drop J Repair 27		Drop J Repair 28a		Drop J Repair 28b		Drop J Repair 29		Drop J Repair 30		Drop J Repair 31	
Drop J Repair 32		Drop J Repair 33		Drop J Repair 34		Drop J Repair 35		Drop J Repair 36		Drop J Repair 37	
Drop J Repair 38		Drop J Repair 39		Drop J Repair 40		Drop J Repair 41		Drop J Repair 42		Drop J Repair 43	
Drop J Repair 44a		Drop J Repair 44b		Drop J Repair 45a		Drop J Repair 45b		Drop J Repair 45c		Drop J Repair 46	

Drop J – Photo Schedule

Drop J Repair 47	Drop J Repair 48	Drop J Repair 49	Drop J Repair 50	Drop J Repair 51a	Drop J Repair 52b
Drop J Repair 52	Drop J Repair 53	Drop J Repair 54	Drop J Repair 55	Drop J Repair 56	Drop J Repair 57
Drop J Repair 58a	Drop J Repair 58b	Drop J Repair 59	Drop J Repair 60	Drop J Repair 61	Drop J Repair 62
Drop J Repair 63	Drop J Repair 64	Drop J Repair 64	Drop J Repair 66a	Drop J Repair 66b	Drop J Repair 67a
Drop J Repair 67b	Drop J Repair 68	Drop J Repair 69	Drop J Repair 70	Drop J Repair 71	Drop J Repair 72

Drop J – Photo Schedule

Drop J Repair 73	Drop J Repair 74	Drop J Repair 75	Drop J Repair 76	Drop J Repair 77	Drop J Repair 78
Drop J Repair 79	Drop J Repair 80	Drop J Repair 81	Drop J Repair 82	Drop J Repair 83	Drop J Repair 84a
Drop J Repair 84b	Drop J Repair 85	Drop J Repair 86	Drop J Repair 87	Drop J Repair 88	Drop J Repair 89
Drop J Repair 90	Drop J Repair 91	Drop J Repair 92	Drop J Repair 93	Drop J Repair 94	Drop J Repair 95
Drop J Repair 96	Drop J Repair 97	Drop J Repair 98	Drop J Repair 99	Drop J Repair 100	Drop J Repair 101

Drop J – Photo Schedule

Drop J Repair 102	Drop J Repair 103	Drop J Repair 104	Drop J Repair 105	Drop J Repair 106	Drop J Repair 107
Drop J Repair 108	Drop J Repair 109	Drop J Repair 110	Drop J Repair 111	Drop J Repair 112	Drop J Repair 113
Drop J Repair 114	Drop J Repair 115	Drop J Repair 116	Drop J Repair 117	Drop J Repair 118	Drop J Repair 119
Drop J Repair 120	Drop J Repair 121	Drop J Repair 122	Drop J Repair 123	Drop J Repair 124	Drop J Repair 125
Drop J Repair 126	Drop J Repair 127	Drop J Repair 128	Drop J Repair 129	Drop J Repair 130	Drop J Repair 131a

Drop J – Photo Schedule

Drop J Repair 131b		Drop J Repair 131c		Drop J Repair d		Drop J Repair 132		Drop J Repair 133		Drop J Repair 134	
Drop J Repair 135		Drop J Repair 136		Drop J Repair 137		Drop J Repair 138		Drop J Repair 139		Drop J Repair 142	

Drop K – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L			
1	K	10	Window	Cavity	1200	300															Window
2	K	10	Wall	Drummy							200	100	10								
3	K	10	Slab Edge	Drummy							150	100	10								
4	K	10	Wall	Concrete Repair	1000	200	30														
5	K	9	Wall	Missing Mortar																	x2
6a	K	9	Slab Edge	Concrete Repair	100	100	30														
6b	K	10	Soffit	Concrete Repair	1000	100	30														
7a	K	9	Wall	Concrete Repair	1000	300	30														
7b	K	10	Soffit	Concrete Repair	300	100	30														
8	K	9	Slab Edge	Concrete Repair	200	100	30														
9	K	8	Window	Missing Mortar	1000																Brick Fretting
10a	K	8	Window	Missing Mortar	150																Brick Fretting
10b	K	Roof	Slab Edge	Drummy							200	100	10								
10c	K	Roof	Slab Edge	Drummy							200	100	10								
11a	K	8	Slab Edge	Paint Bubble											1000	200					
11b	K	Roof	Slab Edge	Paint Bubble											200	200					
12a	K	8	Slab Edge	Paint Bubble											200	100					
12b	K	Roof	Slab Edge	Paint Bubble											200	200					
13	K	8	Wall	Drummy							500	100	20								
14	K	7	Window	Missing Mortar	1000																Brick Fretting
15	K	7	Wall	Drummy							300	100	20								
16	K	7	Slab Edge	Drummy							1000	400	20								
17	K	7	Wall	Drummy							400	200	20								
18	K	6	Slab Edge	Drummy							300	100	20								
19	K	6	Slab Edge	Drummy							600	200	20								
20	K	6	Wall	Concrete Repair	400	200	30														
21	K	6	Slab Edge	Concrete Repair	200	200	30														
22	K	5	Slab Edge	Drummy							200	100	20								
23	K	4	Slab Edge	Concrete Repair	2000	200	30														
24	K	4	Wall	Concrete Repair	1200	300	30														
25	K	3	Slab Edge	Paint Bubble											200	200					
26	K	2	Slab Edge	Concrete Repair	400	400	30														
27	K	1	Slab Edge	Drummy							200	100	20								
28	K	1	Window	Missing Mortar	1000																Brick Fretting

Drop K – Photo Schedule

Drop K Repair 1	Drop K Repair 2	Drop K Repair 3	Drop K Repair 4	Drop K Repair 5	Drop K Repair 6a
					
Drop K Repair 6b	Drop K Repair 7a	Drop K Repair 7b	Drop K Repair 8	Drop K Repair 9	Drop K Repair 10a
					
Drop K Repair 10b	Drop K Repair 10c	Drop K Repair 11a	Drop K Repair 11b	Drop K Repair 12a	Drop K Repair 12b
					
Drop K Repair 13	Drop K Repair 14	Drop K Repair 15	Drop K Repair 16	Drop K Repair 17	Drop K Repair 18
					
Drop K Repair 19	Drop K Repair 20	Drop K Repair 21	Drop K Repair 22	Drop K Repair 23	Drop K Repair 24
					

Drop K – Photo Schedule

Drop K Repair 25 	Drop K Repair 26 	Drop K Repair 27 	Drop K Repair 28 		
--	--	--	---	--	--

Drop L – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L	L			
1	L	10	Wall	Drummy			30				400	2500	10									
2	L	9	Wall	Drummy							1000	1000	10									
3	L	9	Wall	Drummy							1000	1000	10									
4	L	4	Wall	Drummy							2000	2000	10									
5	L	8	Wall	Drummy							2000	2000	10									
6	L	8	Wall	Drummy							2000	2000	10									
7	L	8	Wall	Concrete Repair	200	150	30															
8	L	7	Wall	Drummy							400	400	10									
9	L	7	Wall	Drummy							400	400	10									
10	L	7	Wall	Drummy							600	400	10									
11	L	7	Wall	Drummy							100	100	10									
12	L	6	Wall	Concrete Repair	400	400	30															
13	L	6	Wall	Drummy							400	400	10									
14	L	6	Wall	Drummy							400	400	10									
15	L	6	Wall	Drummy							1000	600	10									
16	L	6	Wall	Drummy							200	200	10									
17	L	6	Wall	Drummy							400	200	10									
18	L	6	Wall	Drummy							300	200	10									
19	L	5	Wall	Drummy							300	300	10									Old Repair 2000x300
20a	L	5	Wall	Old Repair																		Old Repair 2000x300
20b	L	5	Wall	Old Repair																		Old Repair 2000x300
20c	L	5	Wall	Old Repair																		Old Repair 2000x300
20d	L	5	Wall	Old Repair																		Old Repair 2000x300
21	L	5	Wall	Drummy							400	200	10									
22	L	5	Wall	Drummy							4000	600	10									

Drop L – Photo Schedule

Drop L Repair 1	Drop L Repair 2	Drop L Repair 3	Drop L Repair 4	Drop L Repair 5	Drop L Repair 6
Drop L Repair 7	Drop L Repair 8	Drop L Repair 9	Drop L Repair 10	Drop L Repair 11	Drop L Repair 12
Drop L Repair 13	Drop L Repair 14	Drop L Repair 15	Drop L Repair 16	Drop L Repair 17	Drop L Repair 18
Drop L Repair 19	Drop L Repair 20a	Drop L Repair 20b	Drop L Repair 20c	Drop L Repair 20d	Drop L Repair 21
Drop L Repair 22					

Drop M – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect	Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D	L	W	D		L	W	L	L			
1	M	10	Soffit	Rusty Fixings																			29	
2a	M	11	Wall	Paint Bubble														100	100					
2b	M	10	Soffit	Paint Bubble														100	100					
3	M	10	Soffit	Paint Bubble														200	200					
4a	M	11	Wall	Paint Bubble														100	100					
4b	M	10	Soffit	Rust Spot													1							
5	M	10	Soffit	Paint Bubble														400	200					
6a	M	11	Wall	Paint Bubble														100	100					
6b	M	10	Soffit	Paint Bubble														300	100					
7a	M	11	Wall	Rust Spot													1							
7b	M	10	Soffit	Concrete Repair	500	100	30																	
8	M	10	Floor	Drummy										300	150	10								
9a	M	11	Wall	Drummy										300	200	10								
9b	M	10	Floor	Drummy										2000	200	10								
10a	M	11	Wall	Poor Mortar	3000	2000																		
10b	M	10	Flo	Drummy										500	200	10								
11	M	10	Slab Edge	Concrete Repair	1200	200	30																	
12a	M	11	Slab Edge	Drummy										400	300	10								
12b	M	10	Slab Edge	Concrete Repair	200	300	30																	
13a	M	11	Window	Poor Mortar	1200	150																		
13b	M	Roof	Slab Edge	Concrete Repair	300	100	30																	
13c	M	10	Slab Edge	Concrete Repair	300	200	30																	
14a	M	10	Slab Edge	Paint Bubble														100	100					
14b	M	Roof	Slab Edge	Drummy										200	100	10								
15c	M	10	Slab Edge	Drummy										250	200	10								
15b	M	Roof	Slab Edge	Drummy										500	200	10								
15c	M	10	Slab Edge	Concrete Repair	200	100	30																	
16a	M	10	Slab Edge	Concrete Repair	100	100	30																	
16b	M	Roof	Slab Edge	Drummy										300	100	10								
17a	M	10	Slab Edge	Concrete Repair	300	200	30																	
17b	M	Roof	Slab Edge	Drummy										500	200	10								
18a	M	Roof	Slab Edge	Concrete Repair	1000	200	30																	
18b	M	Roof	Slab Edge	Drummy										400	200	10								
19a	M	7	Slab Edge	Drummy										2000	200	10								
19b	M	Roof	Slab Edge	Drummy										300	200	10								
19c	M	10	Slab Edge	Concrete Repair	300	200	30																	
20a	M	10	Slab Edge	Concrete Repair	400	200	30																	
20b	M	Roof	Slab Edge	Crack															2000					
21a	M	6	Slab Edge	Drummy										3000	200	10								
21b	M	9	Soffit	Concrete Repair	200	200	30																	
22	M	9	Soffit	Paint Bubble														200	100					
23a	M	5	Slab Edge	Drummy										4000	200	10								
23b	M	9	Soffit	Concrete Repair	300	100	30																	
24	M	9	Soffit	Rust Spot													2							
25a	M	4	Slab Edge	Drummy										3500	200	10								
25b	M	9	Soffit	Paint Bubble														300	300					

Drop M – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	L	W	D	L	L	W	D	L		L	W		L			
26a	M	3	Slab Edge	Drummy									3500	200	10									
26b	M	9	Soffit	Concrete Repair	400	200	30																	
27	M	9	Soffit	Concrete Repair	600	100	30																	
28a	M	2	Slab Edge	Drummy									3000	200	10									
28b	M	9	Soffit	Paint Bubble														400	200					
29	M	9	Soffit	Paint Bubble														300	300					
30a	M	1	Slab Edge	Drummy									4000	200	10									
30b	M	9	Soffit	Crack																100				
31	M	9	Soffit	Concrete Repair	100	100	30																	
32	M	9	Soffit	Concrete Repair	300	150	30																	
33	M	9	Soffit	Paint Bubble														1200	300					
34	M	9	Soffit	Concrete Repair	100	100	30																	
35	M	9	Floor	Concrete Repair	200	200	30																	
36	M	9	Floor	Concrete Repair	400	400	30																	
37	M	9	Slab Edge	Concrete Repair	300	200	30																	
38	M	9	Slab Edge	Concrete Repair	100	100	30																	
39	M	9	Slab Edge	Concrete Repair	100	100	30																	
40	M	9	Slab Edge	Crack																200				
41	M	9	Slab Edge	Concrete Repair	1000	200	30																	
42	M	9	Slab Edge	Crack																1000				
43	M	9	Slab Edge	Concrete Repair	200	100	30																	
44	M	9	Slab Edge	Crack																300				
45	M	9	Slab Edge	Concrete Repair	300	100	30																	
46	M	9	Slab Edge	Concrete Repair	300	200	30																	
47	M	9	Slab Edge	Concrete Repair	1400	300	30																	
48	M	8	Soffit	Rust Fixings																			30m	
49	M	8	Soffit	Concrete Repair	200	100	30																	
50	M	8	Soffit	Concrete Repair	300	100	30																	
51	M	8	Soffit	Concrete Repair	400	100	30																	
52	M	8	Soffit	Concrete Repair	200	100	30																	
53	M	8	Soffit	Rust Spot													1							
54	M	8	Soffit	Paint Bubble														4000	100					
55	M	8	Soffit	Concrete Repair	200	100	30																	
56	M	8	Soffit	Drummy									100	100	10									
57	M	8	Soffit	Drummy									400	400	10									
58	M	8	Soffit	Drummy									300	100	10									
59	M	8	Floor	Drummy									300	300	10									
60	M	8	Floor	Drummy									400	400	10									
61	M	8	Floor	Drummy									100	100	10									
62	M	8	Floor	Drummy									2000	500	10									
63	M	8	Floor	Drummy									4000	400	10									
64	M	8	Floor	Drummy									4000	400	10									
65	M	8	Slab Edge	Crack																100				
66	M	8	Slab Edge	Drummy									100	100	10									
67	M	8	Slab Edge	Crack																1000				
68	M	8	Slab Edge	Crack																100				x5

Drop M – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W					
69	M	8	Slab Edge	Drummy							200	100	10								
70	M	8	Slab Edge	Drummy							200	100	10								
71	M	8	Slab Edge	Drummy							200	100	10								
72	M	8	Slab Edge	Drummy							200	100	10								
73a	M	8	Slab Edge	Drummy							300	100	10								
73b	M	8	Slab Edge	Drummy							300	100	10								
74	M	7	Soffit	Concrete Repair	100	100	30														
75	M	7	Soffit	Concrete Repair	100	100	30														
76	M	7	Soffit	Paint Bubble	50	50	30														
77	M	7	Soffit	Concrete Repair	100	50	30														
78	M	7	Soffit	Concrete Repair	200	100	30														
79	M	7	Soffit	Rust Spot										1							
80	M	7	Soffit	Rust Fixings																36	
81	M	7	Floor	Drummy							400	400	10								
82	M	7	Floor	Drummy							400	300	10								
83	M	7	Floor	Drummy							1000	300	10								
84	M	7	Floor	Drummy							300	300	10								
85	M	7	Floor	Drummy							500	200	10								
86	M	7	Floor	Drummy							1000	200	10								
87	M	7	Floor	Drummy							1000	200	10								
88	M	7	Floor	Drummy							300	300	10								
89	M	7	Floor	Drummy							300	200	10								
90	M	7	Floor	Drummy							300	300	10								
91	M	7	Floor	Drummy							300	300	10								
92	M	7	Floor	Drummy							300	200	10								
93	M	7	Slab Edge	Drummy							300	200	10								
94	M	7	Slab Edge	Crack													1000				
95	M	7	Slab Edge	Crack													300				
96	M	7	Slab Edge	Crack													400				
97	M	7	Slab Edge	Drummy							400	200	10								
98	M	7	Slab Edge	Crack													3500				
99	M	7	Slab Edge	Crack													200				
100	M	7	Slab Edge	Drummy							300	200	10								
101	M	6	Soffit	Paint Bubble											100	100					
102	M	6	Soffit	Paint Bubble											100	100					
103	M	6	Soffit	Drummy							100	100	10								
104	M	6	Soffit	Paint Bubble											100	100					
105	M	6	Soffit	Paint Bubble											100	100					
106	M	6	Soffit	Paint Bubble											100	100					
107	M	6	Soffit	Drummy							300	100	10								
108	M	6	Soffit	Drummy							500	200	10								
109	M	6	Soffit	Paint Bubble							300	100	10								
110	M	6	Floor	Drummy							1000	1000	10								
111	M	6	Floor	Drummy							1500	1000	10								
112	M	6	Floor	Drummy							400	400	10								
113	M	6	Floor	Drummy							400	200	10								

Drop M – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L			
114	M	6	Floor	Drummy							400	100	10								
115	M	6	Floor	Drummy							800	800	10								
116	M	6	Slab Edge	Drummy							200	100	10								
117	M	6	Slab Edge	Drummy							200	100	10				100				
118	M	6	Slab Edge	Crack													100				
119	M	6	Slab Edge	Crack													100				
120	M	6	Slab Edge	Crack													100				
121	M	6	Slab Edge	Crack													100				
122	M	6	Slab Edge	Drummy				100	100	10											
123	M	5	Soffit	Concrete Repair	200	100	30														
124	M	5	Soffit	Concrete Repair	100	100	30														
125	M	5	Soffit	Rust Spot										2							
126	M	5	Soffit	Paint Bubble											100	100					
127	M	5	Soffit	Paint Bubble											200	200					
128	M	5	Soffit	Paint Bubble											300	300					
129	M	5	Soffit	Paint Bubble											300	300					
130	M	5	Soffit	Rust Fixings																20	
131	M	5	Floor	Drummy							2000	1000	10								
132	M	5	Floor	Drummy							300	300	10								
133	M	5	Floor	Drummy							300	300	10								
134	M	5	Floor	Drummy							300	300	10								
135	M	5	Floor	Drummy							400	400	10								
136	M	5	Floor	Drummy							400	400	10								
137	M	5	Floor	Drummy							400	400	10								
138	M	5	Slab Edge	Drummy							200	200	10								
139	M	5	Slab Edge	Drummy							1200	300	10								
140	M	5	Slab Edge	Drummy							200	200	10								
141	M	5	Slab Edge	Drummy							100	200	10								
142	M	5	Slab Edge	Paint Bubble											100	100					
143	M	5	Slab Edge	Drummy							100	200	10								
144	M	5	Slab Edge	Drummy							200	200	10								
145	M	5	Slab Edge	Drummy							400	200	10								
146	M	5	Slab Edge	drummy/Crack							600	100	10								
147	M	5	Slab Edge	Drummy							200	200	10								
148	M	5	Slab Edge	Drummy							100	100	10								
149	M	4	Soffit	Drummy							200	100	10								
150	M	4	Soffit	Drummy							100	100	10								
151	M	4	Soffit	Rust Spot										5							
152	M	4	Soffit	Paint Bubble											400	100					
153	M	4	Soffit	Rust Fixings																25	
154	M	4	Floor	Drummy							400	400	10								
155	M	4	Floor	Drummy							1200	500	10								
156	M	4	Floor	Drummy							2000	500	10								
157	M	4	Floor	Drummy							1200	1000	10								
158	M	4	Floor	Drummy							1400	1200	10								
159	M	4	Floor	Drummy							2200	600	10								

Drop M – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D	L		L	W					
160	M	4	Floor	Drummy							600	600	10									
161	M	4	Floor	Drummy							200	200	10									
162	M	4	Slab Edge	Drummy							100	100	10									
163	M	4	Slab Edge	Drummy							100	100	10									
164	M	4	Slab Edge	Drummy							100	100	10									
165	M	4	Slab Edge	Drummy							200	100	10									
166	M	4	Slab Edge	Crack														100				
167	M	4	Slab Edge	Crack														100				
168	M	4	Slab Edge	Drummy							400	100	10									
169	M	4	Slab Edge	Drummy							300	100	10									
170	M	4	Slab Edge	Crack							100	100	10									
171a	M	4	Slab Edge	Crack														100				
171b	M	4	Slab Edge	Crack														100				
172	M	4	Slab Edge	Drummy							100	100	10									
173	M	4	Slab Edge	Drummy							1000	100	10									
174	M	3	Soffit	Paint Bubble												200	100					
175	M	3	Soffit	Crack														100				
176	M	3	Soffit	Crack														100				
177a	M	3	Soffit	Concrete Repair	300	100	30															
177b	M	3	Soffit	Concrete Repair	300	100	30															
178	M	3	Soffit	Concrete Repair	300	100	30															
179	M	3	Soffit	Concrete Repair	300	100	30															
180a	M	3	Soffit	Concrete Repair	300	100	30															
180b	M	3	Soffit	Paint Bubble												600	100				20	
181	M	3	Soffit	Rust Fixings																		
182	M	3	Floor	Drummy							1000	1000	10									
183	M	3	Floor	Drummy							2000	200	10									
184	M	3	Floor	Drummy							600	600	10									
185	M	3	Floor	Drummy							200	200	10									
186	M	3	Floor	Drummy							600	200	10									
187	M	3	Floor	Paint Bubble												100	100					
188	M	3	Floor	Drummy							1200	400	10									
189	M	3	Floor	Drummy							600	400	10									
190	M	3	Floor	Drummy							600	400	10									
191	M	3	Slab Edge	Drummy							1000	200	10									
192	M	3	Slab Edge	Drummy							200	200	10									
193	M	3	Slab Edge	Drummy							600	200	10									
194	M	3	Slab Edge	Drummy							300	200	10									
195	M	3	Slab Edge	Drummy							300	200	10									
196	M	3	Slab Edge	Drummy							200	100	10									
197	M	3	Slab Edge	Drummy							1000	200	10									
198	M	1	Soffit	Concrete Repair	1200	200	30															
199	M	1	Soffit	Concrete Repair	200	200	30															
200	M	1	Soffit	Concrete Repair	300	200	30															
201	M	1	Soffit	Paint Bubble												200	100					
202	M	1	Soffit	Paint Bubble												400	300					

Drop M – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
203	M	1	Soffit	Concrete Repair	100	100	30															
204	M	1	Soffit	Concrete Repair	400	200	30															
205	M	1	Soffit	Concrete Repair	400	200	30															
206	M	1	Soffit	Concrete Repair	100	100	30															
207	M	1	Soffit	Rust Fixings																	26	
208	M	1	Soffit	Rust Spot										4								
209	M	1	Floor	Drummy							400	400	10									
210	M	1	Floor	Drummy							200	200	10									
211	M	1	Floor	Drummy							2500	400	10									
212	M	1	Floor	Drummy							2000	300	10									
213	M	1	Floor	Drummy							4000	1000	10									

Drop M – Photo Schedule

Drop M Repair 1	Drop M Repair 2a	Drop M Repair 2b	Drop M Repair 3	Drop M Repair 4a	Drop M Repair 4b
Drop M Repair 5	Drop M Repair 6a	Drop M Repair 6b	Drop M Repair 7a	Drop M Repair 7b	Drop M Repair 8
Drop M Repair 9a	Drop M Repair 9b	Drop M Repair 10a	Drop M Repair 10b	Drop M Repair 11	Drop M Repair 12a
Drop M Repair 12b	Drop M Repair 13a	Drop M Repair 13b	Drop M Repair 13c	Drop M Repair 14a	Drop M Repair 14b
Drop M Repair 15a	Drop M Repair 15b	Drop M Repair 15c	Drop M Repair 16a	Drop M Repair 16b	Drop M Repair 17a

Drop M – Photo Schedule

Drop M Repair 17b		Drop M Repair 18a		Drop M Repair 18b		Drop M Repair 19a		Drop M Repair 19b		Drop M Repair 19c	
Drop M Repair 20a		Drop M Repair 20b		Drop M Repair 21a		Drop M Repair 21b		Drop M Repair 22		Drop M Repair 23a	
Drop M Repair 23b		Drop M Repair 24		Drop M Repair 25a		Drop M Repair 25b		Drop M Repair 26a		Drop M Repair 26b	
Drop M Repair 27		Drop M Repair 28a		Drop M Repair 28b		Drop M Repair 29		Drop M Repair 30a		Drop M Repair 30b	
Drop M Repair 31		Drop M Repair 32		Drop M Repair 33		Drop M Repair 34		Drop M Repair 35		Drop M Repair 36	

Drop M – Photo Schedule

Drop M Repair 37		Drop M Repair 38		Drop M Repair 39		Drop M Repair 40		Drop M Repair 41		Drop M Repair 42	
Drop M Repair 43		Drop M Repair 44		Drop M Repair 45		Drop M Repair 46		Drop M Repair 47		Drop M Repair 48	
Drop M Repair 49		Drop M Repair 50		Drop M Repair 51		Drop M Repair 52		Drop M Repair 53		Drop M Repair 54	
Drop M Repair 55		Drop M Repair 56		Drop M Repair 57		Drop M Repair 58		Drop M Repair 59		Drop M Repair 60	
Drop M Repair 61		Drop M Repair 62		Drop M Repair 63		Drop M Repair 64		Drop M Repair 65		Drop M Repair 66	

Drop M – Photo Schedule

Drop M Repair 67	Drop M Repair 68	Drop M Repair 69	Drop M Repair 70	Drop M Repair 71	Drop M Repair 72
Drop M Repair 73a	Drop M Repair 73b	Drop M Repair 74	Drop M Repair 75	Drop M Repair 76	Drop M Repair 77
Drop M Repair 78	Drop M Repair 79	Drop M Repair 80	Drop M Repair 81	Drop M Repair 82	Drop M Repair 83
Drop M Repair 84	Drop M Repair 85	Drop M Repair 86	Drop M Repair 87	Drop M Repair 88	Drop M Repair 89
Drop M Repair 90	Drop M Repair 91	Drop M Repair 92	Drop M Repair 93	Drop M Repair 94	Drop M Repair 95

Drop M – Photo Schedule

Drop M Repair 96	Drop M Repair 97	Drop M Repair 98	Drop M Repair 99	Drop M Repair 100	Drop M Repair 101
Drop M Repair 102	Drop M Repair 103	Drop M Repair 104	Drop M Repair 105	Drop M Repair 106	Drop M Repair 107
Drop M Repair 108	Drop M Repair 109	Drop M Repair 110	Drop M Repair 111	Drop M Repair 112	Drop M Repair 113
Drop M Repair 114	Drop M Repair 115	Drop M Repair 116	Drop M Repair 117	Drop M Repair 118	Drop M Repair 119
Drop M Repair 120	Drop M Repair 121	Drop M Repair 122	Drop M Repair 123	Drop M Repair 124	Drop M Repair 125

Drop M – Photo Schedule

Drop M Repair 126		Drop M Repair 127		Drop M Repair 128		Drop M Repair 129		Drop M Repair 130		Drop M Repair 131	
Drop M Repair 132		Drop M Repair 133		Drop M Repair 134		Drop M Repair 135		Drop M Repair 136		Drop M Repair 137	
Drop M Repair 138		Drop M Repair 139		Drop M Repair 140		Drop M Repair 141		Drop M Repair 142		Drop M Repair 143	
Drop M Repair 144		Drop M Repair 145		Drop M Repair 146		Drop M Repair 147		Drop M Repair 148		Drop M Repair 149	
Drop M Repair 150		Drop M Repair 151		Drop M Repair 152		Drop M Repair 153		Drop M Repair 154		Drop M Repair 155	

Drop M – Photo Schedule

Drop M Repair 156		Drop M Repair 157		Drop M Repair 158		Drop M Repair 159		Drop M Repair 160		Drop M Repair 161	
Drop M Repair 162		Drop M Repair 163		Drop M Repair 164		Drop M Repair 165		Drop M Repair 166		Drop M Repair 167	
Drop M Repair 168		Drop M Repair 169		Drop M Repair 170		Drop M Repair 171		Drop M Repair 172		Drop M Repair 173	
Drop M Repair 174		Drop M Repair 175		Drop M Repair 176		Drop M Repair 177a		Drop M Repair 177b		Drop M Repair 178	
Drop M Repair 179		Drop M Repair 180a		Drop M Repair 180b		Drop M Repair 181		Drop M Repair 182		Drop M Repair 183	

Drop M – Photo Schedule

Drop M Repair 184		Drop M Repair 185		Drop M Repair 186		Drop M Repair 187		Drop M Repair 188		Drop M Repair 189	
Drop M Repair 190		Drop M Repair 191		Drop M Repair 192		Drop M Repair 193		Drop M Repair 194		Drop M Repair 195	
Drop M Repair 196		Drop M Repair 197		Drop M Repair 198		Drop M Repair 199		Drop M Repair 200		Drop M Repair 201	
Drop M Repair 202		Drop M Repair 203		Drop M Repair 204		Drop M Repair 205		Drop M Repair 206		Drop M Repair 207	
Drop M Repair 208		Drop M Repair 209		Drop M Repair 210		Drop M Repair 211		Drop M Repair 212		Drop M Repair 213	

Drop N –Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L			
1	N	11	Wall	Drummy							6000	500	10								
2	N																				
3	N	11	Wall	Crack													2000				
4	N																				
5	N	11	Wall	Drummy							200	200	10								
6	N																				
7	N																				
8	N	11	Wall	Drummy							2500	200	10								
9	N																				
10	N																				
11	N	11	Slab Edge	Drummy							500	200	10								
12	N																				
13	N																				
14	N	10	Slab Edge	Drummy							1500	200	10								
15	N																				
16	N	9	Slab Edge	Drummy							1500	200	10								
17	N	9	Slab Edge	Drummy							1500	200	10								
18	N	8	Slab Edge	Drummy							500	200	10								
19	N																				
20	N	7	Wall	Missing Mortar	300																
21	N																				
22	N	6	Slab Edge	Drummy							400	200	10								
23	N																				
24	N	5	Slab Edge	Drummy							200	200	10								
25	N																				
26	N																				
27	N	3	Slab Edge	Drummy							200	200	10								
28	N																				
29	N	2	Slab Edge	Drummy							200	100	10								

Drop N – Photo Schedule

Drop N Repair 1	Drop N Repair 3	Drop N Repair 5	Drop N Repair 8	Drop N Repair 11	Drop N Repair 14
Drop N Repair 16	Drop N Repair 17	Drop N Repair 18	Drop N Repair 19	Drop N Repair 20	Drop N Repair 22
Drop N Repair 24	Drop N Repair 27	Drop N Repair 29			

Drop O – Photo Schedule

Drop O Repair 1	Drop O Repair 2	Drop O Repair 3	Drop O Repair 4	Drop O Repair 5	Drop O Repair 6

Drop O – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D		L	W					
1	O	3	Soffit	Concrete Repair	150	100	30																
2	O	3	Soffit	Concrete Repair	150	100	30																
3	O	3	Soffit	Paint Bubble																			
4	O	3	Soffit	Paint Bubble													100	100					
5	O	3	Soffit	Concrete Repair	100	100	30										100	100					
6	O	3	Soffit	Paint Bubble													250	100					
7a	O	3	Soffit	Drummy									250	100	10								
7b	O	3	Balustrade	Drummy									300	300	10								
8	O	3	Slab Edge	Drummy									1400	200	10								
9	O	3	Balustrade	Paint Bubble													300	100					
10	O	3	Balustrade	Paint Bubble													200	100					
11	O	3	Balustrade	Drummy													300	100					
12	O	3	Floor	Broken Tile																			x1
13	O	3	Balustrade	Drummy									100	100	10								
14	O	2	Soffit	Concrete Repair	300	150	30												2000				200x100
15	O	2	Soffit	Concrete Repair	350	200	30																200x100
16	O	2	Soffit	Rust Spot												1							
17	O	2	Soffit	Paint Bubble													100	100					
18	O	2	Wall	Crack																			
19a	O	2	Wall	Damaged Bricks																			200x100
19b	O	2	Wall	Damaged Bricks																			200x100
20	O	2	Floor	Missing Tiles																			300x120
21	O	2	Balustrade	Paint Bubble													150	150					
22	O	2	Balustrade	Drummy									150	150	10								
23	O	2	Balustrade	Concrete Repair	150	100	30																
24	O	2	Balustrade	Rust Spot												1							
25	O	2	Balustrade	Paint Bubble													100	50					
26	O	2	Balustrade	Paint Bubble													100	50					
27	O	2	Slab Edge	Drummy									1200	250	10								
28a	O	Roof	Slab Edge	Drummy									400	200	10								
28b	O	2	Balustrade	Concrete Repair	300	100	30																
29a	O	Roof	Slab Edge	Drummy									400	200	10								
29b	O	2	Balustrade	Concrete Repair	200	100	30																
30	O	2	Balustrade	Crack															300				
31	O	2	Slab Edge	Concrete Repair	200	100	30																
32	O	2	Slab Edge	Concrete Repair	350	100	30																
33	O	1	Balustrade	Drummy									300	300	10								

Drop O – Photo Schedule

Drop O Repair 7a	Drop O Repair 7b	Drop O Repair 8	Drop O Repair 9	Drop O Repair 10	Drop O Repair 11
Drop O Repair 12	Drop O Repair 13	Drop O Repair 14	Drop O Repair 15	Drop O Repair 16	Drop O Repair 17
Drop O Repair 18	Drop O Repair 19a	Drop O Repair 19b	Drop O Repair 20	Drop O Repair 21	Drop O Repair 22
Drop O Repair 23	Drop O Repair 24	Drop O Repair 25	Drop O Repair 26	Drop O Repair 27	Drop O Repair 28a
Drop O Repair 28b	Drop O Repair 29a	Drop O Repair 29b	Drop O Repair 30	Drop O Repair 31	Drop O Repair 32

Drop P – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
1	P	3	Soffit	Concrete Repair	100	100	30															
2	P	3	Soffit	Poor Mortar	200																	
3	P	3	Soffit	Con	300	100	30															
4a	P	3	Wall	Broken Bricks													300x150					
4b	P	3	Wall	Broken Bricks													300x150					
5	P	3	Wall	Poor Mortar	1000	200	30															
6	P	2	Soffit	Concrete Repair	200	200	30															
7	P	2	Wall	Poor Mortar	600	300	30															
8	P	2	Wall	Crack													200					
9	P	2	Wall	Broken Bricks																		
10	P	2	Slab Edge	Drummy				100	100	10												
11	P	1	Soffit	Paint Bubble											600	300						
12	P	1	Soffit	Paint Bubble											100	100						
13	P	1	Soffit	Concrete Repair	200	100	30															
14	P	1	Soffit	Paint Bubble											500	150						
15	P	1	Soffit	Rust Spot										2								
16	P	1	Slab Edge	Drummy				200	100	10												
17	P	1	Wall	Broken Bricks																		x2
18	P	3	Slab Edge	Drummy				1000	250	10												
19a	P	2	Slab Edge	Drummy				2400	250	10												
19b	P	3	Slab Edge	Drummy				300	250	10												
20	P	2	Slab Edge	Drummy				1200	100	10												
21	P	1	Slab Edge	Drummy				1200	250	10												
22	P	1	Slab Edge	Drummy				600	250	10												
30	P	Roof	Slab Edge	Drummy				200	200	10												

Drop P – Photo Schedule

Drop P Repair 2	Drop P Repair 2	Drop P Repair 3	Drop P Repair 4a	Drop P Repair 4b	Drop P Repair 5
Drop P Repair 6	Drop P Repair 7	Drop P Repair 8	Drop P Repair 9	Drop P Repair 10	Drop P Repair 11
Drop P Repair 12	Drop P Repair 13	Drop P Repair 14	Drop P Repair 15	Drop P Repair 16	Drop P Repair 17
Drop P Repair 18	Drop P Repair 19a	Drop P Repair 19b	Drop P Repair 20	Drop P Repair 21	Drop P Repair 22
Drop P Repair 30					

Drop Q – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
1	Q	3	Soffit	Paint Bubble											100	100						
2	Q	3	Soffit	Rust Spot										1								
3	Q	3	Balustrade	Drummy							300	300	20									
4	Q	3	Balustrade	Paint Bubble											200	100						
5	Q	3	Slab Edge	Crack													200					
6	Q	2	Soffit	Concrete Repair	1000	1000	30															
7	Q	2	Soffit	Concrete Repair	100	100	30															
8	Q	2	Soffit	Concrete Repair	100	100	30															
9	Q	2	Soffit	Concrete Repair	100	100	30															
10	Q	2	Soffit	Concrete Repair	400	400	30															
11	Q	2	Soffit	Paint Bubble											150	100						
12	Q	2	Soffit	Paint Bubble											100	100						
13	Q	2	Soffit	Paint Bubble											200	100						
14	Q	2	Soffit	Paint Bubble											400	400						
15	Q	2	Balustrade	Drummy							200	200	20									
16	Q	2	Balustrade	Drummy							200	200	20									
17	Q	1	Soffit	Concrete Repair	200	100	30															
18	Q	1	Floor	Drummy							3000	200	20									
19	Q	1	Floor	Drummy							1500	1000	20									

Drop Q – Photo Schedule

Drop Q Repair 1		Drop Q Repair 2		Drop Q Repair 3		Drop Q Repair 4		Drop Q Repair 5		Drop Q Repair 6	
Drop Q Repair 7		Drop Q Repair 8		Drop Q Repair 9		Drop Q Repair 10		Drop Q Repair 11		Drop Q Repair 12	
Drop Q Repair 13		Drop Q Repair 14		Drop Q Repair 15		Drop Q Repair 16		Drop Q Repair 17		Drop Q Repair 18	
Drop Q Repair 19											

Drop R – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
1	R	3	Slab Edge	Paint Bubble											200	100						
2	R	3	Floor	Lifting Tiles																	2000x2000	
3	R	2	Soffit	Drummy								800	100	20								
4	R	2	Soffit	Drummy								100	100	20								
5	R	2	Soffit	Rust Spot										1								
6	R	2	Slab Edge	Concrete Repair	1200	200	30															
7	R	2	Slab Edge	Concrete Repair	400	200	30															
8	R	1	Soffit	Concrete Repair	400	200	30															
9	R	1	Soffit	Concrete Repair	200	100	30															
10	R	3	Slab Edge	Drummy							1000	200	20									
11	R	3	Slab Edge	Drummy							400	200	20									
12	R	2	Slab Edge	Concrete Repair	1000	200	30															
13	R	2	Slab Edge	Drummy							2000	200	20									
14a	R	1	Window Frame	Poor/Seal on Window																	On all Drops	
14b	R	1	Window Frame	Poor/Seal on Window																	On all Drops	
14c	R	1	Window Frame	Poor/Seal on Window																	On all Drops	
31	R	Roof	Slab Edge	Drummy							400	200	20									

Drop R – Photo Schedule

Drop R Repair 1	Drop R Repair 2	Drop R Repair 3	Drop R Repair 4	Drop R Repair 5	Drop R Repair 6
Drop R Repair 7	Drop R Repair 8	Drop R Repair 9	Drop R Repair 10	Drop R Repair 11	Drop R Repair 12
Drop R Repair 13	Drop R Repair 14a	Drop R Repair 14b	Drop R Repair 14c	Drop R Repair 31	

Drop S – Photo Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W	L	L			
1	S	3	Soffit	Concrete Repair	200	100	30																	
2	S	3	Soffit	Concrete Repair	100	100	30																	
3	S	3	Soffit	Paint Bubble														300	300					
4	S	3	Soffit	Paint Bubble														100	100					
5	S	3	Balustrade	Drummy									200	200	20	20								
6	S	3	Balustrade	Drummy									200	200	20	20								
7	S	3	Balustrade	Drummy									200	200	20	20								
8	S	3	Slab Edge	Drummy									400	200	20	20								
9	S	3	Wall	Broken Brick																				
10	S	2	Soffit	Concrete Repair	400	400	30																	
11a	S	3	Slab Edge	Drummy									1000	300	20	20								
11b	S	2	Soffit	Concrete Repair	300	300	30																	
12a	S	3	Slab Edge	Drummy									500	300	20	20								
12b	S	2	Soffit	Concrete Repair	200	100	30																	
13a	S	3	Slab Edge	Drummy									500	300	20	20								
13b	S	2	Soffit	Concrete Repair	400	200	30																	
14a	S	2	Window	No Sealant																				2.6m
14b	S	2	Window	No Sealant																				2.6m
14c	S	2	Soffit	Concrete Repair	300	150	30																	
15a	S	2	Slab Edge	Drummy									300	150	20	20								
15b	S	2	Soffit	Concrete Repair	200	150	30																	
16a	S	2	Slab Edge	Drummy									400	250	20	20								
16b	S	2	Soffit	Concrete Repair	200	100	30																	
17a	S	1	Window	No Sealant																				1.6m
17b	S	2	Soffit	Concrete Repair	200	100	30																	
18a	S	1	Wall	Poor Mortar	300	300	30																	
18b	S	2	Soffit	Drummy									1000	1000	20	20								
19	S	2	Wall	Broken Brick																				x3
20	S	2	Balustrade	Drummy									150	150	20	20								
22	S	1	Soffit	Concrete Repair	1200	250	30																	
23	S	1	Wall	Broken Brick																				x2
24	S	1	Balustrade	Concrete Repair	300	100	30																	
25	S	1	Balustrade	Concrete Repair	100	50	30																	
26	S	1	Floor	Concrete Repair	4000	200	30																	
27	S	1	Slab Edge	Drummy									100	100	20	20								
32	S	Roof	Slab Edge	Drummy									400	200	20	20								
33	S	Roof	Slab Edge	Drummy									600	400	20	20								
34	S	Roof	Slab Edge	Drummy									400	400	20	20								

Drop S – Photo Schedule

Drop S Repair 1	Drop S Repair 2	Drop S Repair 3	Drop S Repair 4	Drop S Repair 5	Drop S Repair 6
Drop S Repair 7	Drop S Repair 8	Drop S Repair 9	Drop S Repair 10	Drop S Repair 11	Drop S Repair 11b
Drop S Repair 12a	Drop S Repair 12b	Drop S Repair 13a	Drop S Repair 13b	Drop S Repair 14a	Drop S Repair 14b
Drop S Repair 14c	Drop S Repair 15a	Drop S Repair 15b	Drop S Repair 16a	Drop S Repair 16b	Drop S Repair 17a
Drop S Repair 17b	Drop S Repair 18a	Drop S Repair 18b	Drop S Repair 19	Drop S Repair 20	Drop S Repair 22

Drop S – Photo Schedule

Drop S Repair 23 	Drop S Repair 24 	Drop S Repair 25 	Drop S Repair 26 	Drop S Repair 27 	Drop S Repair 32 	
Drop S Repair 33 	Drop S Repair 34 					

Drop T – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
1	T	3	Soffit	Concrete Repair	1000	200	30															
2	T	3	Soffit	Paint Bubble												400	300					
3	T	3	Soffit/Wall	Crack													500x20					
4	T	3	Wall	Crack/Broken Brick													200					
5	T	2	Soffit	Concrete Repair	200	200	30															
6	T	2	Wall	Broken Brick																		x4
7	T	2	Slab Edge	Drummy								150	150	20								
8	T	1	Soffit	Drummy								100	100	20								
9	T	1	Wall	Broken Brick																		x1
10	T	1	Floor	Drummy				3000	1200	20												
19	T	1	Slab Edge	Drummy								1600	300	20								
20	T	1	Slab Edge	Drummy								400	200	20								
35	T	Roof	Slab Edge	Drummy								1200	400	20								

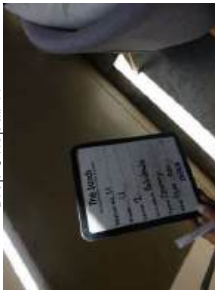
Drop T – Photo Schedule

Drop T Repair 1		Drop T Repair 2		Drop T Repair 3		Drop T Repair 4		Drop T Repair 5		Drop T Repair 6	
Drop T Repair 7		Drop T Repair 8		Drop T Repair 9		Drop T Repair 10		Drop T Repair 19		Drop T Repair 20	
Drop T Repair 35											

Drop U – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
1	U	3	Soffit	Paint Bubble											600	100						
2	U	3	Soffit	Paint Bubble											100	100						
3	U	3	Soffit	Drummy							200	100	20									
4	U	3	Soffit	Rust Spot										1								
5	U	3	Wall	Hand Rail Fixing																		
6	U	3	Balustrade	Drummy							100	50	20									
7	U	3	Slab Edge	Drummy							400	200	20									
9	U	2	Soffit	Rust Spot										3								
10	U	2	Balustrade	Drummy							400	400	20									
11	U	2	Balustrade	Drummy							400	400	20									
12	U	2	Wall	Old Fixing																	100x100	
13	U	2	Slab Edge	Drummy							200	100	20									
14	U	2	Slab Edge	Drummy							200	100	20									
15a	U	2	Floor	Drummy							1500	1000	20									
15b	U	1	Soffit	Concrete Repair	200	150	30															
16	U	1	Soffit	Concrete Repair	400	300	30															
17	U	1	Soffit	Concrete Repair	200	200	30															
18	U	1	Balustrade	Drummy							150	100	20									
19	U	1	Slab Edge	Drummy							200	100	20									
36	U	Roof	Slab Edge	Drummy							800	200	20									
37	U	Roof	Slab Edge	Drummy							200	200	20									
38	U	Roof	Slab Edge	Drummy							400	200	20									

Drop U – Photo Schedule

Drop U Repair 1		Drop U Repair 2		Drop U Repair 3		Drop U Repair 4		Drop U Repair 5		Drop U Repair 6	
Drop U Repair 7		Drop U Repair 9		Drop U Repair 10		Drop U Repair 11		Drop U Repair 12		Drop U Repair 13	
Drop U Repair 14		Drop U Repair 15a		Drop U Repair 15b		Drop U Repair 16		Drop U Repair 17		Drop U Repair 18	
Drop U Repair 19		Drop U Repair 36		Drop U Repair 37		Drop U Repair 38					

Drop V – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
1	V	3	Soffit	Paint Bubble											500	100						
2	V	3	Soffit	Concrete Repair	200	50	30															
3	V	3	Soffit	Concrete Repair	100	50	30															
4	V	3	Slab Edge	Concrete Repair	600	200	30															
5	V	2	Soffit	Concrete Repair	400	200	30															
6	V	2	Soffit	Paint Bubble											50	50						
7	V	2	Slab Edge	Drumny				300	100	20	300	200	20									
8	V	2	Slab Edge	Drumny				300	200	20	300	200	20									
9	V	1	Wall	Old Balustrade Fixing																		100X100
10	V	1	Slab Edge	Drumny							600	200	20									
11	V	1	Slab Edge	Paint Bubble											400	200						
12	V	1	Slab Edge	Drumny				600	100	20	600	100	20									
13	V	3	Slab Edge	Seal Falling Out																		
14	V	3	Slab Edge	Drumny				600	200	20	600	200	20									
15	V	2	Window Frame	No Seal																		
16	V	2	Slab Edge	Drumny				400	200	20	400	200	20									
17	V	2	Slab Edge	Drumny				400	200	20	400	200	20									
18	V	1	Window Frame	Poor Seal																		
19	V	1	Slab Edge	Drumny				200	100	20	200	100	20									
39	V	Roof	Slab Edge	Drumny				600	400	20	600	400	20									

Drop V – Photo Schedule

Drop V Repair 1		Drop V Repair 2		Drop V Repair 3		Drop V Repair 4		Drop V Repair 5		Drop V Repair 6	
Drop V Repair 7		Drop V Repair 8		Drop V Repair 9		Drop V Repair 10		Drop V Repair 11		Drop V Repair 12	
Drop V Repair 13		Drop V Repair 14		Drop V Repair 15		Drop V Repair 16		Drop V Repair 17		Drop V Repair 18	
Drop V Repair 19		Drop V Repair 39									

Drop X – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L			
1	X-9	3	Soffit	Concrete Repair	100	100	30														
2	X-10	3	Soffit	Concrete Repair	200	100	30														
3	X-11	3	Soffit	Paint Bubble											100	100					
4	X-14	3	Soffit	Rust Spot										1							
5	X	3	Soffit	Rust Fixings																45	
6	X-15	3	Floor	Drummy							1000	400	10								
7	X-12	3	Floor	Drummy							1000	300	10								
8	X-11	3	Floor	Drummy							300	300	10								
9	X-11	3	Floor	Drummy							1000	300	10								
10	X-9	3	Floor	Drummy							1000	600	10								
11	X-9	3	Slab Edge	Drummy							300	100	10								
12	X-16	2	Soffit	Concrete Repair	600	200	30														
13	X-14	2	Soffit	Concrete Repair	200	200	30														
14	X-13	2	Soffit	Concrete Repair	100	100	30														
14	X-15	2	Slab Edge	Drummy							200	100	10								
15	X-15	2	Soffit	Concrete Repair	200	100	30							4							
16a	X-11	2	Soffit	Rust Spot																	
16b	X-11	2	Soffit	Concrete Repair	250	100	30														
18	X	Roof	Slab Edge	Drummy							200	200	10								
19	X	Roof	Slab Edge	Drummy							400	200	10								
17	X-9	2	Soffit	Drummy							200	100	10								
18	X-9	2	Floor	Drummy				600	100	10											
19	X-9	2	Floor	Drummy				800	200	10											
20	X	Roof	Slab Edge	Drummy							200	200	10								
20	X-10	2	Floor	Drummy				200	200	10											
21	X	Roof	Slab Edge	Drummy							600	200	10								
21	X-11	2	Floor	Drummy				100	100	10											
22	X	Roof	Slab Edge	Drummy							400	200	10								
22a	X-13	2	Floor	Drummy				200	200	10											
22b	X-13	2	Floor	Drummy				200	200	10											
23	X	Roof	Slab Edge	Drummy							1400	200	10								
23	X-13	2	Floor	Drummy				1000	400	10											
24	X	Roof	Slab Edge	Drummy							400	200	10								
25	X	Roof	Slab Edge	Drummy							600	200	10								
25	X-15	2	Slab Edge	Drummy							500	100	10								
26	X	Roof	Slab Edge	Drummy							600	200	10								
26	X-15	2	Slab Edge	Drummy							500	100	10								
27	X	Roof	Slab Edge	Drummy							600	400	10								
27	X-14	2	Slab Edge	Drummy							300	100	10								
28	X-14	2	Slab Edge	Drummy							300	100	10								
29	X-14	2	Slab Edge	Drummy							300	100	10								
30	X-13	2	Slab Edge	Drummy							300	100	10								
31a	X-09	2	Soffit	Rusty Fixings																50	
31b	X-09	1	Soffit	Concrete Repair	200	200	30														
32	X-10	1	Soffit	Concrete Repair	300	100	30														
33	X-11	1	Soffit	Concrete Repair	300	100	30														

Drop X – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L	L			
34	X-13	1	Soffit	Concrete Repair	300	200	30															
35	X-14	1	Soffit	Concrete Repair	300	200	30															
36	X-14	1	Soffit	Concrete Repair	100	100	30															
37	X-14	1	Soffit	Drummy							100	100	10									
38	X-14	1	Soffit	Drummy							600	200	10									
39	X-14	1	Soffit	Drummy							300	200	10									
40	X-15	1	Soffit	Drummy							400	100	10									
41	X-15	1	Soffit	Drummy							400	200	10									
42	X-15	1	Soffit	Drummy							100	100	10									
43	X-15	1	Soffit	Drummy							400	100	10									
44	X-15	1	Soffit	Paint Bubble											150	100						
45	X-15	1	Soffit	Concrete Repair	400	100	30															
46	X-16	1	Soffit	Paint Bubble											150	150						
47	X-16	1	Floor	Drummy				600	200	10												
48	X-15	1	Floor	Drummy				400	400	10												
49	X-14	1	Floor	Drummy				400	400	10												
51	X-12	1	Floor	Drummy				600	200	10												
52	X-12	1	Floor	Drummy				1000	400	10												
55	X-10	1	Floor	Drummy				1400	1000	10												
56	X-09	1	Floor	Drummy				4000	1000	10												
60	X-12	1	Slab Edge	Drummy							500	100	10									
61	X-12	1	Slab Edge	Drummy							100	100	10									
64	X-14	1	Slab Edge	Drummy							400	100	10									
66	X-16	1	Slab Edge	Drummy							200	100	10									

Drop X – Photo Schedule

Drop X-9 Repair 1	Drop X-10 Repair 2	Drop X-11 Repair 3	Drop X-14 Repair 4	Drop X Repair 5	Drop X-15 Repair 6
					
Drop X-12 Repair 7	Drop X-11 Repair 8	Drop X-11 Repair 9	Drop X-15 Repair 10	Drop X-9 Repair 11	Drop X-16 Repair 12
					
Drop X-14 Repair 13	Drop X-13 Repair 14	Drop X-15 Repair 14	Drop X-15 Repair 15	Drop X-11 Repair 16a	Drop X-11 Repair 16b
					
Drop X-50 Repair 17	Drop X-9 Repair 18a	Drop X Repair 18b	Drop X Repair 19a	Drop X-9 Repair 19b	Drop X Repair 20a
					
Drop X-10 Repair 20b	Drop X Repair 21a	Drop X-11 Repair 21b	Drop X Repair 22a	Drop X-13 Repair 22b	Drop X Repair 23a
					

Drop X – Photo Schedule

Drop X-13 Repair 23b	Drop X Repair 24	Drop X Repair 25a	Drop X-15 Repair 25b	Drop X Repair 26a	Drop X-15 Repair 26b
Drop X Repair 27a	Drop X-14 Repair 27b	Drop X-14 Repair 28	Drop X-14 Repair 29	Drop X-13 Repair 30	Drop X-09 Repair 31a
Drop X-09 Repair 31b	Drop X-10 Repair 32	Drop X-11 Repair 33	Drop X-13 Repair 34	Drop X-14 Repair 35	Drop X-14 Repair 36
Drop X-14 Repair 37	Drop X-14 Repair 38	Drop X-14 Repair 39	Drop X-15 Repair 40	Drop X-15 Repair 41	Drop X-15 Repair 42
Drop X-15 Repair 43	Drop X-15 Repair 44	Drop X-15 Repair 45	Drop X-16 Repair 46	Drop X-16 Repair 47	Drop X-15 Repair 48

Drop X-14 Repair 49	
Drop X-13 Repair 50	
Drop X-12 Repair 51	
Drop X-12 Repair 52	
Drop X-11 Repair 53	
Drop X-11 Repair 54	
Drop X-12 Repair 55	
Drop X-09 Repair 56	
Drop X-11 Repair 57	
Drop X-11 Repair 58	
Drop X-11 Repair 59	
Drop X-12 Repair 60	
Drop X-12 Repair 61	
Drop X-13 Repair 62	
Drop X-13 Repair 63	
Drop X-14 Repair 64	
Drop X-15 Repair 65	
Drop X-16 Repair 66	

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment	
					L	W	D	L	W	D	L	W	D		L	W		D	L				L
1a	Y	3	Window	Poor/ Missing Sealant																			
1b	Y	3	Window	Poor/ Missing Sealant																		3m	
1c	Y	3	Window	Poor/ Missing Sealant																		3m	
2	Y	3	Balustrade	Poor Fixing																	50		
3	Y																						
4	Y	3	Slab Edge	Drummy								3000	200	10									
5a	Y	2	Window	Poor/ Missing Sealant																		3m	
5b	Y	2	Window	Poor/ Missing Sealant																		3m	
5c	Y	2	Window	Poor/ Missing Sealant																		3m	
6	Y	2	Balustrade	Drummy								300	200	10									
7	Y	2	Balustrade	Drummy								300	200	10									
8	Y	2	Balustrade	Drummy								200	200	10									
9	Y	2	Balustrade	Drummy								200	200	10									
10	Y	1	Soffit	Drummy								800	400	10									
11	Y	2	Slab Edge	Drummy								200	200	10									
12a	Y	1	Window	Poor/ Missing Sealant																		3m	
12b	Y	1	Window	Poor/ Missing Sealant																		3m	
12c	Y	1	Window	Poor/ Missing Sealant																		3m	
13a	Y	1	Window	Corrosion	1400					1400													
13b	Y	1	Window	Corrosion	1400					1400													
14a	Y	1	Slab Edge	Drummy								200	100	10									
14b	Y	Roof	Slab Edge	Drummy								600	200	10									
15	Y	Roof	Slab Edge	Drummy								600	200	10									
16	Y	Roof	Slab Edge	Drummy								600	200	10									
17a	Y	Roof	Slab Edge	Drummy								400	400	10									
17b	Y	Roof	Slab Edge	Drummy								400	400	10									

Drop Y – Photo Schedule

Drop Y Repair 1a	Drop Y Repair 1b	Drop Y Repair 1c	Drop Y Repair 2	Drop Y Repair 4	Drop Y Repair 5a
Drop Y Repair 5b	Drop Y Repair 5c	Drop Y Repair 6	Drop Y Repair 7	Drop Y Repair 8	Drop Y Repair 9
Drop Y Repair 10	Drop Y Repair 11	Drop Y Repair 12a	Drop Y Repair 12b	Drop Y Repair 12c	Drop Y Repair 13a
Drop Y Repair 13b	Drop Y Repair 14a	Drop Y Repair 14b	Drop Y Repair 15	Drop Y Repair 16	Drop Y Repair 17a
Drop Y Repair 17b					

Drop C Stairs – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D	L	W	L	W	L					
1	C Stairs	10	Wall	Crack															1000				
2	C Stairs	10	Wall	Crack															1000				
3	C Stairs	10	Wall	Paint Bubble														1000	500				
4	C Stairs	10	Wall	Concrete Repair	3000	500	30																
5	C Stairs	9	Soffit	Crack															1200				
6	C Stairs	9	Soffit	Concrete Repair	600	400	30																
7a	C Stairs	9	Soffit	Concrete Repair	300	100	30																
7b	C Stairs	9	Soffit	Paint Bubble													2400	1000					
8	C Stairs	9	Wall	Concrete Repair	600	400	30																
9	C Stairs	8	Slab Edge	Concrete Repair	1400	350	30																
10	C Stairs	8	Slab Edge	Concrete Repair	300	100	30																
11	C Stairs	8	Wall	Concrete Repair	300	100	30																
12	C Stairs	8	Wall	Concrete Repair	200	200	30																
13	C Stairs	8	Wall	Crack															1400				
14	C Stairs	8	Soffit	Paint Bubble													1000	500					
15	C Stairs	8	Soffit	Concrete Repair	300	300	30																
16	C Stairs	8	Soffit	Concrete Repair	280	200	30																
17	C Stairs	8	Soffit	Concrete Repair	100	100	30																
18	C Stairs	8	Soffit	Concrete Repair	400	400	30																
19	C Stairs	7	Slab Edge	Concrete Repair	400	100	30																
20	C Stairs	7	Soffit	Paint Bubble													1000	1000					
21	C Stairs	7	Wall	Concrete Repair	200	200	30																
22	C Stairs																						
23	C Stairs	7	Wall	Crack															300				
24	C Stairs	7	Wall	Concrete Repair	300	300	30																
25	C Stairs	7	Wall	Concrete Repair	400	400	30																
26a	C Stairs	6	Soffit	Concrete Repair	200	200	30																
26b	C Stairs	7	Soffit	Rust Spot																			
26c	C Stairs	7	Soffit	Rust Spot																			
27	C Stairs	7	Soffit	Paint Bubble													1000	1000					10x
28	C Stairs	6	Soffit	Paint Bubble													2000	1000					
1	C Stairwell	6	Soffit	Paint Bubble													2000	1000					
2	C Stairwell	6	Soffit	Concrete Repair	300	200	30																
3	C Stairwell	6	Soffit	Concrete Repair	400	300	30																
4	C Stairwell	6	Soffit	Paint Bubble													4000	1000					
5	C Stairwell	6	Wall	Paint Bubble													1000	1000					
6	C Stairwell	6	Wall	Concrete Repair	500	300	30																
7	C Stairwell	6	Wall	Drummy/ Concrete Repair							500	500	10										
8	C Stairwell	6	Wall	Concrete Repair	200	200	30																
9	C Stairwell	6	Wall	Concrete Repair	1000	400	30																
10	C Stairwell	6	Wall	Concrete Repair	300	300	30																
11	C Stairwell	6	Wall	Drummy/ Concrete Repair							1000	200	10										
12	C Stairwell	6	Wall	Paint Bubble													1000	1000					
13	C Stairwell	5	Wall	Drummy/ Concrete Repair							500	300	10										

Drop C Stairs – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D	L	W	D		L	W		L	L			
14	C Stairwell	5	Wall	Drummy/ Concrete Repair										1000	300	10									
15	C Stairwell	5	Wall	Drummy/ Concrete Repair										1100	400	10									
16	C Stairwell	5	Wall	Drummy/ Concrete Repair										400	400	10									
17	C Stairwell	5	Wall	Drummy/ Concrete Repair										100	100	10									
18	C Stairwell	5	Wall	Drummy/ Concrete Repair										600	300	10									
19	C Stairwell	5	Soffit	Concrete Repair	1000	300	30																		
20	C Stairwell	5	Soffit	Concrete Repair	500	200	30																		
21	C Stairwell	5	Soffit	Concrete Repair	400	300	30																		
22	C Stairwell	5	Soffit	Paint Bubble														7000	1000						
23	C Stairwell	5	Wall	Paint Bubble														3000	1000						
24	C Stairwell	5	Floor	Rust Spot													4								
25	C Stairwell	5	Slab Edge	Concrete Repair	1200	200	30																		
26	C Stairwell	5	Floor	Concrete Repair	600	600	30																		
27	C Stairwell	4	Floor	Rust Spot													2								
28	C Stairwell	4	Slab Edge	Concrete Repair	400	200	30																		
29	C Stairwell	4	Slab Edge	Concrete Repair	900	200	30																		
30	C Stairwell	4	Soffit	Rust Spot													1								
31	C Stairwell	4	Soffit	Paint Bubble														7000	1000						
32	C Stairwell	4	Soffit	Concrete Repair	100	100	30																		
33	C Stairwell	4	Soffit	Concrete Repair	400	300	30																		
34	C Stairwell	4	Soffit	Concrete Repair	1100	400	30																		
35	C Stairwell	4	Soffit	Concrete Repair	400	200	30																		
36	C Stairwell	4	Soffit	Concrete Repair	300	100	30																		
37	C Stairwell	4	Wall	Concrete Repair	600	300	30																		
38	C Stairwell	4	Wall	Concrete Repair	900	100	30																		
39	C Stairwell	4	Wall	Concrete Repair	400	300	30																		
40	C Stairwell	4	Wall	Concrete Repair	800	600	30																		
41	C Stairwell	4	Wall	Concrete Repair	300	200	30																		
42	C Stairwell	4	Wall	Concrete Repair	1000	200	30																		
43	C Stairwell	4	Wall	Paint Bubble														3000	2000						
44	C Stairwell	3	Soffit	Paint Bubble														7000	1000						
45	C Stairwell	3	Wall	Paint Bubble														4000	2000						
46	C Stairwell	3	Soffit	Concrete Repair	100	100	30																		
47	C Stairwell	3	Soffit	Concrete Repair	300	300	30																		
48	C Stairwell	3	Soffit	Concrete Repair	300	300	30																		
49	C Stairwell	3	Soffit	Concrete Repair	1000	300	30																		
50	C Stairwell	3	Soffit	Concrete Repair	500	400	30																		
51	C Stairwell	3	Soffit	Concrete Repair	300	300	30																		
52	C Stairwell	3	Wall	Concrete Repair	600	400	30																		
53	C Stairwell	3	Wall	Concrete Repair	2100	300	30																		
54	C Stairwell	3	Wall	Concrete Repair	300	300	30																		
55	C Stairwell	3	Wall	Drummy/ Concrete Repair										800	300	10									

Drop C Stairs – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	L	W	D	L	L	W	D	L	W	L	W	L	L			
56	C Stairwell	3	Wall	Drummy/ Concrete Repair												300	300	10						
57	C Stairwell	3	Wall	Drummy/ Concrete Repair												300	200	10						
58	C Stairwell	3	Slab Edge	Concrete Repair	2000	200	30																	
59	C Stairwell	2	Slab Edge	Concrete Repair	2000	20	30																	
60	C Stairwell	3	Floor	Rust Spot																				
61	C Stairwell	2	Wall	Paint Bubble														3000	2000					
62	C Stairwell	2	Wall	Paint Bubble														3000	2000					
63	C Stairwell	2	Soffit	Concrete Repair	500	500	30																	
64	C Stairwell	2	Soffit	Concrete Repair	300	200	30																	
65a	C Stairwell	2	Soffit	Concrete Repair	300	200	30																	
65b	C Stairwell	2	Soffit	Concrete Repair	200	200	30																	
66	C Stairwell	2	Soffit	Concrete Repair	1000	200	30																	
67	C Stairwell	2	Wall	Concrete Repair	2100	200	30																	
68	C Stairwell	2	Wall	Concrete Repair	200	200	30																	
69	C Stairwell	2	Wall	Concrete Repair	200	200	30																	
70	C Stairwell	2	Wall	Concrete Repair	1400	500	30																	
71a	C Stairwell	2	Slab Edge	Concrete Repair	2100	200	30																	
71b	C Stairwell	2	Steps	Concrete Repair	600	200	30																	x2
72	C Stairwell	2	Floor	Concrete Repair/ Rust Spot	400	400	30																	
73	C Stairwell	1	Wall	Paint Bubble														1000	100					
74	C Stairwell	1	Soffit	Paint Bubble														7000	1000					
75	C Stairwell	1	Soffit	Concrete Repair	500	300	30																	
76	C Stairwell	1	Soffit	Concrete Repair	500	300	30																	
77	C Stairwell	1	Soffit	Concrete Repair	500	400	30																	
78	C Stairwell	1	Soffit	Concrete Repair	900	500	30																	
79	C Stairwell	1	Soffit	Concrete Repair	200	200	30																	
80	C Stairwell	1	Soffit	Concrete Repair	500	300	30																	
81	C Stairwell	1	Soffit	Concrete Repair	500	300	30																	
82	C Stairwell	1	Soffit	Concrete Repair	200	100	30																	
83	C Stairwell	1	Soffit	Concrete Repair	300	200	30																	
84	C Stairwell	1	Soffit	Concrete Repair	100	100	30																	
85	C Stairwell	1	Wall	Drummy/ Concrete Repair	1200	300	30																	
86	C Stairwell	1	Wall	Drummy/ Concrete Repair												1300	1700	10						
87	C Stairwell	1	Steps	Concrete Repair	400	200	30																	
88	C Stairwell	1		Concrete Repair	200	200	30																	
89	C Stairwell	1	Wall	Concrete Repair	400	200	30																	
90	C Stairwell	1	Wall/ Slab Edge	Drummy/ Concrete Repair												3000	2000	10						

Drop C Stairs – Photo Schedule

Drop C Stairs Repair 1		Drop C Stairs Repair 2		Drop C Stairs Repair 3		Drop C Stairs Repair 4		Drop C Stairs Repair 5		Drop C Stairs Repair 6	
Drop C Stairs Repair 7a		Drop C Stairs Repair 7b		Drop C Stairs Repair 8		Drop C Stairs Repair 9		Drop C Stairs Repair 10		Drop C Stairs Repair 11	
Drop C Stairs Repair 12		Drop C Stairs Repair 13		Drop C Stairs Repair 14		Drop C Stairs Repair 15		Drop C Stairs Repair 16		Drop C Stairs Repair 17	
Drop C Stairs Repair 18		Drop C Stairs Repair 19		Drop C Stairs Repair 20		Drop C Stairs Repair 21		Drop C Stairs Repair 23		Drop C Stairs Repair 24	
Drop C Stairs Repair 25		Drop C Stairs Repair 26a		Drop C Stairs Repair 26b		Drop C Stairs Repair 27		Drop C Stairs Repair 28			

Drop C Stairwell – Photo Schedule

Drop C Stairwell Repair 1	Drop C Stairwell Repair 2	Drop C Stairwell Repair 3	Drop C Stairwell Repair 4	Drop C Stairwell Repair 5	Drop C Stairwell Repair 6
Drop C Stairwell Repair 7	Drop C Stairwell Repair 8	Drop C Stairwell Repair 9	Drop C Stairwell Repair 10	Drop C Stairwell Repair 11	Drop C Stairwell Repair 12
Drop C Stairwell Repair 13	Drop C Stairwell Repair 14	Drop C Stairwell Repair 15	Drop C Stairwell Repair 16	Drop C Stairwell Repair 17	Drop C Stairwell Repair 18
Drop C Stairwell Repair 19	Drop C Stairwell Repair 20	Drop C Stairwell Repair 21	Drop C Stairwell Repair 22	Drop C Stairwell Repair 23	Drop C Stairwell Repair 24
Drop C Stairwell Repair 25	Drop C Stairwell Repair 26	Drop C Stairwell Repair 27	Drop C Stairwell Repair 28	Drop C Stairwell Repair 29	Drop C Stairwell Repair 30

Drop C Stairwell – Photo Schedule

Drop C Stairwell Repair 31	Drop C Stairwell Repair 32	Drop C Stairwell Repair 33	Drop C Stairwell Repair 34	Drop C Stairwell Repair 35	Drop C Stairwell Repair 36
Drop C Stairwell Repair 37	Drop C Stairwell Repair 38	Drop C Stairwell Repair 39	Drop C Stairwell Repair 40	Drop C Stairwell Repair 41	Drop C Stairwell Repair 42
Drop C Stairwell Repair 43	Drop C Stairwell Repair 44	Drop C Stairwell Repair 45	Drop C Stairwell Repair 46	Drop C Stairwell Repair 47	Drop C Stairwell Repair 48
Drop C Stairwell Repair 49	Drop C Stairwell Repair 50	Drop C Stairwell Repair 51	Drop C Stairwell Repair 52	Drop C Stairwell Repair 53	Drop C Stairwell Repair 54
Drop C Stairwell Repair 55	Drop C Stairwell Repair 56	Drop C Stairwell Repair 57	Drop C Stairwell Repair 58	Drop C Stairwell Repair 59	Drop C Stairwell Repair 60

Drop C Stairwell – Photo Schedule

Drop C Stairwell Repair 61	Drop C Stairwell Repair 62	Drop C Stairwell Repair 63	Drop C Stairwell Repair 64	Drop C Stairwell Repair 65a	Drop C Stairwell Repair 65b
Drop C Stairwell Repair 66	Drop C Stairwell Repair 67	Drop C Stairwell Repair 68	Drop C Stairwell Repair 69	Drop C Stairwell Repair 70	Drop C Stairwell Repair 71a
Drop C Stairwell Repair 71b	Drop C Stairwell Repair 72	Drop C Stairwell Repair 73	Drop C Stairwell Repair 74	Drop C Stairwell Repair 75	Drop C Stairwell Repair 76
Drop C Stairwell Repair 77	Drop C Stairwell Repair 78	Drop C Stairwell Repair 79	Drop C Stairwell Repair 80	Drop C Stairwell Repair 81	Drop C Stairwell Repair 82
Drop C Stairwell Repair 83	Drop C Stairwell Repair 84	Drop C Stairwell Repair 85	Drop C Stairwell Repair 86	Drop C Stairwell Repair 87	Drop C Stairwell Repair 88

[illegible]

Drop Elevator Shaft – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W					
1	Elevator East	11	Wall	Drummy							100	100	10								
2	Elevator East	11	Wall	Drummy							100	100	10								
3	Elevator East	11	Wall	Cracks													2000				
4	Elevator East	11	Wall	Rust Spots										2							
5	Elevator East	11	Wall	Paint Bubble											800	300					
6	Elevator East	11	Wall	Drummy							1000	1000	10								
7	Elevator North - East	11	Wall	Drummy							200	200	10								
8	Elevator North - East	11	Wall	Paint Bubble											300	200					
9	Elevator North - East	11	Wall	Concrete Repair	1000	250	30														
10	Elevator North - East	11	Wall	Crack													8000				
11	Elevator North - East	11	Wall	Crack													3000				
12	Elevator North	11	Wall	Rust Spot										3							
13	Elevator North	11	Wall	Cracks													2000				
14a	Elevator North	11	Wall	Drummy							300	200	10								
14b	Elevator North	11	Soffit	Rust Spot										10							
15	Elevator North	11	Soffit	Paint Bubble											300	200					
16	Elevator North	11	Soffit	Drummy							400	400	10								
17	Elevator West	11	Soffit	Concrete Repair	300	300	30														
18a	Elevator West	11	Soffit	Concrete Repair	200	200	30														
18b	Elevator West	11	Soffit	Concrete Repair	200	200	30														
19	Elevator West	11	Soffit	Concrete Repair	200	200	30														
17	Elevator North - East																				
18	Elevator North - East																				
19	Elevator North - East																				
20	Elevator North - East	11	Soffit	Paint Bubble												600	600				
21	Elevator North - East	11	Soffit	Concrete Repair	300	100	30														
22	Elevator North - East	11	Soffit	Concrete Repair	500	500	30														
23	Elevator North - East	11	Soffit	Concrete Repair	200	200	30														
24	Elevator North - East	11	Soffit	Concrete Repair	150	100	30														

Drop Elevator Shaft – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D		L	W					
25	Elevator North - East	11	Soffit	Concrete Repair	300	300	30																
26	Elevator North - East	11	Soffit	Concrete Repair	300	300	30																
27	Elevator North - East	11	Soffit	Concrete Repair	600	200	30																
28	Elevator North - East	11	Soffit	Paint Bubble													300	300					
29	Elevator North - East	11	Soffit	Concrete Repair	200	200	30																
30	Elevator North - East	11	Soffit	Concrete Repair	100	100	30																

Drop Elevator Shaft – Photo Schedule

Drop Elevator Shaft East Repair 1		Drop Elevator Shaft East Repair 2		Drop Elevator Shaft East Repair 3		Drop Elevator Shaft East Repair 4		Drop Elevator Shaft East Repair 5		Drop Elevator Shaft East Repair 6	
Drop Elevator Shaft North East Repair 7		Drop Elevator Shaft North East Repair 8		Drop Elevator Shaft North East Repair 9		Drop Elevator Shaft North East Repair 10		Drop Elevator Shaft North East Repair 11		Drop Elevator Shaft North Repair 12	
Drop Elevator Shaft North Repair 13		Drop Elevator Shaft North Repair 14a		Drop Elevator Shaft North Repair 14b		Drop Elevator Shaft North Repair 15		Drop Elevator Shaft North Repair 16a		Drop Elevator Shaft West Repair 16b	

Drop Elevator Shaft – Photo Schedule

Drop Elevator Shaft West Repair 17		Drop Elevator Shaft West Repair 18a		Drop Elevator Shaft West Repair 18b		Drop Elevator Shaft West Repair 19		Drop Elevator Shaft North East Repair 20		Drop Elevator Shaft North East Repair 21	
Drop Elevator Shaft North East Repair 22		Drop Elevator Shaft North East Repair 23		Drop Elevator Shaft North East Repair 24		Drop Elevator Shaft North East Repair 25		Drop Elevator Shaft North East Repair 26		Drop Elevator Shaft North East Repair 27	
Drop Elevator Shaft North East Repair 28		Drop Elevator Shaft North East Repair 29		Drop Elevator Shaft North East Repair 30							

Drop Front Wall East – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W						
1	Front Wall East	Ground	Wall	Crack													2000					
2	Front Wall East	Ground	Wall	Concrete Repair	500	500	30															
3	Front Wall East	Ground	Wall	Concrete Repair	500	200	30															
4	Front Wall East	Ground	Wall	Concrete Repair	700	400	30															
5	Front Wall East	Ground	Wall	Concrete Repair	500	400	30															
6	Front Wall East	Ground	Wall	Concrete Repair	1200	400	30															
7	Front Wall East	Ground	Wall	Concrete Repair	700	500	30															
8	Front Wall East	Ground	Wall	Concrete Repair	1800	500	30															

Drop Front Wall East – Photo Schedule

 Drop Front Wall East Repair 1	 Drop Front Wall East Repair 2	 Drop Front Wall East Repair 3	 Drop Front Wall East Repair 4	 Drop Front Wall East Repair 5	 Drop Front Wall East Repair 6
 Drop Front Wall East Repair 7	 Drop Front Wall East Repair 8				

Drop Ground – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	L	W	D	L	L	W	D	L		L	W		L	L			
1	B1	Ground	Soffit	Drummy Render									600	600	10										
2	B1	Ground	Soffit	Drummy Render									300	300	10										
3	B1	Ground	Soffit	Drummy Render									400	200	10										
4	B1	Ground	Soffit	Drummy Render									350	200	10										
5	B1	Ground	Soffit	Drummy Render									100	200	10										
6	B1	Ground	Soffit	Drummy Render									400	200	10										
7	B1	Ground	Soffit	Drummy Render									600	300	10										
8	B1	Ground	Soffit	Drummy Render									150	150	10										
9	B1	Ground	Soffit	Drummy Render									300	300	10										
10	B1	Ground	Soffit	Drummy Render									300	300	10										
11	B2	Ground	Soffit	Drummy Render									100	100	10										
12	B2	Ground	Soffit	Drummy Render									100	100	10										
13	B2	Ground	Soffit	Paint Defect x 2														400	200						
14b	B2	Ground	Soffit	Drummy Render									600	300	10										
15b	B2	Ground	Soffit	Drummy Render									200	300	10										
16b	B2	Ground	Soffit	Paint Defect														200	200						
17b	B2	Ground	Soffit	Paint Bubble														150	150						
18b	B2	Ground	Soffit	Concrete Repair	200	200	30																		
19	B3	Ground	Soffit	Concrete Repair	500	300	30																		
20	B3	Ground	Soffit	Concrete Repair	350	350	30																		
21	B3	Ground	Soffit	Concrete Repair	100	150	30																		
22	B3	Ground	Soffit	Concrete Repair	100	100	30																		
23	B3	Ground	Soffit	Concrete Repair	300	300	30																		
24	B3	Ground	Soffit	Concrete Repair	300	300	30																		
25	B3	Ground	Soffit	Concrete Repair	200	200	30																		
26	B3	Ground	Soffit	Paint Bubble														300	100						
27	B3	Ground	Soffit	Concrete Repair	200	100	30																		
28	B3	Ground	Soffit	Concrete Repair	200	200	30																		
29	B4	Ground	Soffit	Concrete Repair	200	200	30																		
30	B4	Ground	Soffit	Concrete Repair	300	100	30																		
31	B4	Ground	Soffit	Concrete Repair	300	300	30																		
32	B4	Ground	Soffit	Concrete Repair	400	150	30																		
33	B4	Ground	Soffit	Concrete Repair	300	100	30																		
34	B4	Ground	Soffit	Concrete Repair	200	100	30																		
35	B4	Ground	Soffit	Concrete Repair	300	300	30																		
36	B4	Ground	Soffit	Concrete Repair	200	200	30																		
37	B4	Ground	Soffit	Concrete Repair	200	200	30																		
38	B4	Ground	Soffit	Concrete Repair	200	200	30																		
39b	B4	Ground	Soffit	Concrete Repair	400	400	30																		
40b	B4	Ground	Soffit	Concrete Repair	200	150	30																		
41a	B4	Ground	Column	Concrete Repair	500	500	30																		
44b	B4	Ground	Column	Rust Spot													1								
45	B4	Ground	Soffit	Paint Repair x2														200	100						
45	B3	Ground	Slab Edge	Concrete Repair	400	300	30																		
46	B3	Ground	Column	Concrete Repair	400	400	30																		
47	B2	Ground	Column	Concrete Repair	400	300	30																		

Drop Ground – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W					
48	B2	Ground	Column	Rust Spot													5							
49	B2	Ground	Column	Concrete Repair	600	200	30																	
50	B2	Ground	Column	Concrete Repair	300	200	30																	
51	B2	Ground	Column	Concrete Repair	500	400	30																	
52	B2	Ground	Column	Concrete Repair	600	300	30																	
53	B1	Ground	Column	Rust Spot													3							
54	B1	Ground	Column	Concrete Repair	100	100	30																	
#	C	Ground	Balustrade Wall	Concrete Repair	5000	300	50																	
54b	C	Ground	Soffit	Concrete Repair	1000	1000	30																	
55b	C	Ground	Soffit	Rust Spot													2							
56b	C	Ground	Soffit	Concrete Repair	300	100	30																	
57b	C	Ground	Soffit	Concrete Repair	200	200	30																	
58b	C	Ground	Soffit	Concrete Repair	300	200	30																	
59b	C	Ground	Soffit	Concrete Repair	300	300	30																	
60b	C	Ground	Soffit	Concrete Repair	100	100	30																	
61b	C	Ground	Soffit	Concrete Repair	100	100	30																	
63b	C	Ground	Soffit	Concrete Repair	150	200	30																	
63	D	Ground	Soffit	Concrete Repair	150	200	30																	
64	D	Ground	Soffit	Concrete Repair	1200	400	30											600	300					
65	D	Ground	Soffit	Paint Bubble																				
66	D	Ground	Soffit	Concrete Repair	100	100	30																	
67	D	Ground	Soffit	Concrete Repair	300	100	30																	
68	D	Ground	Soffit	Paint Bubble														300	100					
69b	D	Ground	Soffit	Concrete Repair	500	500	30																	
70b	D	Ground	Soffit	Concrete Repair	200	200	30																	
71b	D	Ground	Soffit	Concrete Repair	100	100	30																	
72b	D	Ground	Soffit	Concrete Repair	100	100	30																	
73b	D	Ground	Soffit	Paint Bubble														400	100					
74b	D	Ground	Soffit	Concrete Repair	100	100	30																	
75b	D	Ground	Soffit	Concrete Repair	200	200	30																	
76b	D	Ground	Soffit	Concrete Repair	200	200	30																	
77b	D	Ground	Soffit	Concrete Repair	200	200	30																	
78b	D	Ground	Soffit	Concrete Repair	200	200	30																	
79b	E	Ground	Soffit	Concrete Repair	1000	100	30																	
80b	E	Ground	Soffit	Concrete Repair	100	100	30																	
80c	E	Ground	Soffit	Concrete Repair	100	100	30																	
81b	E	Ground	Soffit	Concrete Repair	400	200	30																	
82b	E	Ground	Soffit	Concrete Repair	200	200	30																	
83b	E	Ground	Soffit	Paint Bubble														300	300					
84	E	Ground	Soffit	Concrete Repair	100	100	30																	
85	E	Ground	Soffit	Concrete Repair	100	100	30																	
86	E	Ground	Soffit	Concrete Repair	100	100	30																	
87	E	Ground	Soffit	Concrete Repair	100	100	30																	
88	E	Ground	Soffit	Concrete Repair	100	100	30																	
89	F	Ground	Soffit	Concrete Repair	1500	300	30																	
90	F	Ground	Soffit	Paint Bubble														500	200					

Drop Ground – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack		Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W	L	L				
91	F	Ground	Soffit	Concrete Repair	200	200	30																		
92	F	Ground	Soffit	Paint Bubble														400	100						
93	F	Ground	Soffit	Concrete Repair	100	100	30																		
94a	F	Ground	Soffit	Concrete Repair	500	200	30																		
94b	F	Ground	Soffit	Concrete Repair	300	300	30																		
95	F	Ground	Soffit	Concrete Repair	100	100	30																		
96	F	Ground	Soffit	Concrete Repair	100	100	30																		
97	F	Ground	Soffit	Concrete Repair	200	200	30																		
98	F	Ground	Soffit	Concrete Repair	100	100	30																		
99	F	Ground	Soffit	Concrete Repair	200	200	30																		
100a	F	Ground	Soffit	Concrete Repair	200	200	30																		
100b	F	Ground	Soffit	Concrete Repair	400	400	30																		
101	F	Ground	Soffit	Concrete Repair	300	300	30																		
102	F	Ground	Soffit	Concrete Repair	250	250	30																		
103	F	Ground	Soffit	Concrete Repair	100	50	30																		
104a	F	Ground	Soffit	Concrete Repair	2000	300	30																		
104b	F	Ground	Column	Rust Spot													1								
105	F	Ground	Column	Concrete Repair	300	300	30																		
106	F	Ground	Column	Concrete Repair	500	300	30																		
107	F	Ground	Column	Concrete Repair	200	200	30																		
108	F	Ground	Column	Concrete Repair	200	200	30																		
109	F	Ground	Column	Concrete Repair	1300	600	30																		
110	F	Ground	Column	Concrete Repair	1400	300	30																		
111	F	Ground	Column	Concrete Repair	400	200	30																		
112	F	Ground	Column	Rust Spot													2								
113	D	Ground	Column	Concrete Repair	300	150	30																		
114	G	Ground	Soffit	Concrete Repair	400	400	30																		
115	G	Ground	Soffit	Concrete Repair	600	600	30																		
116	G	Ground	Soffit	Paint Bubble														100	100						
117	G	Ground	Soffit	Concrete Repair	400	400	30																		
118	G	Ground	Soffit	Concrete Repair	200	200	30																		
119	G	Ground	Soffit	Concrete Repair	200	200	30																		
120	G	Ground	Soffit	Paint Bubble														300	300						
121	G	Ground	Soffit	Concrete Repair	100	100	30																		
122	G	Ground	Soffit	Concrete Repair	1000	300	30																		
123a	H	Ground	Soffit	Concrete Repair	300	300	30																		
123b	H	Ground	Soffit	Paint Bubble														1000	100						
124	H	Ground	Soffit	Concrete Repair	1000	300	30											600	400		5000				
125	H	Ground	Soffit	Paint Bubble																					
126	H	Ground	Soffit	Crack																					
127	H	Ground	Soffit	Concrete Repair	100	100	30																		
128	H	Ground	Soffit	Paint Bubble														300	100						
129	H	Ground	Soffit	Concrete Repair	200	100	30																		
130	H	Ground	Soffit	Concrete Repair	400	300	30																		
131	I	Ground	Soffit	Concrete Repair	2000	300	30																		
132	I	Ground	Soffit	Concrete Repair	600	200	30																		

Drop Ground – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W		L	L			
133	I	Ground	Soffit	Concrete Repair	500	400	30																		
134	I	Ground	Soffit	Paint Bubble			30				30							400	200						
135	I	Ground	Soffit	Paint Bubble			30				30							400	200						
136	I	Ground	Soffit	Paint Bubble			30				30							500	300						
137	I	Ground	Soffit	Paint Bubble			30				30							300	300						
138	I	Ground	Soffit	Paint Bubble			30				30							200	200						
139	I	Ground	Soffit	Paint Bubble			30				30							3000	200						
140	I	Ground	Soffit	Concrete Repair	400	200	30				30									4000					
142	J	Ground	Soffit	Crack																					
143	J	Ground	Soffit	Paint Bubble														600	300						
144	J	Ground	Soffit	Paint Bubble														1000	500						
145	J	Ground	Soffit	Paint Bubble														800	200						
146	J	Ground	Soffit	Concrete Repair	3000	200	30				30														
147	J	Ground	Soffit	Concrete Repair	1000	400	30				30														
148	J	Ground	Soffit	Concrete Repair	1000	1000	30				30														
149	J	Ground	Soffit	Crack																2200					
150	J	Ground	Soffit	Concrete Repair	400	200	30				30														
151	J	Ground	Soffit	Concrete Repair	400	200	30				30														
152	J	Ground	Soffit	Concrete Repair	400	200	30				30														
153	J	Ground	Soffit	Concrete Repair	300	100	30				30														
154	J	Ground	Soffit	Concrete Repair	300	100	30				30														
155	J	Ground	Soffit	Concrete Repair	300	100	30				30														
156	J	Ground	Soffit	Concrete Repair	300	100	30				30														
157	J	Ground	Soffit	Concrete Repair	300	100	30				30														
158	J	Ground	Soffit	Concrete Repair	300	100	30				30														
159	J	Ground	Soffit															200	100						
160	J	Ground	Soffit	Concrete Repair	700	300	30				30														
161	J	Ground	Soffit	Concrete Repair	500	500	30				30														
162	J	Ground	Soffit															100	100						
163	J	Ground	Soffit															100	100						
164	J	Ground	Soffit	Concrete Repair	500	300	30				30														
165	J	Ground	Soffit	Concrete Repair	300	200	30				30														
166	J	Ground	Soffit	Paint Bubble			30				30							3000	2000						
167	J	Ground	Soffit	Concrete Repair	800	300	30				30														
168	J	Ground	Soffit	Concrete Repair	300	300	30				30														
169	J	Ground	Soffit	Concrete Repair	1000	400	30				30														
170	J	Ground	Soffit	Paint Bubble			30				30							2000	500						
171	J	Ground	Soffit	Concrete Repair	100	100	30				30														
172	J	Ground	Soffit	Paint Bubble			30				30							500	300						
173	J	Ground	Soffit	Paint Bubble			30				30							500	300						
174	J	Ground	Soffit	Concrete Repair	1500	1000	30				30														
175	J	Ground	Soffit	Concrete Repair	500	200	30				30														
176	J	Ground	Soffit	Concrete Repair	200	200	30				30														
177	J	Ground	Soffit	Concrete Repair	400	200	30				30														
178	J	Ground	Soffit	Concrete Repair	200	200	30				30														
179	J	Ground	Soffit	Concrete Repair	200	200	30				30														

Drop Ground – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W					
180	J	Ground	Soffit	Paint Bubble			30											400	200					
181	J	Ground	Soffit	Paint Bubble			30											1000	300					
182	J	Ground	Soffit	Paint Bubble			30											400	400					
183	J	Ground	Soffit	Concrete Repair	1200	300	30																	
184	J	Ground	Soffit	Concrete Repair	200	200	30																	
185	J	Ground	Soffit	Concrete Repair	300	200	30																	
186	K	Ground	Soffit	Concrete Repair	300	200	30																	
187	K	Ground	Soffit	Concrete Repair	3000	150	30																	
188	K	Ground	Soffit	Concrete Repair	600	200	30																	
189	K	Ground	Soffit	Concrete Repair	600	200	30																	
190	K	Ground	Soffit	Concrete Repair	600	200	30																	
191	K	Ground	Soffit	Concrete Repair	1200	200	30																	
275	G	Ground	Column	Concrete Repair	600	400	30																	
276	G	Ground	Column	Concrete Repair	100	100	30																	
277	G	Ground	Column	Concrete Repair	600	200	30																	
278	H	Ground	Column	Concrete Repair	200	100	30																	
280	I	Ground	Column	Concrete Repair	400	200	30																	
281	I	Ground	Column	Concrete Repair	300	100	30																	
282	I	Ground	Column	Rust Spot			30										1							
283	I	Ground	Column	Paint Bubble			30											100	50					
284	I	Ground	Column	Paint Bubble			30											100	100					
285	I	Ground	Column	Concrete Repair	300	200	30																	
286	I	Ground	Column	Rust Spot			30										5							
287	J	Ground	Column	Paint Bubble			30											400	400					
288	J	Ground	Column	Paint Bubble			30											400	200					
289	J	Ground	Column	Paint Bubble			30											400	400					
290	J	Ground	Column	Paint Bubble			30											400	400					
291	J	Ground	Column	Concrete Repair	600	200	30																	
292	J	Ground	Column	Concrete Repair	600	200	30																	
293	J	Ground	Column	Rust Spot			30										3							
294	J	Ground	Column	Concrete Repair	200	200	30																	
295	J	Ground	Column	Concrete Repair	100	100	30																	
296	J	Ground	Column	Concrete Repair	200	200	30																	
297	J	Ground	Column	Concrete Repair	100	100	30																	
298	J	Ground	Column	Concrete Repair	100	100	30																	
299	J	Ground	Column	Paint Bubble			30											200	100					
300	J	Ground	Column	Rust Spot			30										4							
301	J	Ground	Column	Concrete Repair	400	500	30																	
303	O	Ground	Soffit	Concrete Repair	2000	200	30																	
304	O	Ground	Soffit	Paint Bubble			30											100	100					
305	O	Ground	Soffit	Rust Spot			30										2							
306	O	Ground	Soffit	Concrete Repair	200	200	30																	
307	O	Ground	Column	Concrete Repair	400	100	30																	
308	O	Ground	Column	Concrete Repair	200	200	30																	
309	O	Ground	Column	Concrete Repair	200	100	30																	
310	O	Ground	Column	Rust Spot			30										1							

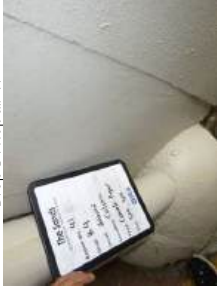
Drop Ground – Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W					
311	O	Ground	Column	Rust Spot			30										3							
312	O	Ground	Column	Concrete Repair	2500	300	30																	
313	O	Ground	Column	Concrete Repair	100	100	30																	
314	O	Ground	Column	Concrete Repair	100	100	30																	
314	P	Ground	Soffit	Concrete Repair	200	100	30																	
315	P	Ground	Soffit	Rust Spot			30										4							
316	P	Ground	Soffit	Paint Bubble			30											400	100					
317	P	Ground	Column	Concrete Repair	600	100	30																	
318	Q	Ground	Soffit	Paint Bubble			30											1200	100					
319	Q	Ground	Soffit	Paint Bubble			30											500	500					
320	Q	Ground	Soffit	Concrete Repair	600	100	30																	
321	Q	Ground	Soffit	Concrete Repair	300	300	30																	
322	Q	Ground	Column	Concrete Repair	200	100	30																	
323	R	Ground	Soffit	Concrete Repair	50	50	30																	
324	R	Ground	Soffit	Concrete Repair	800	400	30																	
325	R	Ground	Soffit	Concrete Repair	400	200	30																	
326	R	Ground	Soffit	Paint Bubble			30											1500	400					
327	R	Ground	Column	Paint Bubble			30																	
327	S	Ground	Soffit	Concrete Repair	1400	300	30																	
328	S	Ground	Soffit	Rust Spot			30										16							
329	S	Ground	Soffit	Concrete Repair	200	200	30																	
330	T	Ground	Soffit	Concrete Repair	400	400	30																	
331	T	Ground	Soffit	Concrete Repair	500	500	30																	
332	T	Ground	Soffit	Concrete Repair	1000	200	30																	
333	T	Ground	Soffit	Concrete Repair	400	200	30																	
334	T	Ground	Soffit	Rust Spot			30										15							
335	T	Ground	Soffit	Concrete Repair	400	400	30																	
336	T	Ground	Soffit	Concrete Repair	100	100	30																	
337	T	Ground	Soffit	Concrete Repair	200	100	30																	
338	T	Ground	Column	Concrete Repair	200	100	30																	
339	V	Ground	Soffit	Concrete Repair	800	200	30																	
340	V	Ground	Soffit	Concrete Repair	800	200	30																	
341	V	Ground	Soffit	Rust Spot			30										8							
342	V	Ground	Column	Rust Spot			30										1							
343	V	Ground	Soffit	Concrete Repair	800	200	30																	
344	V	Ground	Soffit	Concrete Repair	500	200	30																	
345	V	Ground	Column	Concrete Repair	200	100	30																	

Drop Ground – Photo Schedule

Drop B1 Repair 1	Drop B1 Repair 2	Drop B1 Repair 3	Drop B1 Repair 4	Drop B1 Repair 5	Drop B1 Repair 6
					
Drop B1 Repair 7	Drop B1 Repair 8	Drop B1 Repair 9	Drop B1 Repair 10	Drop B2 Repair 11	Drop B2 Repair 12
					
Drop B2 Repair 13	Drop B2 Repair 14b	Drop B2 Repair 15b	Drop B2 Repair 16b	Drop B2 Repair 17b	Drop B2 Repair 18b
					
Drop B3 Repair 19	Drop B3 Repair 20	Drop B3 Repair 21	Drop B3 Repair 22	Drop B3 Repair 23	Drop B3 Repair 24
					
Drop B3 Repair 25	Drop B3 Repair 26	Drop B3 Repair 27	Drop B3 Repair 28	Drop B4 Repair 29	Drop B4 Repair 30
					

Drop Ground – Photo Schedule

Drop B4 Repair 31		Drop B4 Repair 32		Drop B4 Repair 33		Drop B4 Repair 34		Drop B4 Repair 35		Drop B4 Repair 36	
Drop B4 Repair 37		Drop B4 Repair 38		Drop B4 Repair 39b		Drop B4 Repair 40b		Drop B2 Repair 41		Drop B4 Repair 44b	
Drop B3 Repair 45		Drop B3 Repair 46		Drop B2 Repair 47		Drop B2 Repair 48		Drop B2 Repair 49		Drop B2 Repair 50	
Drop B2 Repair 51		Drop B2 Repair 52		Drop B1 Repair 53		Drop B1 Repair 54		Drop C Repair #		Drop C Repair 55b	
Drop C Repair 56b		Drop C Repair 57b		Drop C Repair 58b		Drop C Repair 59b		Drop C Repair 60b		Drop C Repair 61b	

Drop C Repair 63b		Drop D Repair 64		Drop D Repair 65		Drop D Repair 66		Drop D Repair 66b		Drop D Repair 67	
Drop D Repair 68		Drop D Repair 69b		Drop D Repair 70b		Drop D Repair 71b		Drop D Repair 72b		Drop D Repair 73b	
Drop D Repair 74b		Drop D Repair 75b		Drop D Repair 76		Drop D Repair 77b		Drop D Repair 78b		Drop E Repair 79b	
Drop E Repair 80b		Drop E Repair 80c		Drop E Repair 81b		Drop E Repair 82b		Drop E Repair 83b		Drop E Repair 84	
Drop E Repair 85		Drop E Repair 86		Drop E Repair 87		Drop E Repair 88		Drop F Repair 89		Drop F Repair 90	

Drop Ground – Photo Schedule

Drop F Repair 91	Drop F Repair 92	Drop F Repair 93	Drop F Repair 94a	Drop F Repair 94b	Drop F Repair 95
Drop F Repair 96	Drop F Repair 97	Drop F Repair 98	Drop F Repair 99	Drop F Repair 100a	Drop F Repair 100b
Drop F Repair 101	Drop F Repair 102	Drop F Repair 103	Drop F Repair 104a	Drop F Repair 104b	Drop F Repair 105
Drop F Repair 106	Drop F Repair 107	Drop F Repair 108	Drop F Repair 109	Drop F Repair 110	Drop F Repair 111
Drop F Repair 112	Drop F Repair 113	Drop G Repair 114	Drop G Repair 115	Drop G Repair 116	Drop G Repair 117

Drop Ground – Photo Schedule

Drop G Repair 118		Drop G Repair 119		Drop G Repair 120		Drop G Repair 121		Drop G Repair 122		Drop H Repair 23a	
Drop H Repair 123b		Drop H Repair 124		Drop H Repair 125		Drop H Repair 126		Drop H Repair 127		Drop H Repair 128	
Drop H Repair 129		Drop H Repair 130		Drop I Repair 131		Drop I Repair 132		Drop I Repair 133		Drop I Repair 134	
Drop I Repair 135		Drop I Repair 136		Drop I Repair 137		Drop I Repair 138		Drop I Repair 139		Drop I Repair 140	
Drop J Repair 143		Drop J Repair 144		Drop J Repair 145		Drop J Repair 146		Drop J Repair 147		Drop J Repair 148	

Drop J Repair 149	
Drop J Repair 150	
Drop J Repair 151	
Drop J Repair 152	
Drop J Repair 153	
Drop J Repair 154	
Drop J Repair 155	
Drop J Repair 156	
Drop J Repair 157	
Drop J Repair 158	
Drop J Repair 159	
Drop J Repair 160	
Drop J Repair 161	
Drop J Repair 162	
Drop J Repair 163	
Drop J Repair 164	
Drop J Repair 165	
Drop J Repair 166	
Drop J Repair 167	
Drop J Repair 168	
Drop J Repair 169	
Drop J Repair 170	
Drop J Repair 171	
Drop J Repair 172	
Drop J Repair 173	
Drop J Repair 174	
Drop J Repair 175	
Drop J Repair 176	
Drop J Repair 177	
Drop J Repair 178	

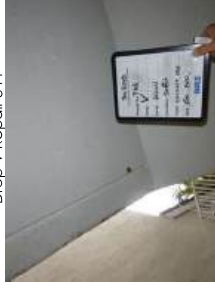
Drop Ground – Photo Schedule

Drop J Repair 179		Drop J Repair 180		Drop J Repair 181		Drop J Repair 182		Drop J Repair 183		Drop J Repair 184	
Drop J Repair 185		Drop K Repair 186		Drop K Repair 187		Drop K Repair 188		Drop K Repair 189		Drop K Repair 190	
Drop K Repair 191		Drop G Rep		Drop G Repair 276		Drop G Repair 277		Drop H Repair 278		Drop I Repair 280	
Drop I Repair 281		Drop I Repair 282		Drop I Repair 283		Drop I Repair 284		Drop I Repair 285		Drop I Repair 286	
Drop J Repair 287		Drop J Repair 288		Drop J Repair 289		Drop J Repair 290		Drop J Repair 291		Drop J Repair 292	

Drop Ground – Photo Schedule

Drop J Repair 293		Drop J Repair 294		Drop J Repair 295		Drop J Repair 296		Drop J Repair 297		Drop J Repair 298	
Drop J Repair 299		Drop J Repair 300		Drop J Repair 301		Drop O Repair 303		Drop O Repair 304		Drop O Repair 305	
Drop O Repair 306		Drop O Repair 307		Drop O Repair 308		Drop O Repair 309		Drop O Repair 310		Drop O Repair 311	
Drop O Repair 312		Drop O Repair 313		Drop O Repair 314		Drop P Repair 314		Drop P Repair 315		Drop P Repair 316	
Drop P Repair 317		Drop Q Repair 318		Drop Q Repair 319		Drop Q Repair 320		Drop Q Repair 321		Drop Q Repair 322	

Drop Ground – Photo Schedule

Drop R Repair 323		Drop R Repair 324		Drop R Repair 325		Drop R Repair 326		Drop R Repair 327		Drop S Repair 327	
Drop S Repair 328		Drop S Repair 329		Drop T Repair 330		Drop T Repair 331		Drop T Repair 332		Drop T Repair 333	
Drop T Repair 334		Drop T Repair 335		Drop T Repair 336		Drop T Repair 337		Drop T Repair 338		Drop V Repair 339	
Drop V Repair 340		Drop V Repair 341		Drop V Repair 342		Drop V Repair 343		Drop V Repair 344		Drop V Repair 345	

Drop M Stairs – Photo Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L			
1	M Stairs	10	Wall	Drummy							2000	2000	10								
2	M Stairs	10	Hob	Concrete Repair	100	100	30														
3	M Stairs	10	Hob	Concrete Repair	50	50	30														
4	M Stairs	10	Slab Edge	Drummy							900	200	10								
5	M Stairs	10	Stairs x2	Drummy							800	200	10								
6	M Stairs	9	Soffit	Concrete Repair	1000	50	30														
7	M Stairs	9	Hob	Concrete Repair	1500	400	30														
8	M Stairs	9	Slab Edge	Concrete Repair	400	200	30														
9	M Stairs	9	Slab Edge	Concrete Repair	400	200	30														
10	M Stairs	9	Soffit	Rust Spot										1							
11	M Stairs	8	Soffit	Drummy							400	400	10								
12	M Stairs	8	Soffit	Concrete Repair	300	50	30														
13	M Stairs	8	Soffit	Concrete Repair	1000	50	30														
14	M Stairs	8	Soffit	Paint Bubble											500	500					
15a	M Stairs	8	Slab Edge	Drummy							800	200	10								
15b	M Stairs	8	Stairs x3	Drummy							800	200	10								
16	M Stairs	8	Stairs x4	Drummy							300	200	10								
17	M Stairs	8	Hob	Drummy							300	200	10								
18	M Stairs	8	Slab Edge	Drummy							200	200	10								
19	M Stairs	7	Slab Edge	Drummy							1000	200	10								
20	M Stairs	7	Slab Edge	Drummy							2000	200	10								
21	M Stairs	7	Soffit	Concrete Repair	1500	50	30														
22	M Stairs	7	Hob	Concrete Repair	300	200	30														
23	M Stairs	7	Slab Edge	Concrete Repair	300	200	30														
24a	M Stairs	7	Stairs x 5	Concrete Repair	900	200	30														
24b	M Stairs	7	Stairs x8	Drummy							900	200	10								
25	M Stairs	7	Wall	Drummy							900	400	10								
26	M Stairs	6	Soffit	Drummy							400	300	10								
27	M Stairs	6	Soffit	Concrete Repair	800	500	30														
28	M Stairs	6	Hob	Concrete Repair	600	300	30														
29	M Stairs	6	Slab Edge	Drummy							400	200	10								
30	M Stairs	6	Slab Edge	Concrete Repair	900	100	30														
31	M Stairs	6	Slab Edge	Drummy							3000	200	10								
32a	M Stairs	6	Stairs x11	Drummy							900	200	10								
32b	M Stairs	5	Stairs x3	Drummy							900	200	10								
33a	M Stairs	5	Stairs x3	Drummy							900	200	10								
33b	M Stairs	5	Stairs x3	Drummy							900	200	10								
34	M Stairs	5	Wall	Drummy							400	200	10								
35	M Stairs	5	Wall	Drummy							600	100	10								
36	M Stairs	5	Hob	Concrete Repair	700	300	30														
37	M Stairs	5	Hob	Concrete Repair	300	200	30														
38	M Stairs	5	Slab Edge	Concrete Repair	500	200	30														
39	M Stairs	5	Slab Edge	Concrete Repair	1000	200	30														
40	M Stairs	5	Slab Edge	Drummy							3000	200	10								
41	M Stairs	5	Floor	Drummy							800	800	10								

Drop M Stairs – Photo Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W	L	L			
42	M Stairs	5	Soffit	Concrete Repair																	
43	M Stairs	5	Soffit	Concrete Repair	400	200	30														
44	M Stairs	5	Soffit	Rust Spot										1							
45	M Stairs	4	Soffit	Drummy							1100	400	10								
46	M Stairs	4	Soffit	Drummy							500	300	10								
47	M Stairs	4	Soffit	Drummy							500	200	10								
48	M Stairs	4	Slab Edge	Drummy							3000	200	10								
49	M Stairs	4	hob	Concrete Repair	100	100	30														
50	M Stairs	4	Wall	Concrete Repair	1400	200	30														
51	M Stairs	4	Wall	Concrete Repair	400	200	30														
52	M Stairs	4	Stairs x7	Drummy							900	200	10								
53	M Stairs	4	Slab Edge	Drummy							400	200	10								
54	M Stairs	3	Slab Edge	Drummy							1800	200	10								
55	M Stairs	3	Slab Edge	Drummy							2000	200	10								
56	M Stairs	3	Stairs x7	Drummy									10								
57	M Stairs	3	Floor	Drummy							700	400	10								
58	M Stairs	3	Hob	Drummy							700	300	10								
59	M Stairs	3	Soffit	Drummy							100	100	10								
60	M Stairs	3	Wall	Drummy							2000	200	10								
61	M Stairs	2	Slab Edge	Drummy							3000	200	10								
62	M Stairs	2	Stairs x9	Drummy							900	200	10								
63	M Stairs	2	Slab Edge	Drummy							3000	200	10								
64	M Stairs	2	Soffit	Paint Bubble											1000	1000					
65	M Stairs	1	Wall	Paint Bubble											4000	2000					
66	M Stairs	1	Wall	Concrete Repair	1000	400	30														
67	M Stairs	1	Wall	Concrete Repair	100	100	30														
68	M Stairs	1	Wall	Drummy							1000	100	10								
69	M Stairs	1	Floor	Drummy							4000	1000	10								
70	M Stairs	1	Stairs x4	Drummy							900	200	10								
71	M Stairs	1	Floor	Drummy							900	900	10								
72	M Stairs	1	Floor	Drummy							1000	900	10								
73	M Stairs	1	Wall	Concrete Repair	500	200	30														
74	M Stairs	1	Wall	Concrete Repair	200	200	30														
75	M Stairs	1	Wall	Paint Bubble											800	800					

Drop M Stairs – Photo Schedule

Drop M Stairs Repair 1	Drop M Stairs Repair 2	Drop M Stairs Repair 3	Drop M Stairs Repair 4	Drop M Stairs Repair 5	Drop M Stairs Repair 6
Drop M Stairs Repair 7	Drop M Stairs Repair 8	Drop M Stairs Repair 9	Drop M Stairs Repair 10	Drop M Stairs Repair 11	Drop M Stairs Repair 12
Drop M Stairs Repair 13	Drop M Stairs Repair 14	Drop M Stairs Repair 15a	Drop M Stairs Repair 15b	Drop M Stairs Repair 16	Drop M Stairs Repair 17
Drop M Stairs Repair 18	Drop M Stairs Repair 19	Drop M Stairs Repair 20	Drop M Stairs Repair 21	Drop M Stairs Repair 22	Drop M Stairs Repair 23
Drop M Stairs Repair 24a	Drop M Stairs Repair 24b	Drop M Stairs Repair 25	Drop M Stairs Repair 26	Drop M Stairs Repair 27	Drop M Stairs Repair 28

Drop M Stairs – Photo Schedule

Drop M Stairs Repair 29	Drop M Stairs Repair 30	Drop M Stairs Repair 31	Drop M Stairs Repair 32a	Drop M Stairs Repair 32b	Drop M Stairs Repair 33a
Drop M Stairs Repair 33b	Drop M Stairs Repair 34	Drop M Stairs Repair 35	Drop M Stairs Repair 36	Drop M Stairs Repair 37	Drop M Stairs Repair 38
Drop M Stairs Repair 39	Drop M Stairs Repair 40	Drop M Stairs Repair 41	Drop M Stairs Repair 42	Drop M Stairs Repair 43	Drop M Stairs Repair 44
Drop M Stairs Repair 45	Drop M Stairs Repair 46	Drop M Stairs Repair 47	Drop M Stairs Repair 48	Drop M Stairs Repair 49	Drop M Stairs Repair 50
Drop M Stairs Repair 51	Drop M Stairs Repair 52	Drop M Stairs Repair 53	Drop M Stairs Repair 54	Drop M Stairs Repair 55	Drop M Stairs Repair 56

Drop M Stairs – Photo Schedule

Drop M Stairs Repair 57		Drop M Stairs Repair 58		Drop M Stairs Repair 59		Drop M Stairs Repair 60		Drop M Stairs Repair 61		Drop M Stairs Repair 62	
Drop M Stairs Repair 63		Drop M Stairs Repair 64		Drop M Stairs Repair 65		Drop M Stairs Repair 66		Drop M Stairs Repair 67		Drop M Stairs Repair 68	
Drop M Stairs Repair 69		Drop M Stairs Repair 70		Drop M Stairs Repair 71		Drop M Stairs Repair 73		Drop M Stairs Repair 74		Drop M Stairs Repair 75	

Drop Orchid Ave Stairs-- Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
1	Orchid Ave Stairs	3	Soffit	Concrete Repair	300	300	30															
2	Orchid Ave Stairs	3	Wall	Drummy							600	400	10									
3	Orchid Ave Stairs	3	Wall	Drummy							600	400	10									
4	Orchid Ave Stairs	3	Stair	Drummy							900	200	10									
5	Orchid Ave Stairs	3	Slab Edge	Drummy							3000	200	10									
6	Orchid Ave Stairs																					
7	Orchid Ave Stairs	2	Slab Edge	Drummy							3000	200	10									
8	Orchid Ave Stairs	2	Stairs x3	Drummy							900	200	10									
9	Orchid Ave Stairs	1	Stairs x6	Drummy							900	200	10									
10	Orchid Ave Stairs																					
11	Orchid Ave Stairs	1	Wall	Concrete Repair	500	300	30															

Drop Orchid Ave Stairs-- Photo Schedule

					
Drop Orchid Ave Stairs Repair 1	Drop Orchid Ave Stairs Repair 2	Drop Orchid Ave Stairs Repair 3	Drop Orchid Ave Stairs Repair 4	Drop Orchid Ave Stairs Repair 5	Drop Orchid Ave Stairs Repair 7
					
Drop Orchid Ave Stairs Repair 8	Drop Orchid Ave Stairs Repair 9	Drop Orchid Ave Stairs Repair 11			

Drop Pool Area– Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack		Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D	L	W	D		L	W	L	L				
1	Pool Area	1	Wall	Drummy										400	400	10									
2	Pool Area	1	Wall	Drummy										4000	600	10									
3	Pool Area	1	Wall	Concrete Repair	400	400	200																		
4	Pool Area	1	Wall	Concrete Repair	400	400	200																		
5	Pool Area	1	Wall	Concrete Repair	400	200	200																		
6	Pool Area	1	Wall	Concrete Repair	100	100	100																		
7	Pool Area	1	Wall	Paint Bubble														4000	1000						
8	Pool Area	1	Wall	Paint Bubble														2200	1000						
9	Pool Area	1	Wall	Drummy										4500	600	10									
10	Pool Area	1	Wall	Crack																					
11	Pool Area	1	Wall	Drummy										5000	600	10									
12	Pool Area	1	Wall	Rust Spot													3								
13	Pool Area	1	Wall	Rust Spot													3								
14	Pool Area	1	Wall	Concrete Repair	400	200	50																		
15	Pool Area	1	Wall	Concrete Repair	300	200	50																		
16	Pool Area	1	Wall	Concrete Repair	400	200	50																		
17	Pool Area	1	Wall	Concrete Repair	1400	200	50																		
18	Pool Area	1	Wall	Concrete Repair	400	300	200																		
19	Pool Area	1	Wall	Concrete Repair	400	200	50																		
20	Pool Area	1	Wall	Paint Bubble														3000	1000						
21	Pool Area	1	Wall	Paint Bubble														4000	1000						
22	Pool Area	1	Wall	Concrete Repair	400	200	30																		
23	Pool Area	1	Wall	Concrete Repair	600	300	30																		
24	Pool Area	1	Wall	Concrete Repair	500	400	30																		
25	Pool Area	1	Wall	Concrete Repair	100	100	30																		
26	Pool Area	1	Wall	Concrete Repair	400	400	30																		
27	Pool Area	1	Wall	Concrete Repair	800	300	30																		
28	Pool Area	1	Wall	Concrete Repair	400	300	30																		
29	Pool Area	1	Wall	Concrete Repair	600	100	30																		
30	Pool Area	1	Wall	Concrete Repair	400	100	30																		
31	Pool Area	1	Wall	Concrete Repair	300	100	30																		
32	Pool Area	1	Wall	Concrete Repair	500	100	30																		
33	Pool Area	1	Wall	Concrete Repair	200	200	30																		
34	Pool Area	1	Wall	Concrete Repair	400	100	30																		
35	Pool Area	1	Garden Wall	Crack																					
36	Pool Area	1	Garden Wall	Crack																					
37	Pool Area	1	Garden Wall	Crack																					
38	Pool Area	1	Garden Wall	Crack																					
39	Pool Area	1	Garden Wall	Crack																					
40	Pool Area	1	Garden Wall	Crack																					
41	Pool Area	1	Garden Wall	Crack																					
42	Pool Area	1	Garden Wall	Crack																					
43	Pool Area	1	Garden Wall	Crack																					
44	Pool Area	1	Garden Wall	Crack																					
45	Pool Area	1	Garden Wall	Crack																					

Drop Pool Area– Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W					
46	Pool Area	1	Garden Wall	Crack													L	L			
47	Pool Area	1	Garden Wall	Crack													300				
48	Pool Area	1	Garden Wall	Crack													300				
49	Pool Area	1	Garden Wall	Paint Bubble											6000	300	300				

Drop Pool Area- Photo Schedule

Drop Pool Area Repair 1	Drop Pool Area Repair 2	Drop Pool Area Repair 3	Drop Pool Area Repair 4	Drop Pool Area Repair 5	Drop Pool Area Repair 6
Drop Pool Area Repair 7	Drop Pool Area Repair 8	Drop Pool Area Repair 9	Drop Pool Area Repair 10	Drop Pool Area Repair 11	Drop Pool Area Repair 12
Drop Pool Area Repair 13	Drop Pool Area Repair 14	Drop Pool Area Repair 15	Drop Pool Area Repair 16	Drop Pool Area Repair 17	Drop Pool Area Repair 18
Drop Pool Area Repair 19	Drop Pool Area Repair 20	Drop Pool Area Repair 21	Drop Pool Area Repair 22	Drop Pool Area Repair 23	Drop Pool Area Repair 24
Drop Pool Area Repair 25	Drop Pool Area Repair 26	Drop Pool Area Repair 27	Drop Pool Area Repair 28	Drop Pool Area Repair 29	Drop Pool Area Repair 30

Drop Pool Area- Photo Schedule

Drop Pool Area Repair 31	Drop Pool Area Repair 32	Drop Pool Area Repair 33	Drop Pool Area Repair 34	Drop Pool Area Repair 35	Drop Pool Area Repair 36
Drop Pool Area Repair 37	Drop Pool Area Repair 38	Drop Pool Area Repair 39	Drop Pool Area Repair 40	Drop Pool Area Repair 41	Drop Pool Area Repair 42
Drop Pool Area Repair 43	Drop Pool Area Repair 44	Drop Pool Area Repair 45	Drop Pool Area Repair 46	Drop Pool Area Repair 47	Drop Pool Area Repair 48

Drop Roof- Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Rust Spot			Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D	L	W	L	L			
1	Roof		Floor	Paint Bubble										300	300					
2	Roof		Floor	Drummy									400	200	10					
3	Roof		Floor	Drummy									1000	300	10					
4	Roof		Floor	Drummy									300	300	10					
5	Roof		Floor	Drummy									400	200	10					
6	Roof		Floor	Drummy									400	200	10					
7	Roof		Floor	Drummy									1200	400	10					
8	Roof		Floor	Drummy									300	300	10					
9	Roof		Floor	Poor Membrane																400X200
10	Roof		Floor	Drummy									500	500	10					
11	Roof		Floor	Rust Spot								5								
12	Roof		Floor	Drummy									300	100	10					
13	Roof		Floor	Paint Bubble										200	200					

Drop Roof- Photo Schedule

					
Drop Roof Repair 1	Drop Roof Repair 2	Drop Roof Repair 3	Drop Roof Repair 4	Drop Roof Repair 5	Drop Roof Repair 6
					
Drop Roof Repair 7	Drop Roof Repair 8	Drop Roof Repair 9	Drop Roof Repair 10	Drop Roof Repair 11	Drop Roof Repair 12
					
Drop Roof Repair 13					

Drop Street Wall East- Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W		L	L			
1	Street Wall East	Ground	Wall	Collapsed																		
2	Street Wall East	Ground	Curb Wall	Concrete Repair	500	200	30															
3	Street Wall East	Ground	Wall	Crack/Drummy							600	200	20									
4	Street Wall East	Ground	Wall	Crack/Drummy							600	200	20									
5	Street Wall East	Ground	Wall	Crack/Drummy							600	200	20									
6	Street Wall East	Ground	Wall	Drummy							200	200	20									
7	Street Wall East	Ground	Wall	Drummy							200	200	20									
8	Street Wall East	Ground	Curb Wall	Drummy							300	200	20									
9	Street Wall East	Ground	Curb Wall	Drummy							1000	200	20									
10	Street Wall East	Ground	Curb Wall	Crack/Drummy													1600					
11	Street Wall East	Ground	Wall	Chipped	400																	
12	Street Wall East	Ground	Wall	Paint Bubble											1000	200						
13	Street Wall East	Ground	Curb Wall	Concrete Repair	300	200	30															

Drop Street Wall East- Photo Schedule

Drop Street Wall East Repair 1	Drop Street Wall East Repair 2	Drop Street Wall East Repair 3	Drop Street Wall East Repair 4	Drop Street Wall East Repair 5	Drop Street Wall East Repair 6
					
Drop Street Wall East Repair 7	Drop Street Wall East Repair 8	Drop Street Wall East Repair 9	Drop Street Wall East Repair 10	Drop Street Wall East Repair 11	Drop Street Wall East Repair 12
					
Drop Street Wall East Repair 13					
					

Drop Under Pool - Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair						Balcony Floor Concrete Repair				Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	D	W	L	W	D	L	L	W	L		L	W	L	L	L			
1	Under Pool	Ground	Soffit	Concrete Repair	800	800	30																			
2	Under Pool	Ground	Soffit	Concrete Repair	500	400	30																			
3	Under Pool	Ground	Soffit	Concrete Repair	300	400	30																			
4	Under Pool	Ground	Soffit	Concrete Repair	1000	1000	30																			
5	Under Pool	Ground	Soffit	Concrete Repair	500	500	30																			
6	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																			
7	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																			
8	Under Pool	Ground	Soffit	Concrete Repair	800	800	30																			
9	Under Pool	Ground	Soffit	Concrete Repair	800	800	30																			
10	Under Pool	Ground	Soffit	Concrete Repair	2000	1000	30																			
11	Under Pool	Ground	Soffit	Concrete Repair	1000	1000	30																			
12	Under Pool	Ground	Soffit	Concrete Repair	1200	400	30																			
13	Under Pool	Ground	Soffit	Concrete Repair	500	300	30																			
14	Under Pool	Ground	Soffit	Concrete Repair	700	400	30																			
15	Under Pool	Ground	Soffit	Concrete Repair	700	200	30																			
16a	Under Pool	Ground	Soffit	Concrete Repair	600	600	30																			
16b	Under Pool	Ground	Soffit	Concrete Repair	400	300	30																			
17a	Under Pool	Ground	Soffit	Concrete Repair	1000	300	30																			
17b	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																			
18	Under Pool	Ground	Soffit	Concrete Repair	200	100	30																			
19	Under Pool	Ground	Soffit	Concrete Repair	800	800	30																			
20	Under Pool	Ground	Soffit	Concrete Repair	400	300	30																			
21	Under Pool	Ground	Soffit	Concrete Repair	400	300	30																			
22	Under Pool	Ground	Soffit	Concrete Repair	600	300	30																			
23	Under Pool	Ground	Soffit	Concrete Repair	100	100	30																			
24	Under Pool	Ground	Soffit	Concrete Repair	500	500	30																			
25	Under Pool	Ground	Soffit	Concrete Repair	1000	600	30																			
26	Under Pool	Ground	Soffit	Concrete Repair	1200	200	30																			
27	Under Pool	Ground	Soffit	Concrete Repair	2800	200	30																			
28	Under Pool	Ground	Soffit	Concrete Repair	600	100	30																			
29	Under Pool	Ground	Soffit	Concrete Repair	100	100	30																			
30	Under Pool	Ground	Soffit	Concrete Repair	1000	1000	30																			
31	Under Pool	Ground	Soffit	Concrete Repair	400	400	30																			
32a	Under Pool	Ground	Soffit	Concrete Repair	1000	800	30																			
32b	Under Pool	Ground	Soffit	Concrete Repair	900	400	30																			
33	Under Pool	Ground	Soffit	Concrete Repair	800	200	30																			
34	Under Pool	Ground	Soffit	Concrete Repair	3000	200	30																			
35	Under Pool	Ground	Soffit	Concrete Repair	400	400	30																			
36	Under Pool	Ground	Soffit	Concrete Repair	500	400	30																			
37	Under Pool	Ground	Soffit	Concrete Repair	4000	1000	30																			
38	Under Pool	Ground	Soffit	Concrete Repair	2000	2000	30																			
39	Under Pool	Ground	Soffit	Concrete Repair	900	400	30																			
40	Under Pool	Ground	Soffit	Concrete Repair	400	400	30																			
41	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																			
42	Under Pool	Ground	Soffit	Rust Spot														5								
43a	Under Pool	Ground	Soffit	Rust Spot														5								1000x900

Drop Under Pool - Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W		L	L			
43b	Under Pool	Ground	Soffit	Concrete Repair	1000	900	30																		
44a	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																		
44b	Under Pool	Ground	Soffit	Rust Spot													5								300x300
45a	Under Pool	Ground	Soffit	Concrete Repair	200	200	30																		
45b	Under Pool	Ground	Soffit	Rust Spot													5								200x100
46a	Under Pool	Ground	Soffit	Concrete Repair	600	200	30																		
46b	Under Pool	Ground	Soffit	Rust Spot													5								1000x1000
47a	Under Pool	Ground	Soffit	Concrete Repair	900	300	30																		
47b	Under Pool	Ground	Soffit	Rust Spot													5								700x300
48a	Under Pool	Ground	Soffit	Concrete Repair	300	200	30																		
48b	Under Pool	Ground	Soffit	Rust Spot													5								700x300
49a	Under Pool	Ground	Soffit	Concrete Repair	400	200	30																		
49b	Under Pool	Ground	Soffit	Rust Spot													5								300x200
50a	Under Pool	Ground	Soffit	Concrete Repair	600	300	30																		
50b	Under Pool	Ground	Soffit	Rust Spot													5								500x200
51a	Under Pool	Ground	Soffit	Concrete Repair	200	200	30																		
51b	Under Pool	Ground	Soffit	Rust Spot													5								200x200
52a	Under Pool	Ground	Soffit	Concrete Repair	1000	300	30																		
52b	Under Pool	Ground	Soffit	Rust Spot													5								1200x200
53	Under Pool	Ground	Soffit	Concrete Repair	1200	300	30																		
54	Under Pool	Ground	Soffit	Paint Bubble														2000	2000						
55	Under Pool	Ground	Soffit	Rust Spot													14								
56	Under Pool	Ground	Wall	Concrete Repair	300	200	30																		
57	Under Pool	Ground	Wall	Concrete Repair	400	400	30																		
58	Under Pool	Ground	Wall	Concrete Repair	100	100	30																		
59	Under Pool	Ground	Wall	Concrete Repair	300	300	30																		
60	Under Pool	Ground	Wall	Concrete Repair	4000	200	30																		
192	Under Pool	Ground	Soffit	Rust Spot													4								
193	Under Pool	Ground	Soffit	Drummy									6000	400	20										
194a	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																		
194b	Under Pool	Ground	Soffit	Paint Bubble														200	200						
195	Under Pool	Ground	Soffit	Paint Bubble														200	200						
196a	Under Pool	Ground	Soffit	Concrete Repair	400	200	30																		
196b	Under Pool	Ground	Soffit	Concrete Repair	600	200	30																		
197	Under Pool	Ground	Soffit	Concrete Repair	400	200	30																		
198	Under Pool	Ground	Soffit	Paint Bubble														400	400						
199	Under Pool	Ground	Soffit	Drummy									1000	400	20										
200	Under Pool	Ground	Soffit	Paint Bubble														200	100						
201	Under Pool	Ground	Soffit	Paint Bubble														1000	1000						
202	Under Pool	Ground	Soffit	Calcium Seepage																					
203	Under Pool	Ground	Soffit	Concrete Repair	500	500	30																		4000x4000
204	Under Pool	Ground	Soffit	Paint Bubble														400	400						
205	Under Pool	Ground	Soffit	Concrete Repair	200	100	30																		
206	Under Pool	Ground	Soffit	Concrete Repair	200	100	30																		
207	Under Pool	Ground	Soffit	Concrete Repair	300	500	30																		
208	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																		

Drop Under Pool - Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair				Balcony Floor Concrete Repair				Render Repair				Rust Spot	Paint Defect		Crack	Window Caulking		Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D		L	W	D		L	W	D			L	W		L	L			
209	Under Pool	Ground	Soffit	Concrete Repair	500	500	30																		
210	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																		
211	Under Pool	Ground	Soffit	Concrete Repair	500	500	30																		
212	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																		
213	Under Pool	Ground	Soffit	Concrete Repair	300	400	30																		
214	Under Pool	Ground	Soffit	Concrete Repair	100	100	30																		
215	Under Pool	Ground	Soffit	Concrete Repair	300	100	30																		
216	Under Pool	Ground	Soffit	Paint Bubble														600	300						
217	Under Pool	Ground	Soffit	Concrete Repair	200	200	30																		
218	Under Pool	Ground	Soffit	Concrete Repair	100	100	30																		
219	Under Pool	Ground	Soffit	Paint Bubble														100	200						
220	Under Pool	Ground	Soffit	Drummy									200	100	20										
221	Under Pool	Ground	Soffit	Drummy									100	100	20										
222	Under Pool	Ground	Soffit	Paint Bubble														500	400						
223	Under Pool	Ground	Soffit	Paint Bubble														100	1						
224	Under Pool	Ground	Soffit	Paint Bubble														1000	1000						2000x2000
225	Under Pool	Ground	Soffit	Calcium Seepage																					
226	Under Pool	Ground	Soffit	Paint Bubble														1000	1000						
227	Under Pool	Ground	Soffit	Concrete Repair	100	100	30																		
228	Under Pool	Ground	Soffit	Concrete Repair	200	200	30																		
229	Under Pool	Ground	Soffit	Concrete Repair	200	200	30																		
230	Under Pool	Ground	Soffit	Paint Bubble														400	400						
231	Under Pool	Ground	Soffit	Concrete Repair	100	100	30						100	100	20										2000x1000
232	Under Pool	Ground	Soffit	Paint Bubble														1000	1000						
233	Under Pool	Ground	Soffit	Paint Bubble														1000	1000						
234	Under Pool	Ground	Soffit	Calcium																					
235	Under Pool	Ground	Soffit	Drummy																					
236	Under Pool	Ground	Soffit	Paint Bubble														100	100						
237	Under Pool	Ground	Soffit	Paint Bubble														500	300						
238	Under Pool	Ground	Soffit	Paint Bubble														1000	1000						
239	Under Pool	Ground	Soffit	Calcium/Seepage																					2000x2000
240	Under Pool	Ground	Soffit	Paint Bubble														300	300						
241	Under Pool	Ground	Soffit	Paint Bubble														300	300						
242	Under Pool	Ground	Soffit	Paint Bubble														1000	1000						
243	Under Pool	Ground	Soffit	Concrete Repair	300	300	30																		
244	Under Pool	Ground	Soffit	Concrete Repair	500	500	30																		
245	Under Pool	Ground	Soffit	Paint Bubble														300	300						
246	Under Pool	Ground	Soffit	Concrete Repair	400	400	30																		
247	Under Pool	Ground	Soffit	Concrete Repair	1000	1000	30																		
248	Under Pool	Ground	Soffit	Concrete Repair	400	200	30																		
249	Under Pool	Ground	Soffit	Concrete Repair	400	200	30																		
250	Under Pool	Ground	Soffit	Paint Bubble														300	300						
251	Under Pool	Ground	Soffit	Concrete Repair	2500	300	30																		
252	Under Pool	Ground	Soffit	Concrete Repair	400	200	30																		
253	Under Pool	Ground	Soffit	Concrete Repair	200	200	30																		
254	Under Pool	Ground	Soffit	Concrete Repair	200	200	30																		

Drop Under Pool - Repair Schedule

Repair No.	Drop	Level	Location	Type	Concrete Repair			Balcony Floor Concrete Repair			Render Repair			Rust Spot	Paint Defect		Crack	Window Caulking	Joint/ Caulking	Rusty Fix	Other - Comment
					L	W	D	L	W	D	L	W	D		L	W					
255	Under Pool	Ground	Soffit	Concrete Repair	100	100	30														
256	Under Pool	Ground	Soffit	Concrete Repair	100	100	30														
257	Under Pool	Ground	Column	Concrete Repair	200	200	30														
258	Under Pool	Ground	Column	Concrete Repair	1000	200	30														
259	Under Pool	Ground	Column	Concrete Repair	100	100	30														
260	Under Pool	Ground	Column	Concrete Repair	300	400	30														
261	Under Pool	Ground	Column	Concrete Repair	200	100	30														
262	Under Pool	Ground	Column	Concrete Repair	500	400	30														
263	Under Pool	Ground	Column	Concrete Repair	300	200	30														
264	Under Pool	Ground	Column	Concrete Repair	600	400	30														
265	Under Pool	Ground	Column	Concrete Repair	400	200	30														
266	Under Pool	Ground	Column	Paint Bubble											300	300					
267	Under Pool	Ground	Column	Drummy							600	400	20								
268	Under Pool	Ground	Column	Drummy							600	200	20								
269	Under Pool	Ground	Column	Drummy							800	100	20								
270	Under Pool	Ground	Column	Drummy							200	100	20								
271	Under Pool	Ground	Column	Rust Spot										1							
272	Under Pool	Ground	Column	Concrete Repair	100	100	30														
273	Under Pool	Ground	Column	Rust Spot										1							
274	Under Pool	Ground	Column	Paint Bubble											100	50					

Drop Under Pool - Photo Schedule

Drop Under Pool Repair 1	Drop Under Pool Repair 2	Drop Under Pool Repair 3	Drop Under Pool Repair 4	Drop Under Pool Repair 5	Drop Under Pool Repair 6
					
Drop Under Pool Repair 7	Drop Under Pool Repair 8	Drop Under Pool Repair 9	Drop Under Pool Repair 10	Drop Under Pool Repair 11	Drop Under Pool Repair 12
					
Drop Under Pool Repair 13	Drop Under Pool Repair 14	Drop Under Pool Repair 15	Drop Under Pool Repair 16a	Drop Under Pool Repair 16b	Drop Under Pool Repair 17a
					
Drop Under Pool Repair 17b	Drop Under Pool Repair 18	Drop Under Pool Repair 19	Drop Under Pool Repair 20	Drop Under Pool Repair 21	Drop Under Pool Repair 22
					
Drop Under Pool Repair 23	Drop Under Pool Repair 24	Drop Under Pool Repair 25	Drop Under Pool Repair 26	Drop Under Pool Repair 27	Drop Under Pool Repair 28
					

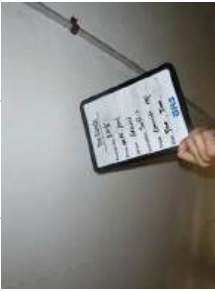
Drop Under Pool - Photo Schedule

Drop Under Pool Repair 29	Drop Under Pool Repair 30	Drop Under Pool Repair 31	Drop Under Pool Repair 32a	Drop Under Pool Repair 33	Drop Under Pool Repair 33b
Drop Under Pool Repair 34	Drop Under Pool Repair 35	Drop Under Pool Repair 36	Drop Under Pool Repair 37	Drop Under Pool Repair 38	Drop Under Pool Repair 39
Drop Under Pool Repair 40	Drop Under Pool Repair 41	Drop Under Pool Repair 42	Drop Under Pool Repair 43a	Drop Under Pool Repair 43b	Drop Under Pool Repair 44a
Drop Under Pool Repair 44b	Drop Under Pool Repair 45a	Drop Under Pool Repair 45b	Drop Under Pool Repair 46a	Drop Under Pool Repair 46b	Drop Under Pool Repair 47a
Drop Under Pool Repair 47b	Drop Under Pool Repair 48a	Drop Under Pool Repair 48b	Drop Under Pool Repair 49a	Drop Under Pool Repair 49b	Drop Under Pool Repair 50a

Drop Under Pool - Photo Schedule

Drop Under Pool Repair 50b	Drop Under Pool Repair 51a	Drop Under Pool Repair 51b	Drop Under Pool Repair 52a	Drop Under Pool Repair 52b	Drop Under Pool Repair 53
					
Drop Under Pool Repair 54	Drop Under Pool Repair 55	Drop Under Pool Repair 56	Drop Under Pool Repair 57	Drop Under Pool Repair 58	Drop Under Pool Repair 59
					
Drop Under Pool Repair 60	Drop Under Pool Repair 192	Drop Under Pool Repair 193	Drop Under Pool Repair 194a	Drop Under Pool Repair 194b	Drop Under Pool Repair 195
					
Drop Under Pool Repair 196a	Drop Under Pool Repair 196b	Drop Under Pool Repair 197	Drop Under Pool Repair 198	Drop Under Pool Repair 199	Drop Under Pool Repair 200
					
Drop Under Pool Repair 201	Drop Under Pool Repair 202	Drop Under Pool Repair 203	Drop Under Pool Repair 204	Drop Under Pool Repair 205	Drop Under Pool Repair 206
					

Drop Under Pool - Photo Schedule

Drop Under Pool Repair 207		Drop Under Pool Repair 208		Drop Under Pool Repair 209		Drop Under Pool Repair 210		Drop Under Pool Repair 211		Drop Under Pool Repair 212	
Drop Under Pool Repair 213		Drop Under Pool Repair 214		Drop Under Pool Repair 215		Drop Under Pool Repair 216		Drop Under Pool Repair 217		Drop Under Pool Repair 218	
Drop Under Pool Repair 219		Drop Under Pool Repair 220		Drop Under Pool Repair 221		Drop Under Pool Repair 222		Drop Under Pool Repair 223		Drop Under Pool Repair 224	
Drop Under Pool Repair 225		Drop Under Pool Repair 226		Drop Under Pool Repair 227		Drop Under Pool Repair 228		Drop Under Pool Repair 229		Drop Under Pool Repair 230	
Drop Under Pool Repair 231		Drop Under Pool Repair 232		Drop Under Pool Repair 233		Drop Under Pool Repair 234		Drop Under Pool Repair 235		Drop Under Pool Repair 236	

Drop Under Pool - Photo Schedule

Drop Under Pool Repair 237		Drop Under Pool Repair 238		Drop Under Pool Repair 239		Drop Under Pool Repair 240		Drop Under Pool Repair 241		Drop Under Pool Repair 242	
Drop Under Pool Repair 243		Drop Under Pool Repair 244		Drop Under Pool Repair 245		Drop Under Pool Repair 246		Drop Under Pool Repair 247		Drop Under Pool Repair 248	
Drop Under Pool Repair 249		Drop Under Pool Repair 250		Drop Under Pool Repair 251		Drop Under Pool Repair 252		Drop Under Pool Repair 253		Drop Under Pool Repair 254	
Drop Under Pool Repair 255		Drop Under Pool Repair 256		Drop Under Pool Repair 257		Drop Under Pool Repair 258		Drop Under Pool Repair 259		Drop Under Pool Repair 260	
Drop Under Pool Repair 261		Drop Under Pool Repair 262		Drop Under Pool Repair 263		Drop Under Pool Repair 264		Drop Under Pool Repair 265		Drop Under Pool Repair 266	

Drop Under Pool - Photo Schedule

Drop Under Pool Repair 267		Drop Under Pool Repair 268		Drop Under Pool Repair 269		Drop Under Pool Repair 270		Drop Under Pool Repair 271		Drop Under Pool Repair 272	
Drop Under Pool Repair 273		Drop Under Pool Repair 274									

“ Building Rectification Services (Est 1985), is a product of a firm commitment to exceeding our customers’ expectations. ”

Offering a complete turnkey solution to building Rectification/Refurbishment, BRS can organise everything from planning and specifying, engineering, project management, trades services



(07) 5539 3588



(07) 5564 5831



admin@buildingrectification.com.au



PO Box 1211 Ashmore City, Qld 4214



www.buildingrectification.com.au